


Instruction Manual



 
Product & Accessories

Cube (121202001 White / 121202002 Black) • Please check if all following items are present and if there is any damage before use.

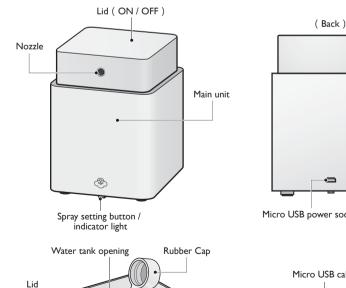








Operating Instructions

• Always place your scent diffuser on a firm, flat, and level surface.

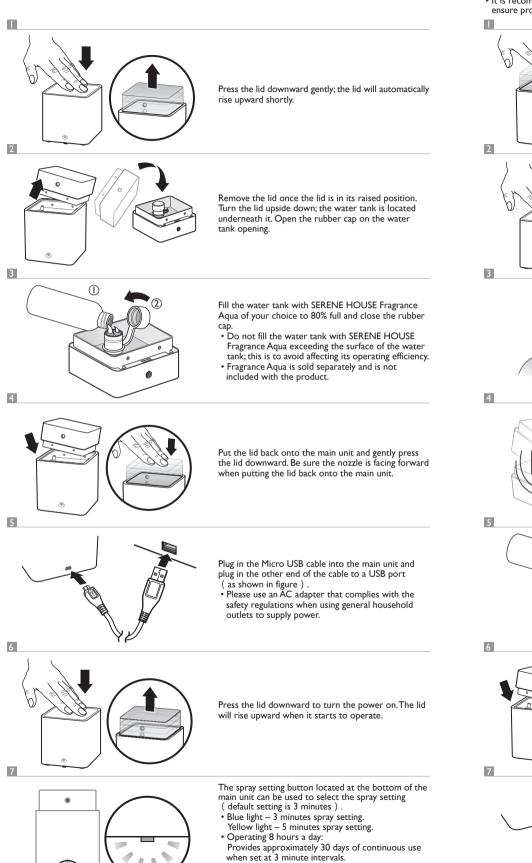

Provides approximately 60 days of continuous use


• Usage days dependent upon spray setting and

when set at a 5 minute intervals.

Fragrance Aqua used.

Cleaning & Maintenance

• Always remove the power cable before cleaning & maintenance. • It is recommended to clean and maintain the unit as soon as the Fragrance Aqua is depleted in order to ensure proper operation of the machine.

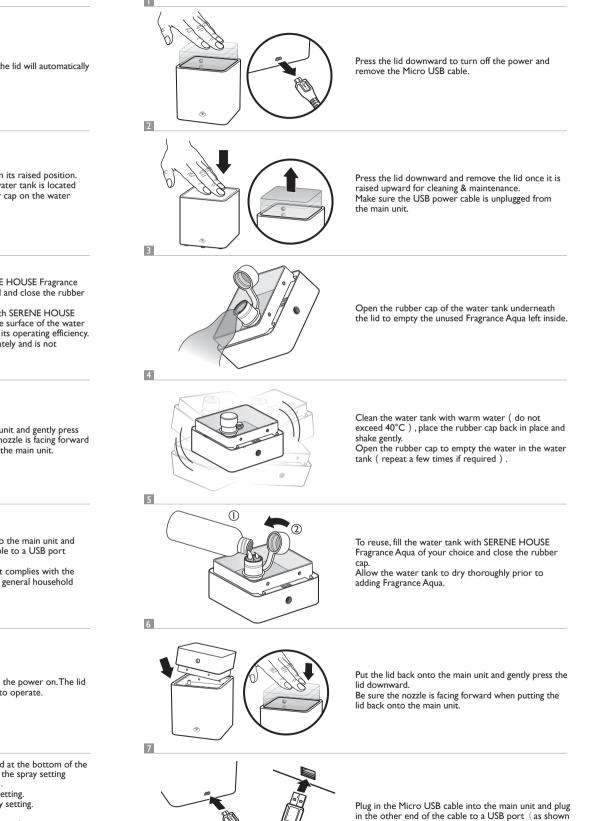

in figure) • Please use an AC adapter that complies with the safety regulations when using general household outlets to supply power.

Safety Precautions

.

For safety, please be sure to comply with following instructions: • The precautions listed in this manual are to ensure safe and proper use of this product by the user, and to avoid any danger or loss that might occur to the user or others.

• "WARNING" contains important safety instructions. Be sure to follow these instructions.

2	• Stop using the product immediately and unplug the power cable once smoke, smell, unusual sounds or other anomalies occur.
Ð	• Do not modify, fix, or dismantle this product, as fire, electric shock, or damage may occur.
X	 When the product is at the end of its life, we recommend disposal at a collection point for th recycling of electrical and electronic equipment, rather than with household waste. The symb on the product, instruction manual and packaging allow for proper sorting and disposal.
9	 KEEP OUT OF REACH OF CHILDREN AND PETS FOR INDOOR USE ONLY Input DC 5V / 500 mA. When this product is not used for a long time or whenever moving the product, make sure to power is turned off, remove the power cable then empty Fragrance Aqua inside the water tar otherwise malfunctions may occur. Never pull on the power cable when removing the cable from main unit as it may cause dama to the product. Please avoid dripping Fragrance Aqua onto the exterior of the product or onto furniture. If dripping accidently occurs, wipe off immediately to avoid damages to the product or furniture. The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or fire risk.
0	 Do not use the product when the power cable or plug is damaged as it may cause the product or short-circuit or malfunction. Do not use the product when it has been accidently dropped, hit, or broken as this may cause the product to short-circuit or malfunction. Do not allow children to use this product on their own; place it out of reach of children or e it may cause injury. Children should be supervised to ensure that they cannot touch the mack Do not deliberately place your eyes, nose or mouth close to the fragrance mist emitted as the may cause physical discomfort. Do not place this product on soft surfaces such as carpets. This product is not suitable for use by persons with reduced physical, sensory or mental capabilities unless they have been given supervision or instruction concerning use of the proceed by a person responsible for their safety. To avoid fire, electric shock, injury or damage, do not place the product in the areas listed below : * In direct sunlight or next to a heating apparatus * In dustable or uneven surfaces * Places full of smoke or next to gas stoves * Places with an ambient temperature of more than 40°C; keep the product away from source of ignition. * On top of or next to electrics (TVs, stereos, refrigerators, etc.) Do not bend, heat, or place heavy objects on the power cord as fire or malfunction may occur.

Please read all instructions before using the product. Use it safely and correctly.
Read the "Operating Instructions" section of this manual for correct operation; malfunctions may occur due to improper use.

Make sure to read and follow the "Cleaning & Maintenance" instructions in this manual for cleaning and maintenance; improper maintenance may cause malfunctions.

Do not use this product when there is no Fragrance Aqua added into it.

• Do not clean the nozzle with sharp or hard objects in order to avoid damage.

Precautions for the use of SERENE HOUSE Fragrance Aqua

In order to achieve its best scenting effect, pair the SERENE HOUSE Fragrance Aqua (a special formulated fragrance) with this product.

- Fragrance Aqua is sold separately and is not included with the product.
- Children and pets are very sensitive to fragrances, always use with caution.
- Stop using the product and open the windows for ventilation if you start to feel uncomfortable.

REACH

Please select a suitable spray setting according to personal preference.
 If you have any special physical conditions, such as pregnancy, lung failure, cancer, epilepsy, or other illnesses,

RoHS

compliant

FC

please consult your doctor before using Fragrance Aqua.

Specifications

Product name	Cube		
Model code	121202001 White / 121202002 Black		
Ultrasonic frequency (KHz)	107 ± 5 %		
Continuous atomization time	Automatically powers off every 4 hours	Test results may vary depending on ventilation, temperature, humidity, and	
Suggested room size	10 ~ 15 m ² (107.6 ~ 161.4 ft ²)		
Tank capacity	70 ml(2.37 fl. oz.)	height of space.	
Power input	DC5V / 500 mA		
Product size	10 cm L x 10 cm W x 10.4 cm H (3.94 in L x 3.94 in W x 4.09 in H)		
Main unit weight	405 g (14.3 oz)		
Operation mode	Spray default settings is 3 minutes / 5 minutes		
Indicator light	Blue light - once every 3 minutes Yellow light - once every 5 minutes		
Accessories included	Micro USB cable, warranty card.		
Design	Taiwan		
Made in China	·		

Patent Product

Troubleshooting

If you experienced unsatisfactory operations, please follow our troubleshooting guidelines listed below.

Machine does not operate

- ullet The water tank is not in the right position
- \rightarrow Please confirm whether the water tank is properly placed. Please refer to Operating Instructions Step 4.
- The Micro USB power cable is not properly connected to the power socket on the main unit.
- ightarrow Please confirm whether the power cable is properly connected to the main unit's power socket.

It will not spray

- → Please make sure Fragrance Aqua is added into the water tank. If the product has not been used for a long period of time, wipe the nozzle with a damp soft cloth or cotton swabs. Do not clean the nozzle with sharp or hard objects in order to avoid damage.
- → When there is liquid residues forming at the spray nozzle, please clean it off with a soft cloth and check whether there is excessive Fragrance Aqua; it is recommended to fill the water tank with Fragrance Aqua up to about 80% full and do not exceed the surface of the water tank.

• Used other brand of fragrance

→ Please use SERENE HOUSE Fragrance Aqua; this is a special formulated fragrance made exclusively for the Cube.

• Using an AC adapter that does not comply with the safety regulations

 \rightarrow Please use an AC adapter that complies with your local safety regulati

Poor fragrance effects

Nozzle blockage

→ Wipe the nozzle with a damp soft cloth or cotton swabs. Do not clean the nozzle with sharp or hard objects in order to avoid damage.

• Placement of the product

 \rightarrow Avoid placing the product at low locations and always use it on a firm surface in a place with low air flow.

Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please visit our website <u>www.serenehouse.com</u>, and click link "Support", or contact our customer service.