



www.serenehouse.com

00020150320

SERENE  HOUSE[®]

Instruction Manual



Serene Pod[®] Wall Plug Wax Warmer
Grail • Torch

US

Table of Contents

EN Instruction Manual 03

Torch / Grail Serene Pod® Wall Plug Wax Warmer

Serene Pod® Wax Warmer **04** / Product & Accessories **05**

Operating Instructions **06** / Maintenance **07** / Safety Precautions **08**

Troubleshooting **10** / Specifications **11**

IMPORTANT SAFETY INSTRUCTIONS
INSTRUCTION PERTAINING TO A RISK OF FIRE,
ELECTRIC SHOCK OR INJURY TO PERSONS



WARNING

When using electric products, basic precautions should always be followed, including the following:

- A.** Read all instructions before using the product.
- B.** Do not put fingers or hands into the product.
- C.** To reduce risk of injury, close supervision is necessary when used near children.
- D.** Do not use the appliance when the power plug was damaged.
- E.** Failure to follow instructions could result in a fire hazard. The appliance is only to be used with the Serene Pod®. The use of other substances may give rise to a toxic or fire risk. Do not immerse this appliance in water. This appliance is for household use only.
- F.** This Wax Warmer has a polarized plug (one blade is wider than the other) as a safety feature. This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

FOR ADULT USE ONLY. THIS IS NOT A TOY AND IS NOT INTENDED FOR USE BY CHILDREN. KEEP OUT OF REACH OF CHILDREN.

English

03

Please read this manual carefully before using the product. After reading this manual, please keep it in a readily accessible place.

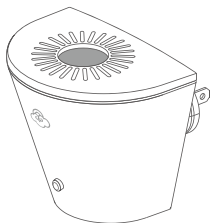 
Serene Pod® Wall Plug Wax Warmer

- This instruction is suitable for both Torch and Grail.



Torch

Torch is a wax warmer that can simply be plugged into any electrical socket without cables. It is the perfect scent-maker for smaller rooms such as bathroom or dressing room.

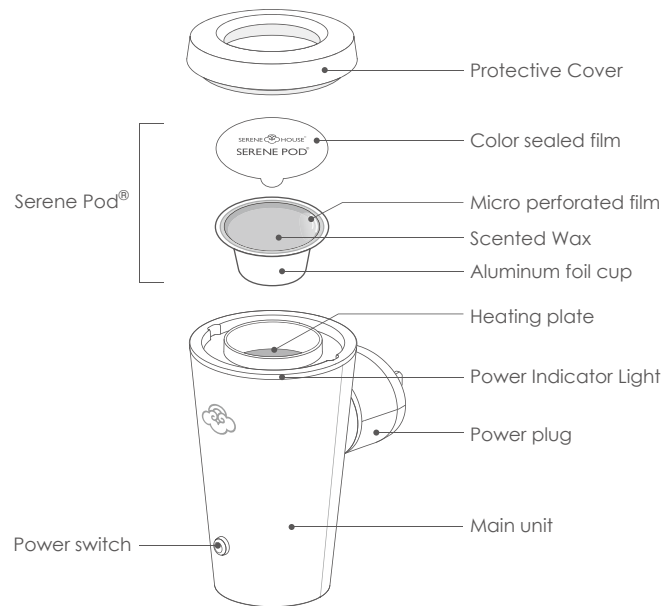 


Grail

Put in a Serene Pod® that suits your mood, plug the device into the socket and let the scent spread in the air – enjoy pure simplicity and functionality.


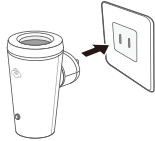 


Product & Accessories

- Serene Pod® is required to be used with this product. Serene Pod® is sold separately.



Operating Instructions

- Please remove all packaging before use.

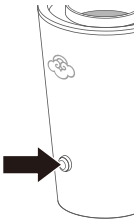 

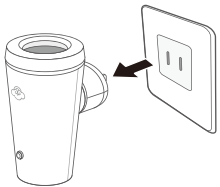 

<p>1</p>  <p>Peel away the color film seal only on the Serene Pod®. Do not remove the transparent micro perforated film on the inner layer.</p>	<p>3</p>  <p>Plug the unit into a power outlet.</p>
<p>2</p>  <p>Properly place the Serene Pod® inside the heating plate and close the cover securely.</p>	<p>4</p>  <p>Turn on the power switch.</p>

Caution:

1. Only Serene Pod® from SERENE HOUSE can be used with this product; do not heat liquids or other objects in the heating plate.
2. Serene Pod® can be heated repeatedly. If the scent fades or the diffusing performance drops, please consider replacing the Serene Pod®. The Serene Pod® is a consumable item; please contact your local retailer for purchase.
3. Do not move or touch when this product is in use. Allow the wax inside Serene Pod® to cool thoroughly into a solid form before handling the device or Serene Pod®.
4. Please switch off the power when the product is not in use.

Maintenance

- Always unplug the product from its power source prior to maintenance.
- Never soak or wash this product directly as it may cause mechanical malfunction or danger.
- Never use acidic cleansing agents as it may cause malfunction to the product.
- Please perform maintenance at least once a week; failing to do so may cause the product to malfunction. Please maintain it on a regular basis.
- Allow to dry thoroughly before use.

<p>1</p>  <p>Turn off the power switch.</p>	<p>3</p>  <p>Open the protective cover and remove the Serene Pod® from the heating plate.</p>
<p>2</p>  <p>Unplug this product from the power outlet.</p>	<p>4</p>  <p>Please use a damp cloth moistened with warm water and neutral cleaning agents to clean the heating plate until it is clean. Place the Serene Pod® back onto the heating plate and tighten the top cover. This completes the maintenance process.</p>

Precautions for Use

- Please read all instructions before using the product. Use it safely and correctly.
- Be sure to handle this product with care to avoid impacts or drops.
- If you have any special physical conditions, such as pregnancy, lung failure, cancer, epilepsy, or other illnesses, please consult your doctor before use.

Precautions for Use of Serene Pod®

- Do not remove or damage the transparent micro perforated film of the Serene Pod® in order to avoid spillage of melted scented wax.
- Please do not touch Serene Pod® when it is being heated to avoid accidental burns.
- Please keep children and pets away from Serene Pod® to prevent accidental ingestion.
- Serene Pod® is not edible; please do not eat it.
- Stop using the product and open the windows for ventilation if you start to feel uncomfortable.
- Replace with a new Serene Pod® to ensure best scent ability if the aluminum foil cup of Serene Pod® is deformed in any way (including the bottom). Serene Pod is •
- made with recyclable material.

Safety Precautions

Make sure to follow the instructions below to ensure safe usage:

- The precautions listed in this manual are to ensure safe and proper use of this product by the user, and to avoid any danger or loss that might occur to the user or others.
- "WARNING" contains important safety instructions. Be sure to follow these instructions.



- Stop using the product immediately and unplug the AC adapter once smoke, smell, unusual sounds or other anomalies occur.



- Do not modify, fix, or dismantle this product, as fire, electric shock, damage or injuries may occur.



- When the product is at the end of its life, we recommend disposal at a collection point for the recycling of electrical and electronic equipment, rather than with household waste. The symbols on the product, instruction manual and packaging allow for proper sorting and disposal.



- Please use the proper voltage as required by the product.
- When this product remains unused for a long period of time, please unplug it from the power source and remove Serene Pod® from the heating plate. Otherwise electric shock or malfunction may occur.
- The product must be disconnected from the power source before performing cleaning and maintenance.
- Once all power sources are disconnected, allow Serene Pod® to cool thoroughly into a solid form before handling, cleaning and maintenance.
- If the liquid wax accidentally dripped onto objects such as the device or the floor, wipe clean with a damp cloth immediately to avoid discoloration of the exterior of the product or the furniture.



- Do not use the product when cord or plug is damaged or the product has been accidentally hit, dropped, broken or damaged in any way as such actions may cause problems such as electrical shocks or short circuiting.
- Do not operate this product with wet hands, or allow water or other liquids to drip or spill onto the product as these may cause electric shock or injuries.
- Do not power on the device when there is no Serene Pod® in the heating plate, doing so may cause the product to malfunction.
- Do not put your finger or any other objects into the heating plate while the product is in use, doing so may cause personal injuries or product malfunction.
- This product is not a toy. Do not let children use this product. Keep out of reach of children as electric shock and injury may occur. Children should be supervised to ensure that they do not play with the product.
- To avoid fire, electric shock, personal injuries or product damage, do not place the product in the areas listed below :
 - Under direct sunlight or high temperature environments, and keep away from fire sources
 - Places with high pressures or around combustible objects.

Troubleshooting

When the product is suspected of malfunctioning, please confirm the following items before sending it in for maintenance :

Machine does not operate

- Plug is not properly inserted into the power source
→ Please make sure that plug is properly inserted into the power source.
- The power switch is not properly switched on
→ Please check and make sure the power switch is properly switched on.

Poor Fragrance Emission

- The scent fades or the transparent micro perforated film is damaged
→ Please replace the Serene Pod® with a new one.
- The heating plate is dirty
→ Perform maintenance according to the Maintenance section of this manual.

Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please visit our website www.serenehouse.com, and click link "Support", or contact our customer service.

Specifications

- Fragrance results may vary depending on ventilation, temperature, humidity, and the size of space.

Torch

Model code:	121208016 White
Power input:	AC 120 V , 60 Hz , 5 W
Product size:	10.3 cm L x 5.6 cm W x 9.6 cm H (4.0 in L x 2.2 in W x 3.8 in H)
Main unit weight:	125 g ± 5 % (4.4 oz)
Operation mode:	Thermal Controlled Heating
Accessories included:	Warranty card
Designer:	Peter Wirz
Design:	Switzerland
Made in China	

Grail

Model code:	121208011 White
Power input:	AC 120 V , 60 Hz , 5 W
Product size:	11.8 cm L x 9.2 cm W x 8.3 cm H (4.6 in L x 3.6 in W x 3.3 in H)
Main unit weight:	159 g ± 5 % (5.6 oz)
Operation mode:	Thermal Controlled Heating
Accessories included:	Warranty card
Designer:	Peter Wirz
Design:	Switzerland
Made in China	



Patented Product