




### Aroma Diffuser ( With Intermittent Mode )

#### Instruction Manual

### Product & Accessories

- Please check to ensure the following items are present and inspect for damage before use.
- ① Mist Nozzle    ② Cover    ③ Control panel    ④ Timer indicator    ⑤ Power (ON / OFF)
- ⑥ Light button    ⑦ Main unit    ⑧-A Power jack - 90mm (90ml) diffusers (small models)
- ⑧-B Power jack - 125mm(130ml)    ⑨ Lid    ⑩ Vent    ⑪ Atomizer
- ⑫ Water tank    ⑬ MAX - water mark level    ⑭ AC adapter    ⑮ Ventilation inlet

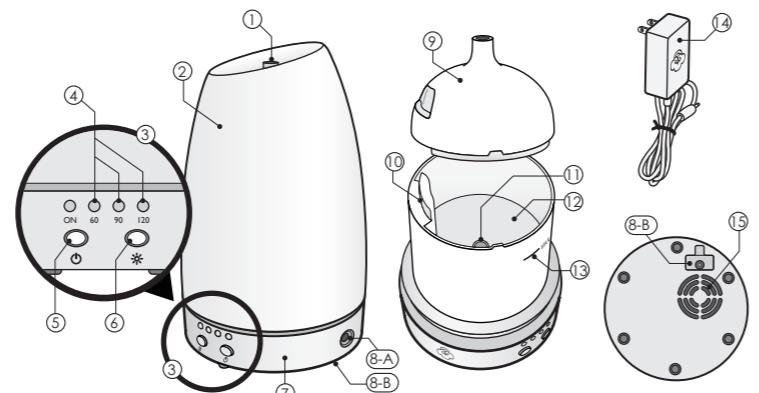

( The image is for reference only. Actual product may vary. )




### 香氛霧化機 (連續 / 間歇功能)

#### 操作使用說明書

### 產品與配件介紹

- 使用前，請確認以下物品是否齊全，有無破損情況。
- ① 噴霧口    ② 上蓋    ③ 控制面板    ④ 時間模式指示燈
- ⑤ 電源開關 / 電源指示燈    ⑥ 燈光模式設定鍵    ⑦ 主體    ⑧-A 電源孔-90mm(90ml)香氛霧化機
- ⑧-B 電源孔 - 125mm(130ml)香氛霧化機    ⑨ 水槽上蓋    ⑩ 出風口
- ⑪ 霧化器    ⑫ 水槽    ⑬ 最高水位線 - MAX    ⑭ 變壓器電源線
- ⑮ 進氣口

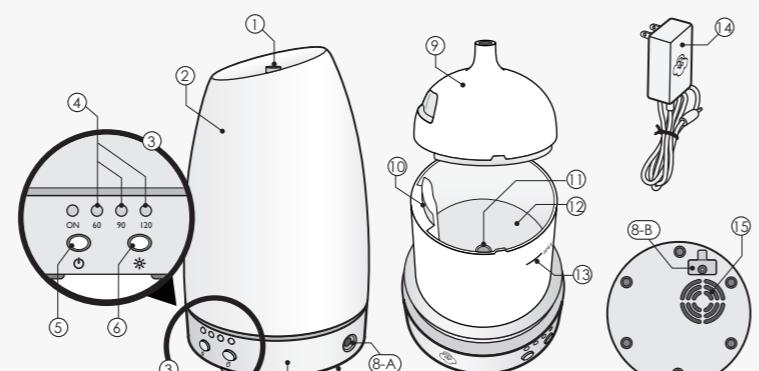

( 圖片僅供參考，請以實品為主 )




### 香氛霧化机 (连续 / 间歇功能)

#### 操作使用说明书

### 产品与配件介绍


- 使用前，请确认以下物品是否齐全，有无破损情况。
- ① 喷雾口    ② 上盖    ③ 控制台    ④ 时间模式指示灯
- ⑤ 电源开关 / 电源指示灯    ⑥ 灯光模式设定键    ⑦ 主体    ⑧-A 电源孔-90mm(90ml)香氛雾化机
- ⑧-B 电源孔 - 125mm(130ml)香氛雾化机    ⑨ 水槽上盖    ⑩ 出风口
- ⑪ 雾化器    ⑫ 水槽    ⑬ 最高水位线 - MAX    ⑭ 适配器电源线
- ⑮ 进气口

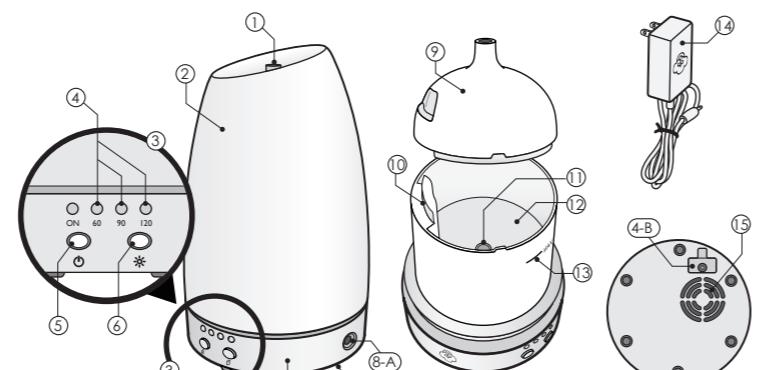

( 图片仅供参考，请以实物为准。 )

### Operating Instructions

- Always place your aroma diffuser on a firm, flat and level surface.
- Condensation may occur around the aroma diffuser when operating in high humidity environment.

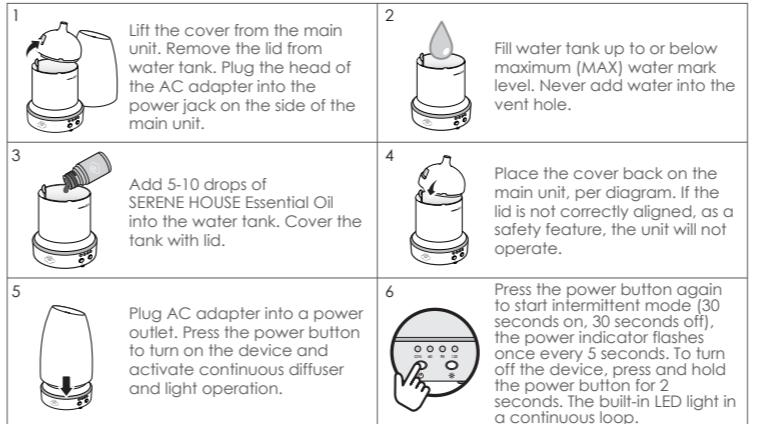

- Please read all instructions before using the product. Use it safely and correctly.
- Please use water with a temperature of 25 °C ~ 40 °C (77°F~104°F); if using water below 5 °C/41°F, the diffuser starts longer.
- Never allow water or oil to enter the vent.
- If the lid and cover are not properly covered, the water in the water tank may not be effectively atomized.
- Do not move or tip the device when it is in operation and there is water or oil in the tank.
- For safety purposes, the diffuser is programmed to stop operating automatically when it detects the water is below its programmed level.
- Please empty the water in the water tank and follow step 1 to 6 when reusing this device. For proper handling and maintenance, please refer to the Cleaning & Maintenance section in this manual.

### 使用說明與相關注意事項

- 請在穩固、平坦、水平的地方使用本產品。
- 若室內環境濕度較高，在使用香氛霧化機時，易在機器周圍產生水氣。



- 使用本產品前，請仔細閱讀本說明書，若使用方法不當可能引起機器故障。
- 請使用溫度 25°C ~ 40°C 的水；如使用低於 5°C 的水，香氛霧化機啟動所需的時間較久，此為正常情況。
- 切勿從任何風口加入水和精油。
- 若未確實蓋緊水槽上蓋和上蓋，可能導致機器無法霧化或霧化效果不佳。
- 機器運作時，請勿移動、傾斜或傾倒主體。
- 如遇水量不足，機器將會自動斷電。
- 再次使用時，如水槽內仍有殘餘水分，請將水槽內的水倒掉後重複 1 ~ 6 步驟，並請務必進行定期保養（請見本說明書「清潔保養」）。若保養方法不當有可能引起機器故障。

### 使用说明与相关注意事项


- 请在稳固、平坦、水平的地方使用本产品。
- 若室内环境湿度较高，在使用香氛雾化机时，易在机器周围产生水气。



- 使用本产品前，请仔细阅读本说明书，若使用方法不当可能引起机器故障。
- 请使用温度 25°C ~ 40°C 的水；如使用低于 5°C 的水，香氛雾化机启动所需的时间较久，此为正常情况。
- 切勿从任何风口加入水和精油。
- 若未确保盖紧水槽上盖和上盖，可能导致机器无法雾化或雾化效果不佳。
- 机器运作时，请勿移动、倾斜或倾倒主体。
- 如遇水量不足，机器将会自动断电。
- 再次使用时，如水槽内仍有残余水分，请将水槽内的水倒掉后重复 1 ~ 6 步骤，并请务必进行定期保养（请见本说明书「清洁保养」），若保养方法不当有可能引起机器故障。

### Light Instructions

- Device will automatically cycle through 7 color LED pattern (warm white, green, blue, red, yellow, purple, and light white) when it is turned on.
- To select a single color, press the light button until you reach your desired color.
- To switch off the light, keep pressing the light button. At the end of the 7 color cycle, the light will turn off.

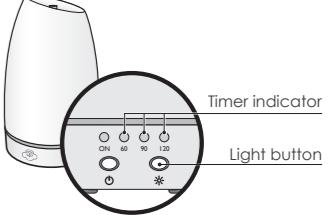

### Timer Instructions


- Press the power button once to turn on diffuser and begin continuous operation. Continuous mode will be indicated by a solid power button.
- Press the power button twice to activate intermittent mode (30 seconds on, 30 seconds off). The power indicator flashes once every 5 seconds.
- Press the power button again for 60, 90, or 120 minutes continuous operation. The power light will move to each setting.
- Press the button the sixth time to turn the machine off.

### Cleaning & Maintenance

- Always disconnect the AC adapter from the electrical outlet before cleaning.
- For best atomizing performance, be sure to clean the aroma diffuser after each use.
- Remove the lid, empty the water from the tank, add a small amount of warm water (do not exceed 40°C/104°F), and a few drops of neutral cleanser. Use a cotton swab to clean the atomizer and internal surface of the water tank. Gently rinse all the soap out of the water tank after washing.
- Never use acidic cleaners as this may cause malfunction.
- Be careful to not allow water to enter the vent, the ventilation inlet and the buttons.
- If water accidentally flows into the ventilation inlet, vent or control buttons, allow internal mechanism to dry thoroughly (at least 6 hours) before the next use, otherwise this may cause the device to malfunction.

### 燈光模式設定

- 按下電源開關，機器將自動循環七彩情境燈。
- 內建可定色的七彩情境燈效果：暖白光、綠光、藍光、紅光、黃光、紫光、白光。
- 七彩情境燈要切換為單色情境燈，請按壓燈光模式設定鍵即可。
- 使用中如欲關閉情境燈，請長按燈光模式設定鍵，或重複按壓燈光模式設定鍵至七彩情境燈輪替顯示完畢為止。

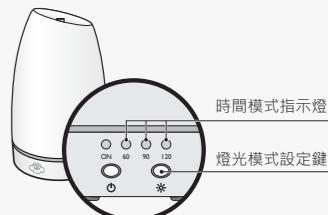

### 時間模式設定


- 按第一下電源開關，啟動連續霧化模式（時間模式指示燈未亮）。
- 按第二下電源開關，啟動間歇霧化模式（30秒開30秒關，重複循環，時間模式指示燈未亮）。
- 按第三下電源開關，定時60分鐘。（60時間模式指示燈亮）。
- 按第四下電源開關，定時90分鐘。（90時間模式指示燈亮）。
- 按第五下電源開關，定時120分鐘。（120時間模式指示燈亮）。
- 按第六下電源開關，機器隨即關閉。

### 清潔保養

- 在清潔保養之前，電器必須切斷電源，務必拔除變壓器及移除主體上的變壓器電源線接頭。
- 建議每次使用完畢即進行清潔保養，以確保機器正常運作。
- 於水槽內加入適量溫水（水溫勿超過40°C）並滴入少許中性清潔劑，使用乾淨棉棒輕拭水槽內部及霧化器表面，待清洗完畢後以乾淨的布將機器擦乾即可。
- 請勿使用酸性清潔劑，否則有可能導致機器損壞。
- 請慎防進氣口、出風口或按鍵開關部位進水導致機器故障。
- 若水不慎進入機器主體，請靜置至少6小時，待機器完全乾燥後，方可使用。

### 灯光模式設定

- 按下电源开关，机器将自动循环七彩情境灯。
- 内建可定色的七彩情境灯效果：暖白光、绿光、蓝光、红光、黄光、紫光、白光。
- 七彩情境灯要切换为单色情境灯，请按压灯光模式设定键即可。
- 使用中如欲关闭情境灯，请长按灯光模式设定键，或重复按压灯光模式设定键至七彩情境灯轮替显示完毕为止。

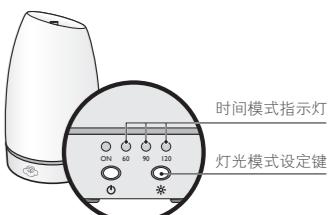

### 时间模式设定

- 按第一下电源开关，启动连续雾化模式（时间模式指示灯未亮）。
- 按第二下电源开关，启动间歇雾化模式（30秒开30秒关，重复循环，时间模式指示灯未亮）。
- 按第三下电源开关，定时60分钟。（60时间模式指示灯亮）。
- 按第四下电源开关，定时90分钟。（90时间模式指示灯亮）。
- 按第五下电源开关，定时120分钟。（120时间模式指示灯亮）。
- 按第六下电源开关，机器随即关闭。

### 清洁保养

- 在清洁保养之前，电器必须切断电源，务必拔除适配器及移除主体上的适配器电源线接头。
- 建议每次使用完毕即进行清洁保养，以确保机器正常运行。
- 于水槽内加入适量温水（水温不超过40°C）并滴入少许中性清洁剂，使用干净棉棒轻拭水槽内部及雾化器表面，待清洗完毕后以干净的布将机器擦干即可。
- 请勿使用酸性清洁剂，否则有可能导致机器损坏。
- 请慎防进气口、出风口或按键开关部位进水导致机器故障。
- 若水不慎进入机器主体，请静置至少6小时，待机器完全干燥后，方可使用。

## Precautions before use

- This product is manufactured using the ultrasonic atomization principle, and while it does add slight humidity to the air, its primary purpose is as a fragrance diffuser.
- Never connect the power without placing the lid and cover on the unit.
- Do not remove the lid or block the ventilation inlet under the main unit during usage.
- When the device is in operation and there is water in water tank, do not touch the atomizer as personal injury or device malfunction may occur.
- After each use, make sure to pour out any remaining water in the tank.
- Make sure to wipe clean with a cloth if oil drips on the main unit or floor.
- Soft water is best for your Serene House diffuser. You may also use bottled or mineral water.
- It is important not use steamed distilled water, as this water had the minerals removed from the water that affects the operation of the diffusers.
- Reverse osmosis (RO) water also has less minerals in the water and the diffuser will not be able to diffuse the mist properly and the desired results will not be achieved.
- Hard water is also not recommended. This would require that the oscillator be cleaned every time after use when using hard water, because the calcium carbonate from hard water will pile. Also, hard water is too heavy for oscillator to diffuse mist.

## Notes on the use of oils

- For best performance of this Aroma diffuser, we recommend using essential oil from SERENE HOUSE.
- Essential oils are highly concentrated oils. Use with caution. Do not spill the oils as they may damage plastic objects and furniture. If essential oil drops on the surface of this machine or other objects or on the floor, please clean by cloth immediately.
- Children and pets are very sensitive to essential oil that is undiluted. Use with caution.
- Stop using the product and open the windows for ventilation. If you have difficulty breathing due to allergic reaction or any special physical conditions, such as pregnancy, lung failure, cancer, epilepsy or other illnesses, please consult your doctor before using essential oils.

## Safety Precautions

- In order to prevent any accidents happening, must follow the instructions below as you are using this product:
- The instructions of this manual are for users applying this product correctly, and preventing damage or property loss to users or others.
  - "WARNING" is central contents for preventing any accidents happening, please follow cautiously.

## 使用注意事项

- 本产品使用超音波震荡雾化原理达到扩香效果，虽未达加湿机标准，但可降低环境乾燥度。  
請勿在未裝水槽上蓋與上蓋的情況下將電源接通。
- 運轉過程中，請勿取下上蓋，或者堵塞主體下方風扇進氣口。
- 在機器運動過程中，且水槽內有水時，請勿在電源尚未關閉前打開上蓋，或將手放到水槽內。否則有可能造成機器漏水、故障或受傷。
- 水槽內殘留的水如果超過24小時，請務必倒掉並進行清潔保養步驟。
- 精油若不慎滴到水槽外側或地板等周圍物體上，請立即用布擦拭乾淨。
- SERENE HOUSE 香氛霧化機水质建議：請使用軟水或礦泉水，不建議使用其他液體。
- 請注意不要使用蒸餾水或純水，因水中礦物質已被過濾，將影響機器霧化效果，不易產生霧氣。
- 逆滲透(RO)水也只含微量礦物質，會造成機器霧化效果不佳，不易產生霧氣。
- 不建議使用硬水，因硬水的碳酸鈣會沉澱堆積，每次使用完後都必須清理震盪霧化器。此外硬水分子太重，無法有效產生霧化效果。

## 精油使用注意事项

- 建議使用 SERENE HOUSE 精油；切勿使用含有香水、香精或含雜質的精油，以免傷害霧化器裝置。
- 精油屬於濃縮的高純度油，有可能溶解塑料或傢俱塗裝，若不慎沾附於產品外側或傢俱上，請立即擦拭，避免產品外觀或傢俱褪色，使用時請特別小心。
- 幼童與寵物對香味非常敏感，在密閉空間內使用時請特別小心，及避免誤食。
- 使用期間如感覺不舒服或身體不適時，請立即停止使用，並打開窗戶使空氣流通。如您有任何身體上的特殊狀況，例如懷孕、肺衰竭、癌症或癲癇等症狀，使用精油前建議請先諮詢您的醫師。

## 注意事項

- 為了預防使用時發生意外，請務必遵守以下事項：
- 本使用說明書的注意事項，是為了讓使用者能正確的使用本產品，防止對使用者或他人造成危害及財產損失。
  - 警告事項皆為預防意外發生的重要內容，請務必遵守。

## 警告

- 萬一出現冒煙、異味、雜音等異常現象時，仍繼續使用的話，可能導致火災、觸電等，請立即將電源移除，停止使用。

## 使用注意事项

- 本产品使用超音波震荡雾化原理达到扩香效果，虽未达加湿机标准，但可降低环境乾燥度。  
請勿在未裝水槽上蓋與上蓋的情況下將電源接通。
- 運轉過程中，請勿取下上蓋，或者堵塞主體下方風扇進氣口。
- 在機器運動過程中，且水槽內有水時，請勿在電源尚未關閉前打開上蓋，或將手放到水槽內。否則有可能造成機器漏水，故障或受傷。
- 水槽內殘留的水如果超過24小時，請務必倒掉並進行清潔保養步驟。
- 精油若不慎滴到水槽外側或地板等周圍物體上，請立即用布擦拭乾淨。
- SERENE HOUSE 香氛霧化機水质建議：請使用軟水或礦泉水，不建議使用其他液體。
- 請注意不要使用蒸餾水或純水，因水中礦物質已被過濾，將影響機器霧化效果，不易產生霧氣。
- 逆滲透(RO)水也只含微量礦物質，會造成機器霧化效果不佳，不易產生霧氣。
- 不建議使用硬水，因硬水的碳酸鈣會沉澱堆積，每次使用完後都必須清理震盪霧化器。此外硬水分子太重，無法有效產生霧化效果。

## 精油使用注意事项

- 建议使用 SERENE HOUSE 精油；切勿使用含有香水、香精或含杂质的精油，以免伤害雾化器装置。
- 精油属于浓缩的高纯度油，有可能溶解塑料或家具涂装，若不慎沾附于产品外侧或家具上，请立即擦拭，避免产品外观或家具褪色，使用时请特别小心。
- 幼童与宠物对香味非常敏感，在密闭空间内使用时请特别小心，及避免误食。
- 使用期间如感觉不舒服或身体不适时，请立即停止使用，并打开窗户使空气流通。如您有任何身体上的特殊状况，例如怀孕、肺衰竭、癌症或癫痫等症状，使用精油前建议请先咨询您的医师。

## 注意事项

- 为了预防使用时发生意外，请务必遵守以下事项：
- 本使用说明书的注意事项，是为了让使用者能正确的使用本产品，防止对使用者或他人造成危害及财产损失。
  - 警告事项皆为预防意外发生的重要内容，请务必遵守。

## 警告

- 万—出现冒烟、异味、杂音等异常现象时，仍继续使用的话，可能导致火灾、触电等，请立即

## WARNING

- Stop using the product immediately and unplug once smoke, smell, noise, or other unusual situations appear; it is very possible to cause fire hazard or electric shock, if the product operates continuously.
- Do not alter, repair or dismantle this product on your own, it may cause fire hazard, electric shock, malfunction or injury.
- Please follow local regulations when you are discarding consumables.
- Please use a DC 24V / 500mA adapter, otherwise the device may malfunction.
- The AC adapter will heat up when the product is operating and it is normal.
- Only the included AC adapter may be used with the product, using other AC adapter may result in fire.
- Do not connect the power during installation, as electric shock and injury may occur.
- The product should always be unplugged and the water tank should always be empty when moving the product or when the product is not in operation.
- When unplugging the AC adapter from the outlet, do not pull on the wire. Hold the AC adapter firmly and then unplug it, or else damage or injury may occur.

- If power cord or plug is damaged, or the product is dropped, hit, damaged, or broken, stop using it, this is possible to cause electric shocks or short circuit.
- Do not operate this product with wet hands, or drip or spill water or other liquids onto the product. These may cause electric shock or injuries.
- Do not deliberately place your eyes, nose or mouth close to the fragrance mist emitted as this may cause physical discomfort.
- Do not put fingers or hands into the product.
- In order to avoid any danger or accidents, parents guard is necessary when children use this product.
- Please follow the instructions to use this product; it is possible to result in poisoning or fire hazard, if other substances are used. Do not immerse this product in water, this product is for household use only.
- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible.
- Do not let children use this product alone, keep it out of reach of children, or it may cause electric shocks or injuries.
- To avoid fire hazard, electric shocks, injuries or malfunction, please do not keep this product in the following places:
  - Under direct sunlight or high temperature environments, and keep away from fire sources.
  - Places with high pressure or flammable materials.
- Do not place the product on soft surfaces such as carpet, as this may block the ventilation inlet on the bottom of the unit, causing the device to not function correctly.

- Do not over bend, heat, or place heavy objects on the power cord, or it may cause fire hazard or malfunction.
- If an extension cord is used, please pay attention to the introductions to electric appliances using. The specifications should be the same. The cord should be placed at evident places to avoid children pulling or stumbling.
- In order to prevent accidents happening, if the power cord is damaged, please replace it via the manufacturer, other service departments, or staffs who own related qualifications.

## Troubleshooting

When the product is broken-down, please confirm the following items before sending it for maintenance:

### Machine does not operate

- Check the adapter  
→ Make sure the adapter is fully and correctly plugged into the electrical outlet.
- Power cord not connected to the main unit  
→ Be sure plug is correctly inserted into the power jack on the main unit .
- The power is correctly connected but the device still does not operate  
→ Check whether the water tank contains any water and then recheck that the ON/OFF switch is on. Check that the water level in the tank does not exceed the maximum water level line (MAX); if this is the case, empty out the excess water.

### The product does not atomize or does not atomize effectively

- The water temperature is too low  
→ Please use tap water or mineral water at a temperature 25 °C~ 40 °C(77°F~104°F).
- Use hard water or steamed distilled water  
→ Please use tap water or mineral water (The calcium carbonate from a real hard water will pile, please filter the water before using).
- Dirty atomizer  
→ Perform maintenance according to the 'Cleaning & Maintenance' section of this manual.
- Placement of the product  
→ Place on a firm, level, and stable surface as well as in light wind place .
- Check the water volume  
→ Make sure the water does not exceed its designated water mark level (MAX) , or drain the excess water.
- The lid does not attach securely to the main unit  
→ Reattach the lid according to the procedure in the 'Operating Instructions' section of this manual.

### Please refer to the actual product specification indicated on the package.

Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop.  
Service Line: +86 2 7721 8848

## Warranty Card

SERENE HOUSE is providing 1 Year Warranty Service, please keep this Warranty card properly (Will not reuse one another if missing), or you can register your product's warranty on our website to guarantee your product's warranty rights.

- Customer should follow the instruction to use the product, if the product is malfunction during Warranty Period, please keep your Warranty card and Receipt, to apply for maintenance services, we will repair or replace a new one for you.
- Under these situations, there will be additional charge even though it is in Warranty Period.
  - Fire Hazard, Broken, Gas explosion, Earthquake, Windstorm, Flood, Thunder, Abnormal Voltage, Natural disasters or Force Majeure that cause product to breakage or malfunction.
  - Content of Warranty Card is incomplete, alters, or not able to provide a valid purchase evidence.
  - Discolor, scars, stains and improper keeping that cause product to malfunction.
  - Replacement consumable accessories (batteries, remote control, cleansing brush)
- When you need your product to be repaired, please register from website or contact to local distributor, we will contact you as soon as possible.

Maintenance Request Form→<https://www.serenehouse.tw/forms/repair-application>

Customer Info			
Name	Mr / Mrs	Phone	
Address			
E-mail			
Product Info			
Name			
Model			
Manufacturer Code			
Retailer			
Purchase Date	Y	M	D
Warranty Period	12 Months After Purchase [Not including consumable accessories]		

QR Code:

Website: <https://www.serenehouse.tw/>

Product Registration Request Form: <https://www.serenehouse.tw/forms/repair-application>

Customer Service's Phone Number: (02) 7721-8848

Customer Service's Email: service\_tw@serene-house.com

## 產品保證書

SERENE HOUSE提供一年保固服務，請妥善保管本產品保證書（遺失恕不補發），或可於購買商後上品牌官網提交產品保固登錄，確保您的商品保固權益。  
[產品保固登錄→https://www.serenehouse.tw/forms/product-registration](https://www.serenehouse.tw/forms/product-registration)

- 顧客依照使用說明書，於正常使用情況下，在保固期間內發生故障時，請備妥商品、本保證書及產品購買憑證（如發票、訂購單據等），申請維修服務，我們將為您免費修理或換新。
- 若出現下列情況，雖在保固期限內仍須採取額外報價付費修理：
  - 錯誤使用方式或不當的修理與改造所造成的故障或損傷。
  - 火災、損害、煤氣或天然氣爆炸、地震、風災、水災、打雷、電壓異常及其他天災或不可抗外因素所造成的故障及損壞。
  - 保證書內容不完整、經人為塗改、或未能提供有效購買憑證。
  - 產品使用後的傷痕、變色、汙損及保管不當所造成的損壞。
  - 損耗性零件及配件的更換（如震盪片、清潔刷、電池、遙控器等）。
- 當您需要維修產品時，可先於官網提交維修申請，我們將盡速為您服務。  
維修申請→<https://www.serenehouse.tw/forms/repair-application>

顧客資料			
姓名	先生 / 女士	電話	
通訊地址			
E-mail			
商品資訊			
商品資訊			
商品名稱			
型號			
生產序號			
銷售商			
購買日期	年	月	日
保固期間	自購買日起12個月 (不含耗材)		

QR Code:

官方網站: <https://www.serenehouse.tw/>

產品登錄: <https://www.serenehouse.tw/forms/product-registration>

維修申請: <https://www.serenehouse.tw/forms/repair-application>

客服專線: (02) 7721-8848

客服郵箱: service\_tw@serene-house.com

## 产品保修卡

为确保您的权益，请妥善保管本产品保修卡（遗失恕不补发）。如需服务时请出示本保修卡，依照下列刊载之内容，提供免费维修。

- 顾客依照使用说明书，于正常使用情况下，在保固期间内发生故障时，请带着商品与本保证书，即可委托原购买门市代为修理，此属免费修理。
- 若出现下列情况，虽在保固期限内仍须采取额外报价付费修理：
  - 错误使用方式或不当的修理与改造所造成的故障或损伤。
  - 火灾、损害、煤气或天然气爆炸、地震、风灾、水灾、打雷、电压异常及其他天灾或不可抗外因素所造成的故障及损伤。
  - 保证书上未注明顾客姓名、购买日期及购买门市，或是保证书内容经人为涂改时。
  - 使用后的伤痕、变色、污损及保管不当所造成的损伤。
  - 损耗性零件及配件的更换（如震荡片、清洁刷、电池、遥控器等）。

顾客资料			
姓名	先生 / 女士	电话	
地址			
E-mail			
商品信息			
商品名称			
型号			
生产序号			
销售商			
购买日期	年	月	日
保修期间	自购买日起12个月 (不含耗材)		

专卖店店章盖章处（请务必盖章）

东莞静庐商贸有限公司  
广东省东莞市虎门镇基智北路5号2栋  
service@serenehouse.com.cn  
+86 400 885 3268

- 栏目填写不清、不实或空白时，本保修卡无效，请填写姓名、电话与地址；如未填写购买日期与加盖专卖店店章，请立即向购买本商品的门市提出填写要求，本保修卡只附赠一次，请务必小心保管，遗失恕不补发。