

Aroma Diffuser

(With Intermittent Mode)




Hello Kitty Classic

Instruction Manual

Product & Accessories

- Please check to ensure the following items are present and inspect for damage
- (1) Mist Nozzle (3) Control panel (4) Timer indicator (2) Cover
- (5) Power (ON / OFF) (6) Light button (7) Timer button (8) Main unit
- 9 Vent (10) Atomizer (1) Water tank (2) Water mark- MAX (90ml)
- (3) Cover alignment point (4) USB power cord (5) Power jack (6) Ventilation inlet

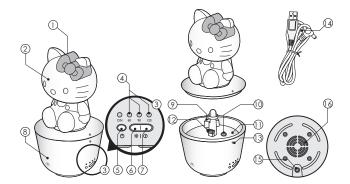

(The image is for reference only. Actual product may vary.)


Operating Instructions

- Always place your aroma diffuser on a firm, flat and level surface.
- Condensation may occur around the aroma diffuser when operating in high humidity
- Performance and time of diffusing scents may vary due to room's size, ventilation and humidity



Add 5-10 drops of SERENE HOUSE

 100% Essential Oil into the water





Place the cover back on



the main unit, per diagram



 
Plug the USB power cord into a power outlet. Press the power button to turn on the product and activate continuous mode and light operation. Press the power button again, the product turns of and stops all operations. Applicable with any DC5V/2A USB adapter or above.



While the product is power on, long press the power button for 2 seconds to switch to intermittent mode (30seconds on, 30seconds off), indicator light pulsates Long press the power button again to switch back to continuous mode.

Light Instructions

- This product comes with warm yellow light with four level of brightness to adjust. Turn on the product and light's default brightness is 100%.
- Press the light button gradually to adjust the brightness from 60%, 30% or turn off the light.



Precautions before use

Timer Instructions

the water tank after washina.

the product to malfunction

he water is below its programmed level

Cleaning & Maintenance

- Please read all instructions before using the product. Use it safely and correctly.

. While the product is on, press the timer button to activate the timer setting.

2. Gradually press the button and choose among 60mins, 90mins, 120mins or turn off the timer.

3. To change the timer setting, press the timer button repeatedly.

4. For safety purposes, this aroma diffuser will stop operating automatically when it detects the purpose of the purpose.

• Always disconnect the USB power cord from the electrical outlet before cleaning. • For best atomizing performance, be sure to clean the aroma diffuser after each use. * Remove the lid, empty the water from the tank, add a small amount of warm water (do not exceed $40^{\circ}\text{C}/104^{\circ}\text{F}$), and a few drops of neutral cleanser. Use a cotton swab to

clean the atomizer and internal surface of the water tank. Gently rinse all the soap out of

Never use a cidic cleansers as this may cause malfunction.
Be careful to not allow water to enter the vent, the ventilation inlet and the buttons.
Which was cidently flows into the ventilation inlet, vent or control buttons, allow internal mechanism to dry thoroughly (at least 6 hours) before the next use, otherwise this may cause

- This product is manufactured using the ultrasonic atomization principle, and while it does add slight humidity to the air, its primary purpose is as a fragrance diffuser.

 Never connect the power without placing cover on the unit.

 If the lid and cover are not properly covered, the water in the water tank may not be
- effectively atomized.

 Do not remove the lid or block the ventilation inlet under the main unit during usage
- When the product is in operation and there is water in water tank, do not touch the atomizer as personal injury or product malfunction may occur.
 After each use, make sure to pour out any remaining water in the tank.
 Recommend to use tap water, soft water and mineral water, not recommend to use other type
- It is important to not use steamed distilled water, as this water had the minerals removed from
- It is important to not see stearined assined water, as inits water and at the interest removed from the water that affects the operation of the diffusers.

 Reverse osmosis (RO) water also has less minerals in the water and the diffuser will not be able to diffuse the mist properly and the desired results will not be achieved.

 Hard water is also not recommended. This would require that the oscillator be cleaned every time after use when using hard water, because the calcium carbonate from hard water will pile. Also, hard water is too heavy for oscillator to diffuse mist.



香氛霧化機

(連續/間歇功能)



Hello Kitty 經典款

SERENE (P) HOUSE

香氛雾化机

(连续/间歇功能)

Hello Kitty 经典款

操作使用说明书


操作使用說明書

產品與配件介紹

- 使用前, 請確認以下物品是否齊全, 有無破損情況。
- (1) 噴霧口 (2) 上蓋
- ③ 控制面板
 - ⑥ 燈光模式設定鍵 ⑦ 定時模式設定鍵 ⑧ 主體
- 9 出風口 10 霧化片
- ① 水槽
- ② 最高水位線 MAX (90ml)

(4) 時間模式指示燈

① 上蓋定位點 ② USB電源線 15 電源孔 (6) 進氣口

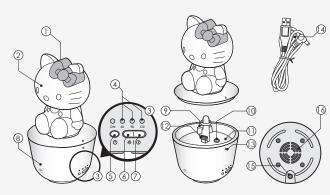

(圖片僅供參考・請以實品為主)

使用說明

- 請在穩固、平坦、水平的地方使用本產品。
- 若室內環境濕度較高,使用機器時,易在機身周圍產生水氣。
- 擴香效果與霧化時間可能會因空間大小、通風與溫濕度而有所變化



請將上蓋依圖示往上取下。



將水緩慢注入水槽,為防止機 器受損,請勿超過最高水位線 · 並避免讓水流入出風口 · 請 將水槽外多餘水分擦拭乾淨。



滴入 SERENE HOUSE 精油於水 槽內約5~10滴(依個人喜好調

將USB電源線接頭插入主體上的 6



請依指示方將上蓋裝回蓋緊 可對準上蓋定位點·讓上蓋與 水槽確實密合



雷源孔, 連接雷源並按下雷源開 關。電源指示燈與情境燈亮起 即啟動連續霧化模式。再次按下 雷源開闢,機器關閉 ※可搭配DC5V / 2A以上規格之 USB電源供應器使用



機器開啟時,長按電源開闢2利 可切換為間歇霧化模式(30秒 開30秒關,重複循環),電源 指示悟呼吸閉煙。重次長按雷 源開關則再切換為連續霧化模



燈光模式設定

- 1. 此款香氛霧化機具暖黃光情境燈,共有四段亮度調節 按下電源開闢後,情境燈同時開啟,預設為100%
- 2. 若要調整亮度,在開機後重複按下燈光模式設定鍵 可依序調整為亮度60%、30%或關閉。



定時模式設定

- 1. 當機器運行時,按定時模式設定鍵啟動定時設定。
- 2. 依序選擇60、90、120分鐘或關閉定時。
- 3. 若欲更改定時設定,請重複按下定時模式設定鍵調整
- 4. 為確保使用安全,當水槽中水量不足時,機器將自動斷電

清潔保養

- 在清潔保養之前,機器必須切斷雷源,務必拔除雷源線及移除主體上的雷源線接頭。
- 建議每次使用完畢即進行清潔保養,以確保機器正常運作
- 打開水槽上蓋・淨空水槽・於水槽內加入適量溫水(水溫勿超過40℃)並滴入少許中性清潔劑 使用乾淨棉棒輕拭水槽內部及霧化器表面,待清洗完畢後以乾淨的布將機器擦乾即可。
- 請勿使用酸性清潔劑,否則有可能導致機器指壞。
- 請慎防進氣口、出風口或按鍵開關部位進水導致機器故障
- 若水不慎進入機器主體,請靜置至少6小時,待機器完全乾燥後,方可使用。

使用注意事項

- 使用本產品前,請仔細閱讀本說明書,若使用方法不當可能引起機器故障。 本產品使用超音波震盪霧化原理達到擴香效果,雖然可能會增加一些環境中的濕度,但
- 主要用途仍為擴香,並非加濕機。
- 請勿在未裝上芸的情況下將雷頂接通
- 若未確實蓋緊上蓋,可能導致機器無法霧化或霧化效果不佳。
- 運轉過程中,請勿取下上蓋,或者堵塞主體下方風扇進氣口
- 在機器運轉過程中,且水槽內有水時,請勿在電源尚未關閉前打開上蓋,或將手放到水
- 槽內。否則有可能造成機器漏水、故障或受傷。 水槽內殘留的液體若超過24小時,建議倒掉並進行清潔保養步驟
- 請使用自來水、軟水、礦泉水,不建議使用其他液體
- 請注意不要使用蒸餾水或純水、因水中礦物質已被過濾、將影響機器霧化效果、不易產生霧氣。
- 逆滲透(RO)水也只含微量礦物質、會造成機器霧化效果不佳、不易產生霧氣。
- 不建議使用硬水,因硬水的碳酸鈣會沉澱堆積,每次使用完後都必須清理震盪霧化器
- 此外硬水分子太重、無法有效產生霧化效果
- 建議使用溫度25℃~40℃的水,如使用低於5℃的水,機器啟動所需的時間較久,此為正常情況。


产品与配件介绍

- 使用前,请确认以下物品是否齐全,有无破损情况。
- (1) 喷雾口 (2) 上盖
 - ③ 控制面板 4) 时间模式指示灯
 - ⑥ 灯光模式设定键 ⑦ 定时模式设定键 8 主体
- ① 上盖定位点 ② USB电源线

⑤ 电源开关

9 出风口

- (10) 霧化片
- ① 水槽 (5) 电源孔
- (2) 最高水位线 MAX (90ml) (6) 进气口

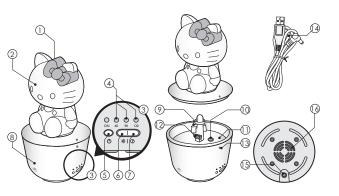

(图片仅供参考,请以实品为主。)

使用说明

- 请在稳固、平坦、水平的地方使用本产品。
- 若室内环境湿度较高,在使用香氛雾化机时,易在机器周围产生水气。
- 扩香效果与雾化时间可能会因空间大小、通风与温湿度而有所变化。



请将上盖依图示往上取下。



 
将水缓慢注入水槽, 为防止 机器受损,请勿超过最高水 位线,并避免让水流入出风 □,请将水槽外多余水分擦 拭干净。



滴入SERENE HOUSE 精油于水 槽内约5~10滴(依个人喜好调



请依指示方将上盖装回盖紧 可对准上盖定位点, 让上 盖与水槽确实密合。



机器开启时,长按电源开关 2秒可切换为间歇雾化模式 (30秒开30秒关,重复循环 . 申源指示灯呼吸闪烁。 再次长按电源开关则再切换 为连续零化模式。

灯光模式设定

- 1. 此款香氛雾化机具暖黄光情境灯, 共有四段亭度调节 按下电源开关后,情境灯同时开启,预设为100%
- 2. 若要调整亮度,在开机后重复按下灯光模式设定键, 可依序调整为亮度60%、30%或关闭。



- 定时模式设定
- 1. 当机器运行时,按定时模式设定键启动定时设定。
- 2. 依序选择60、90、120分钟或关闭定时。 3. 若欲更改定时设定,请重复按下定时模式设定键调整。

4. 为确保使用安全, 当水槽中水量不足时, 机器将自动断电。

清洁保养

使用注意事项

- 在清洁保养之前,机器必须切断电源,条必拔除电源线及移除主体上的电源线接头。
- 建议每次使用完毕即进行清洁保养,以确保机器正常运作。 ・打开水槽上盖,净空水槽,于水槽内加入适量温水(水温勿超过40℃)并滴入少许中 性清洁剂,使用干净棉棒轻拭水槽内部及雾化器表面,待清洗完毕后以干净的布将机
- •请勿使用酸性清洁剂,否则有可能导致机器损坏。
- •请慎防进气口、出风口或按键开关部位进水导致机器故障。
- ·若水不慎进入机器主体,请静置至少6小时,待机器完全干燥后,方可使用。

· 使用本产品前,请仔细阅读本说明书, 若使用方法不当可能引起机器故障。 • 本产品使用超音波震荡雾化原理达到扩香效果,虽然可能会增加一些环境中的湿度,但主要用途

- 仍为扩香,并非加湿机。 •请勿在未装上盖的情况下将电源接通。
- 若未确实盖紧上盖, 可能导致机器无法雾化或雾化效果不佳。
- 运转过程中,请勿取下上盖,或者堵塞主体下方风扇进气口。在机器运转过程中,且水槽内有水时,请勿在电源尚未关闭前打开上盖,或将手放到水槽内。 否则有可能造成机器漏水、故障或受伤。
- ・水槽内残留的液体若超过24小时,建议倒掉并进行清洁保养步骤。 ・请使用自来水、软水、矿泉水,不建议使用其他液体。
- •请注意不要使用蒸馏水或纯水,因水中矿物质已被过滤,将影响机器雾化效果,不易产生雾气。
- · 逆渗透(RO)水也只含微量矿物质,会造成机器雾化效果不佳,不易产生雾华
- 不建议使用硬水,因硬水的碳酸钙会沉淀堆积,每次使用完后都必须清理震荡雾化器。
- ·建议使用温度25℃~40℃的水,如使用低于5℃的水,机器启动所需的时间较久,此为正常情况。

此外硬水分子太重,无法有效产生零化效果。

• Please use water with a temperature of 25 ° C \sim 40 ° C (77°F \sim 104°F); if using water below 5 ° C/41°F, the diffuser starts longer.

Notes on the use of oils

- · For best performance of this Aroma diffuser, we recommend using essential oil from
- SERENE HOUSE.

 Essential alis are highly concentrated alis. Use with caution. Do not spill the alis as they may damage plastic objects and furniture. If essential ali drops on the surface of this product or other objects or on the floor, please clean by cloth immediately.

 Children and pets are very sensitive to essential ali that is unedible. Use with caution.

 Stop using the product and open the windows for ventilation. If you have difficulty breathing due to allergic reaction or any special physical conditions, such as pregnancy, lung failure,
- cancer, epilepsy or other illnesses, please consult your doctor before using essential oils

Safety Precautions

In order to prevent any accidents happening, must follow the instructions below as you are using this product:

- e instructions of this manual are for users applying this product correctly, and preventing
- damage or property loss to users or others.

 "WARNING" is central contents for preventing any accidents happening, please follow cautiously.



- Stop using the product immediately and unplug once smoke, smell, noise, or other unusual situations appear: if it very possible to cause file bearing file. unusual situations appear; it is very possible to cause fire hazard or electric shock, if the product operates continuously
- Do not alter, repair or dismantle this product on your own, it may cause fire hazard, electric shock, malfunction or injury.
- Please follow local regulations when you are discarding consumables.



- The USB power cord included is able to connect with other USB adapters, please use The USB power cord included is able to connect with other USB adapters, please use with any DC5V/2A USB adapter or above. Otherwise, it may affect the atomization performance or may cause the product to malfunction.
 The product will heat up when operating and it is normal.
 Do not connect the power during installation, as electric shock and injury may occur.
 The product should always be unplugged and the water tank should always be empty when moving the product or when the product is not in operation.
 When unplugging power cord from the outlet, do not pull on the wire. Hold the power cord firmly and then unplug it, or else damage or injury may occur.

精油使用注意事項

- 建議使用 SERENE HOUSE 精油;切勿使用含有香水、香精或含雜質的精油·以免傷害霧化器
- 精油屬於濃縮的高純度油,有可能溶解塑膠或傢俱塗裝,若不慎沾附於產品外側或傢俱上,請 立即擦拭,避免產品外觀或傢俱褪色,使用時請特別小心。
- 幼童與寵物對香味非常敏感,在密閉空間內使用時請特別小心,及避免誤食。
- 使用期間如感覺不舒服或身體不適時,請立即停止使用,並打開窗戶使空氣流通。如您有任何 身體上的特殊狀況・例如懷孕、肺衰竭、癌症或癲癇等症狀、使用精油前建議請先諮詢您的 醫師。

注意事項

為了預防使用時發生意外,請務必遵守以下事項:

- 本使用說明書的注意事項‧是為了讓使用者能正確的使用本產品‧防止對使用者或他人造成危 宝 及 財 產 捐 失 。
- 警告事項皆為預防意外發生的重要內容,請務必遵守。

⚠ 警告



• 萬一出現冒煙、異味、雜音等異常現象 · 如繼續使用可能會導致火災、觸電等 · 請立即 關閉雷源, 並移除雷源線, 停止使用 •請勿擅自對本產品進行改造、修理或拆解,否則有可能造成火災、觸電、故障或受傷。



精油使用注意事项



注意事项

- 本產品所附的USB電源線可支援外接的USB電源供應器 請使用DC5V/2A規格以上之電源供應器 源供應器,否則可能影響霧化效果或導致機器故障。
- 當機器運作時,電源供應器會發熱,乃屬正常現象

立即擦拭,避免产品外观或家具褪色,使用时请特别小心。

• 警告事项均预防意外发生的重要内容,请务必遵守。

关闭电源, 并移除电源线, 停止使用。

源适配器,否则可能影响雾化效果或导致机器故障。 当机器运作时,電源适配器会发热,乃属正常现象。

•请勿于安装机器时连接电源,否则有可能造成触电或受伤。

耗材抛弃时,请遵照各国法规。

. 否则可能诰成产品故障。

·幼童与宠物对香味非常敏感,在密闭空间内使用时请特别小心,及避免误食。

- 請勿於安裝機器時連接電源,否則有可能造成觸電或受傷
- 本產品於長期不用或移動時,請務必先關閉電源並拔下所有插頭,並請倒掉容器
- 內的水,否則可能造成產品故障。
- 拔下電源線時,請勿拉扯,必須緊握電源線接頭再拔除,否則有可能造成電源線破損。

• 建议使用 SERENE HOUSE 精油;切勿使用含有香水、香精或含杂质的精油,以免伤害雾化器

• 精油属干浓缩的高纯度油,有可能溶解塑料或家具涂装,若不慎沾附干产品外侧或家具上,请

• 使用期间如感觉不舒服或身体不适时,请立即停止使用,并打开窗户使空气流通。如您有任何

身体上的特殊状况,例如怀孕、肺衰竭、癌症或癫痫等症状,使用精油前建议请先咨询您的医师。

为了预防使用时发生意外,请务必遵守以下事项: ・本操作使用说明书的注意事项,是为了让用户能正确使用本产品,防止对用户或他人造成危害

• 万一出现冒烟、异味、杂音等异常现象,如继续使用可能会导致火灾、触电等,请立即

·本产品所附的USB电源线可支持外接的USB電源适配器。请使用DC5V/2A规格以上之電

• 本产品于长期不用或移动时,请务必先关闭电源并拔下所有插头,并请倒掉容器内的水

拔下电源线时,请勿拉扯,必须紧握电源线接头再拔除,否则有可能造成电源线破损。

・请勿擅自对本产品进行改造、修理或拆解,否则有可能造成火灾、触电、故障或受伤。

If power cord is damaged, or the product is dropped, hit, damaged, or broken, stop using it, this is possible to cause electric shocks or short circuit. Do not operate this product with wet hands, or drip or spill water or other liquids onto the product. These may cause electric shock or injuries.

- Do not deliberately place your eyes, nose or mouth close to the fragrance mist emitted

- Do not deliberately place your eyes, nose or mount close to the tragrance mist emitted
 as this may cause physical discomford.
 Do not put fingers or hands into the product.
 In order to avoid any danger or accidents, parents guard is necessary when children
 use this product.
 Please follow the instructions to use this product; it is possible to result in poisoning or fire
 hazard, if other substances are used. Do not immerse this product in water, this product
 is factorized that each.
- is for household use only.
- is for household use only.

 This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unles they have been given supervision or instruction concerning use of the product by a person responsible.

 Do not let children use this product alone, keep it out of reach of children, or it may
- cause electric shocks or injuries.
 To avoid fire hazard, electric shocks, injuries or malfunction, please do not keep this product in the following places:
- Under direct sunlight or high temperature environments, and keep away from fire sources. Places with high pressure or flammable materials.
- Do not place the product on soft surfaces such as carpet, as this may block the ventilation inlet on the bottom of the unit, assing the product to not function correctly.
 Do not over bend, heat, or place heavy objects on the power cord, or if may cause
- If an extension cord is used, please pay attention to the introductions to electric appliances using. The specifications should be the same. The cord should be placed at evident places to avoid children pulling or stumbling.
- In order to prevent accidents happening, if the power cord is damaged, please replace it via the manufacturer, other service departments, or staffs who own related.

Troubleshooting

When the product is broken-down, please confirm the following items before sending it for

Product does not operate

Power cord does not connected to the product

Make sure the power cord is fully and correctly plugged into the electrical outlet

● 當電源線破損時·或是產品不小心摔落或受到撞擊而受損或破裂時·不得繼續使用本產 品,否則有可能造成觸電、短路等問題

- •請勿用濕的手操作本產品,或讓水等其他液體沾附、漸灑到上面,否則有可能造成觸電 受傷
- 請勿故意將眼口鼻靠進出霧口所排出的香氛霧氣,否則有可能造成身體不適
- 請勿在本產品運作時將手或手指放置於本產品之內。為避免危險,幼童須在成年人監督下使用產品,預防意外發生
- 錯誤使用本產品,將可能導致火災等意外,請依指示使用本產品,若使用其他介質將可
- 能引發中毒或火災等危險。 •請勿將本產品浸入水中;本產品僅供空間香氛使用。
- 除非有專業人士的督導和指示,本產品不適合由身體、感官或精神能力欠佳,或缺乏經
- 驗及知識的人士使用(包括兒童) • 建議放在幼童與寵物觸及不到的地方,避免意外發生。
- •請勿將本產品放置在以下地方,否則有可能引起火災、觸電、受傷、故障: -陽光直射或高溫環境,或靠近火源。
- -高壓物及易燃物周圍 •請勿置放於地毯等柔軟的地方,否則會堵塞底部的進氣口,造成機器無法正常運作。
- 請勿將電源線過度彎折、加熱或上方放置重物,否則有可能引起火災或故障。連接延長線時,請注意所使用的電器規格,電源線應放置於明顯的地方,避免拉扯或絆倒。
- 若電源線損壞時,請由製造廠或其他服務處或具有相關資格的人員加以更換以避免危險

障礙排除

疑似故障時,請在委託維修前確認以下事項:

- 電源線未正確接上主體的電源孔
- → 請確認電源線是否正確接上主體的電源孔。
- 電源已正確接上,但仍然不會運作
- → 請先確認水槽是否有水·然後再確認電源開關是否開啟。或確認是否超過最高水位線
- (MAX),如超出,請將超出水量倒出水槽外。

• 当电源线破损时,或是产品不小心摔落或受到撞击而受损或破裂时,不得继续使用本产品

- ,否则有可能造成触电、短路等问题。 ·请勿用湿的手操作本产品,或让水等其他液体沾附、渐洒到上面,否则有可能造成触电受伤。 ·请勿故意将眼口鼻靠进出雾口所排出的香氛雾气,否则有可能造成身体不适。

- ·请勿在本产品运作时将手或手指放置于本产品之内。 ·请勿在本产品运作时将手或手指放置于本产品之内。 ·为避免危险,幼童须在成年人监督下使用产品,预防意外发生。 ·错误使用本产品,将可能导致火灾等意外,请依指示使用本产品,若使用其他介质将可能 引发中毒或火灾等危险。
- ·请勿将本产品浸入水中;本产品仅供空间香氛使用。 ·除非有专业人士的督导和指示,本产品不适合由身体、感官或精神能力欠佳,或缺乏经验 及知识的人士使用(包括儿童)。
- 建议放在幼童与宠物触及不到的地方,避免意外发生。
- •请勿将本产品放置在以下地方,否则有可能引起火灾、触电、受伤、故障: -阳光直射或高温环境,或靠近火源。 -高压物及易燃物周围。
- ·请勿置放于地毯等柔软的地方,否则会堵塞底部的进气口,造成机器无法正常运作。
- 请勿将电源线过度弯折、加热或上方放置重物,否则有可能引起火灾或故障。连接延长线时,请注意所使用的电器规格,电源线应放置于明显的地方,避免拉扯或绊倒。
- 若电源线损坏时,请由制造厂或其他服务处或具有相关资格的人员加以更换以避免危险。

障碍排除

疑似故障时,请在委托维修前确认以下事项:

机器无法运作

- 电源线未正确接上主体的电源引
- →请确认电源线是否正确接上主体的电源孔。 • 电源已正确接上, 但仍然不会运作
- → 请先确认水槽是否有水,然后再确认电源开关是否开启。或确认是否超过最高水位线 (MAX),如超出,请将超出水量倒出水槽外。

• The power is correctly connected but the product still does not operate The Check whether the water tank contains any water and then recheck that the ON/OFF switch is on. Check that the water level in the tank does not exceed the maximum water level line (MAX); if this is the case, empty out the excess water.

The product does not atomize or does not atomize effectively

- The water temperature is too low
- → Please use tap water or mineral water at a temperature 25 ° C~ 40 ° C(77°F~104°F).
- → Piedose use rap water or minerial water and reimperature 25 °C × 40 °C(77~104+7).

 We hard water or steamed distilled water
 → Please use tap water or mineral water (The calcium carbonate from areal hard water will pile, please filter the water before using).

 Dirty atomizer
 → Perform maintenance according to the 'Cleaning & Maintenance' section of this manual.
- · Placement of the product
- → Place on a firm, level, and stable surface as well as in light wind place
- Make sure the water does not exceed its designated water mark level (MAX), or drain
- the excess water.

 The lid does not attach securely to the main unit

 Reattach the lid according to the procedure in the 'Operating Instructions' section of

Product specification

this manual.

Suggested Room Size: Product Name: Hello Kitty Classic Aroma Diffuser Ultrasonic Frequency(MHz): 2.45 MHz 191201069 90ml Warm yellow light Product Model Water Tank Capacity: Product Material: Product Size: Product Weight: Ceramics Plastic Ø11 X H20.9cm Approximately 500g DC 5V / USB (Four level brightness adjustment) USB Power cord, Instruction Manual and Accessories Included: Power Input: Rated Power: Operatina Mode: Continuous mode Warranty card SERENE HOUSE / Intermittent mode Design Team: Continuous Time: Intermittent Time:

Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: 4886 2.7721. 8848

無法霧化或霧化效果不佳

- 水溫太低
- → 請使用溫度在25°C到40°C的自來水或礦泉水。
- 使用硬水或蒸餾水
- →請使用自來水或礦泉水(某些地區的水質容易造成水垢,請將水過源後再使用)。 • 霧化機髒汗
- → 請依照本說明書的「清潔保養」方法進行保養
- •機器放置在地毯等柔軟物體上,或者使用場所的風量過大 → 請在水平、平穩及風量小的場所使用。
- 水槽內水位超過最高水位線(MAX)
- → 請將多餘的水倒掉 • 卜蕎未確實與主體蓋緊
- → 請注意水槽上蓋安裝時有方向性,請依定位口方向位置裝回並蓋緊。

產品規格

間歇使用時間:

產品名稱 Hello Kitty 經典款香氛霧化機 建議使用空間: 10~15m² 產品型號 191201069 頻率 (MHz) 2.45 MHz 產品材質 陶瓷、塑膠 水槽容量:

直徑11 x 高20.9公分 燈光顏色 暖苗光 (四段亮度調節 產品重量 配件 USB電源線、說明書與保證書 約500公克 雷源輸入 DC 5V / USB 設計 SERENE HOUSE

中國製造

額定功率 連續霧化模式/間歇霧化模式 霧化模式 連續使用時間 ≥ 4 小時

≥ 8 小時

如產品出現其它故障·請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。請勿自行動手拆解

服務專線:+886277218848

- → 请使用温度在25° C到40° C的自来水或矿泉水。
- 使用硬水或蒸馏水
- ·请使用自来水或矿泉水(某些地区的水质容易造成水垢,请将水过滤后再使用)。
- 零化机脏污
- → 请依照本说明书的「清洁保养」方法进行保养。 • 机器放置在地毯等柔软物体上,或者使用场所的风量过大
- → 请在水平、平稳及风量小的场所使用。
- · 水槽内水位超过最高水位线 (MAX)
- → 请将名全的水倒掉。 上盖未确实与主体盖紧
- → 请注意水槽上盖安装时有方向性,请依定位口方向位置装回并盖紧。

产品规格

Hello Kitty 经典款香氛雾化机 建议使用空间: 10~15m2 产品펜문 191201069 频率 (MHz): 2.45 MHz 产品材质 陶瓷、塑料 水槽容量. 90ml 直径11 x 高20.9公分 产品尺寸 暖黄光(四段亮度调节) 灯光颜色: 产品重量 约500公克 USB电源线、说明书与保证书 申源输入 DC 5V / USB 设计。 SERENE HOUSE 额定功率: 中国制造 运作模式 连续雾化模式/间歇雾化模式

连续使用时间: ≧ 4 小时 间歇使用时间: ≥ 8 小时

如产品出现其它故障,请联系SERENE HOUSE官方客服或请与专卖店联系。请勿自行动手拆解

服务专线: +86 400-885-3268

Warranty Card

SERENE HOUSE is providing 1 Year Warranty Service, please keep this Warranty card properly SERENE HOUSE is providing 1 Year Warranty Service, please keep this Warranty card properly (Will not reissue one another if missing), or you can register your product's warranty on our website to guarantee your product's warranty rights.

To register your product's warranty—thitps://www.serenehouse.tw/forms/product-registration

1. Customer should follow the instruction to use the product, if the product is malfunction during Warranty Period, please keep your Warranty card and Receipt, to apply for maintenance services, we will repair or replace a new one for you.

2. Under these situations, there will be additionat charge even though it is in Warranty Period.

**Fire Hazzard, Broken, Gas explosion, Earthquake, Windstorm, Flood, Thunder, when the product of the product in the content of the product of the

- Abnormal Voltage, Natural disasters or Force Majeure that cause product to
- Abnormal valuage, natural assaurs or Pace Majeure into cause product to breakage or malfunction.

 Content of Warranty Card is incomplete, alters, or not able to provide a valid purchase evidence.

 Discolor, scars, stains and improper keeping that cause product to malfunction.

Customer Info Mr / Mrs Phone lame ddress -mail roduct Info ame 1odel etaile

產品保證書

SERENE HOUSE提供一年保固服務·請妥善保管本產品保證書(遺失恕不補發)·或可於購買商品後上品牌官網提交產品保固登錄·確保您的商品保固權益。

產品保固登錄→https://www.serenehouse.tw/forms/product-registration 1. 顧客依照使用說明書,於正常使用情况下,在保固期間內發生故障時,請備妥商品、本保證

- 書及產品購買憑證(如發票、訂購單據等),中請維修服務,我們將為您免費修理或換新。 2.若出現下列情况,雖在保固期限內仍須採取額外報價付費修理:
- 錯誤使用方式或不當的修理與改造所造成的故障或損傷 • 火災、損害、煤氣或天然氣爆炸、地震、風災、水災、打雷、電壓異常及其他天災或不可抗
- 外力因素所造成的故障及捐壞。 保證書內容不完整、經人為塗改,或未能提供有效購買憑證。
- 產品使用後的傷痕、變色、汙損及保管不當所造成的損壞
- 損耗性零件及配件的更換(如震盪片、清潔刷、電池、遙控器等) 3. 當您需要維修產品時,可先於官網提交維修申請,我們將盡速為您服務 維修申請→https://www.serenehouse.tw/forms/repair-application



产品保修卡 为确保您的权益,请妥善保管本产品保修卡(遗失恕不补发),如需服务时请出示本保修卡,依照

- 下列刊载之内容,提供免费修理。 1.顾客依照使用说明书,于正常使用情况下,在保固期间内发生故障时,请带着商品与本 保证书,即可委托原购买门市代为修理,此属免费修理。 2. 若出现下列情况,虽在保固期限内仍须采取额外报价付费修理:
- 火灾、损害、煤气或天然气爆炸、地震、风灾、水灾、打雷、电压异常及其他天灾或 不可抗外力因素所造成的故障及损坏。
- •保证书上未注明顾客姓名、购买日期及购买门市,或是保证书内容经人为涂改时。
- ・使用后的伤痕、变色、污损及保管不当所造成的损坏。 ・损耗性零件及配件的更换(如震荡片、清洁刷、电池、遥控器等)。

错误使用方式或不当的修理与改造所造成的故障或损伤。

顾客资料

MA A TI				
姓名	先生/女士	电	话	
地 址				
E-mail				
商品资讯		专卖店店章盖章处(请务必盖章)		
商品名称				
型 号				
生产序号				
销售商			东莞静庐商贸有限公司 广东省东莞市虎门镇基智北路5号2栋 service®sprenehouse.com.cn	
购买日期	年 月 日			
保修期间	自购买日起12个月(不含耗材)		+86 400 885 3268	

 栏目填写不清、不实或空白时,本保修卡无效,请填写姓名、电话与地址;如未填写购买日期与加盖专卖店店章,请立即向购买本商品的门市提出填写要求,本保修卡只附赠一次,请务必 小心保管, 遗失恕不补发。

Replacement consumable accessories (batteries, remote control, cleansing brush) When you need your product to be repaired, please register from website or contact to local distributor, we will contact you as soon as possible. Maintenance Request Form→ https://www.serenehouse.tw/forms/repair-application

