




Arroma Diffuser
(With Intermittent Mode)

Instruction Manual

Product & Accessories

• Please check to ensure the following items are present and inspect for damage before use.

- ① Mist Nozzle
- ② Cover
- ③ Control panel
- ④ Timer indicator
- ⑤ Power (ON / OFF)
- ⑥ Light/Timer button
- ⑦ Main unit
- ⑧ Power jack
- ⑨ Lid
- ⑩ Vent
- ⑪ Atomizer
- ⑫ Water tank
- ⑬ Water mark- MAX (90ml)
- ⑭ USB power cord
- ⑮ Ventilation inlet

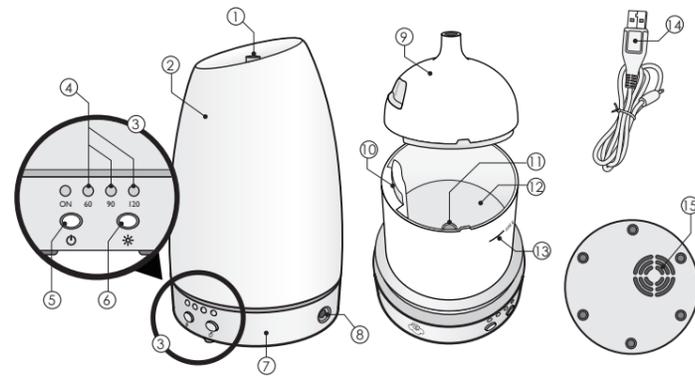

(The image is for reference only. Actual product may vary.)


Operating Instructions

• Always place your aroma diffuser on a firm, flat and level surface.
• Condensation may occur around the aroma diffuser when operating in high humidity environment.

<p>1</p>  <p>Lift the cover from the main unit. Remove the lid from water tank.</p>	<p>2</p>  <p>Fill water tank up to or below maximum (MAX) water mark level. • Never add water into the vent hole.</p>
<p>3</p>  <p>Add 5-10 drops of SERENE HOUSE 100% Essential Oil into the water tank.</p>	<p>4</p>  <p>Place the cover back on the main unit, per diagram. If the lid is not correctly aligned, as a safety feature, the unit will not operate.</p>
<p>5</p>  <p>Plug the USB power cord into a power outlet. Press the power button to turn on the device and activate continuous diffuser and light operation. Press the power button again the device turns off and stops all operations.</p>	<p>6</p>  <p>While the device is on, press and hold the power button for 2 seconds the device will go into intermittent mode (30 seconds on, 30 seconds off), and the power indicator light pulsates.</p>

Light Instructions

- Device will automatically cycle through 7 color LED pattern (warm white, green, blue, red, yellow, purple, and light white) when it is turned on.
- To select a single color, press the light button until you reach your desired color.
- To switch off the light, keep pressing the light button. At the end of the 7 color cycle ,the light will turn off.

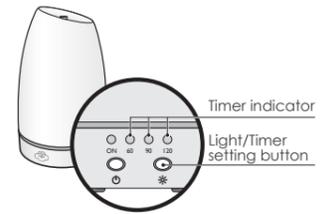

Timer Instructions

- Timer setting only works in continuous operation mode.
- While the device is on, press and hold the timer button for 2 seconds to activate timer setting, the timer indicator light flashes.
- While the timer indicator light is flashing, press the timer button again to choose between 60, 90, 120 minutes or timer-off. The timer indicator light flashes to indicate your choice of timer setting. After 3 seconds without any action the timer setting will complete, the flashing stops, and the indicator light stays on constantly.
- Repeat 2. and 3. steps to change your timer setting.
- For safety purposes, this aroma diffuser will stop operating automatically when it detects the water is below its programmed level.

Cleaning & Maintenance

- Always disconnect the USB power from the electrical outlet before cleaning.
- For best atomizing performance, be sure to clean the aroma diffuser after each use.
- Remove the lid, empty the water from the tank, add a small amount of warm water (do not exceed 40°C/104°F), and a few drops of neutral cleanser. Use a cotton swab to clean the atomizer and internal surface of the water tank. Gently rinse all the soap out of the water tank after washing.
- Never use acidic cleansers as this may cause malfunction.
- Be careful to not allow water to enter the vent, the ventilation inlet and the buttons.
- If water accidentally flows into the ventilation inlet, vent or control buttons, allow internal mechanism to dry thoroughly (at least 6 hours) before the next use, otherwise this may cause the device to malfunction.




香氛霧化機
(連續 / 間歇功能)

操作使用說明書

產品與配件介紹

• 使用前，請確認以下物品是否齊全，有無破損情況。

- ① 噴霧口
- ② 上蓋
- ③ 控制面板
- ④ 時間模式指示燈
- ⑤ 電源開關
- ⑥ 燈光 / 定時模式設定鍵
- ⑦ 主體
- ⑧ 電源孔
- ⑨ 水槽上蓋
- ⑩ 出風口
- ⑪ 霧化器
- ⑫ 水槽
- ⑬ 最高水位線 - MAX (90ml)
- ⑭ USB-DC線
- ⑮ 進氣口

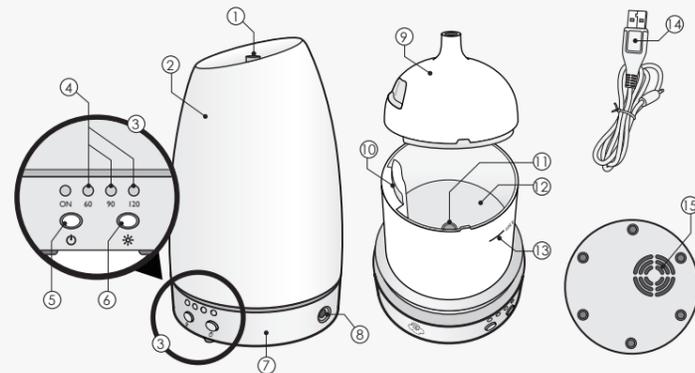

(圖片僅供參考，請以實品為主)


使用說明

• 請在穩固、平坦、水平的地方使用本產品。
• 若室內環境濕度較高，使用機器時，易在機身周圍產生水氣。

<p>1</p>  <p>請將上蓋依圖示往上取下，再將水槽上蓋打開。</p>	<p>2</p>  <p>將水緩慢注入水槽，為防止機器受損，請勿超過最高水位線，並避免讓水流入出風口，並請將水槽外多餘水分擦拭乾淨。</p>
<p>3</p>  <p>滴入 SERENE HOUSE 精油於水槽內約5~10滴 (依個人喜好調整) 。</p>	<p>4</p>  <p>請依指示方向依序將水槽上蓋和上蓋裝回蓋緊。</p>
<p>5</p>  <p>將USB電源線接頭插入主體上的電源孔，連接電源並按下電源開關，電源指示燈與情境燈亮起，即啟動連續霧化模式。再次按下電源開關，機器關閉。</p>	<p>6</p>  <p>機器開啟時，長按電源開關2秒可切換為間歇霧化模式 (30秒開30秒關，重複循環)，電源指示燈呼吸閃爍。再次長按電源開關則再切換為連續霧化模式。</p>

燈光模式設定

- 按下電源開關後，機器將自動循環七彩情境燈 (暖白光、綠光、藍光、紅光、黃光、紫光和白光) 。
- 若要切換為單色情境燈，請再按壓燈光模式設定鍵，直到喜愛的顏色出現即可。
- 使用中如欲關閉情境燈，請重複按壓燈光模式設定鍵至七彩情境燈輪替顯示完畢為止。

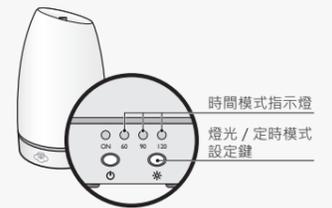

定時模式設定

- 定時設定只能用於連續霧化模式。
- 當機器運行時，長按定時模式設定鍵2秒，以啟動定時設定，時間模式指示燈將閃爍。
- 在時間模式指示燈閃爍時，可按下定時模式設定鍵，依序選擇60、90、120分鐘或關閉定時，時間模式指示燈會隨著所選的時間閃爍不同燈號，超過3秒未再按鍵，則定時設定完成，時間模式指示燈恆亮。
- 若欲更改定時設定，請重複上述2-3點步驟調整。
- 為確保使用安全，當水槽中水量不足時，機器將自動斷電。

清潔保養

- 在清潔保養之前，電器必須切斷電源，務必拔除電源線及移除主體上的電源線接頭。
- 建議每次使用完畢即進行清潔保養，以確保機器正常運作。
- 打開水槽上蓋，淨空水槽，於水槽內加入適量溫水 (水溫勿超過40°C) 並滴入少許中性清潔劑，使用乾淨棉棒輕拭水槽內部及霧化器表面，待清洗完畢後以乾淨的布將機器擦乾即可。
- 請勿使用酸性清潔劑，否則有可能導致機器損壞。
- 請慎防進氣口、出風口或按鍵開關部位進水導致機器故障。
- 若水不慎進入機器主體，請靜置至少6小時，待機器完全乾燥後，方可使用。




香氛霧化機
(連續 / 間歇功能)

操作使用說明書

产品与配件介绍

• 使用前，请确认以下物品是否齐全，有无破损情况。

- ① 喷雾口
- ② 上盖
- ③ 控制面板
- ④ 时间模式指示灯
- ⑤ 电源开关
- ⑥ 灯光 / 定时模式设定键
- ⑦ 主体
- ⑧ 电源孔
- ⑨ 水槽上盖
- ⑩ 出风口
- ⑪ 雾化器
- ⑫ 水槽
- ⑬ 最高水位线 - MAX (90ml)
- ⑭ USB-DC线
- ⑮ 进气口

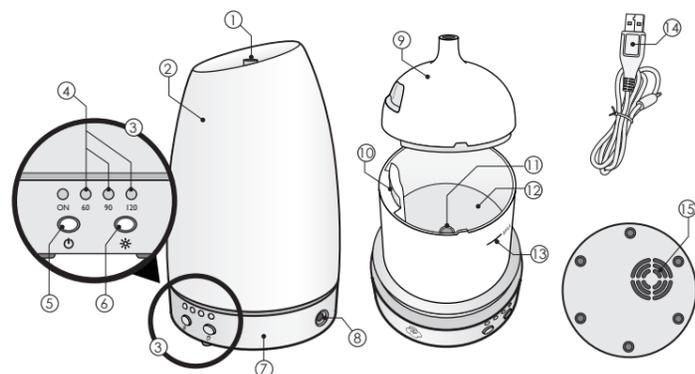

(图片仅供参考，请以实品为主。)


使用说明

• 请在稳固、平坦、水平的地方使用本产品。
• 若室内环境湿度较高，在使用香氛雾化机时，易在机器周围产生水气。

<p>1</p>  <p>请將上蓋依圖示往上取下，再將水槽上蓋打開。</p>	<p>2</p>  <p>將水緩慢注入水槽，為防止機器受損，請勿超過最高水位線，並避免讓水流入出風口，並請將水槽外多餘水分擦拭乾淨。</p>
<p>3</p>  <p>滴入SERENE HOUSE 精油於水槽內約5~10滴 (依個人喜好調整) 。</p>	<p>4</p>  <p>請依指示方向依序將水槽上蓋和上蓋裝回蓋緊。</p>
<p>5</p>  <p>將USB電源線接頭插入主體上的電源孔，連接電源並按下電源開關，電源指示燈與情境燈亮起，即啟動連續霧化模式。再次長按電源開關則再切換為連續霧化模式。</p>	<p>6</p>  <p>機器開啟時，長按電源開關2秒可切換為間歇霧化模式 (30秒開30秒關，重複循環)，電源指示燈呼吸閃爍。再次長按電源開關則再切換為連續霧化模式。</p>

灯光模式设定

- 按下电源开关后，机器将自动循环七彩情境灯 (暖白光、绿光、蓝光、红光、黄光、紫光和白光) 。
- 若要切换为单色情境灯，请再按压灯光模式设定键，直到喜爱的颜色出现即可。
- 使用中如欲关闭情境灯，请重复按压灯光模式设定键至七彩情境灯轮替显示完毕为止。

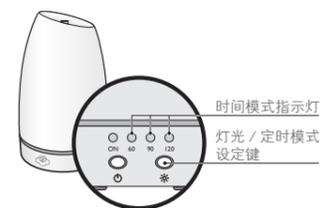

定时模式设定

- 定时设定只能用于连续雾化模式。
- 当机器运行时，长按定时模式设定键2秒，以启动定时设定，时间模式指示灯将闪烁。
- 在时间模式指示灯闪烁时，可按下定时模式设定键，依序选择60、90、120分钟或关闭定时，时间模式指示灯会随着所选的时间闪烁不同灯号，超过3秒未再按键，则定时设定完成，时间模式指示灯恒亮。
- 若欲更改定时设定，请重复上述2-3点步骤调整。
- 为确保使用安全，当水槽中水量不足时，机器将自动断电。

清洁保养

- 在清洁保养之前，电器必须切断电源，务必拔除电源线及移除主体上的电源线接头。
- 建议每次使用完毕即进行清洁保养，以确保机器正常运作。
- 打开水槽上盖，净空水槽，于水槽内加入适量温水 (水温勿超过40°C) 并滴入少许中性清洁剂，使用干净棉棒轻拭水槽内部及雾化器表面，待清洗完毕后以干净的布将机器擦干即可。
- 请勿使用酸性清洁剂，否则有可能导致机器损坏。
- 请慎防进气口、出风口或按键开关部位进水导致机器故障。
- 若水不慎进入机器主体，请静置至少6小时，待机器完全干燥后，方可使用。

Precautions before use

- Please read all instructions before using the product. Use it safely and correctly.
- This product is manufactured using the ultrasonic atomization principle, and while it does add slight humidity to the air, its primary purpose is as a fragrance diffuser.
- Never connect the power without placing the lid and cover on the unit.
- If the lid and cover are not properly covered, the water in the water tank may not be effectively atomized.
- Do not remove the lid or block the ventilation inlet under the main unit during usage.
- When the device is in operation and there is water in water tank, do not touch the atomizer as personal injury or device malfunction may occur.
- After each use, make sure to pour out any remaining water in the tank.
- Recommend to use tap water, soft water and mineral water, not recommend to use other type of water.
- It is important to not use steamed distilled water, as this water had the minerals removed from the water that affects the operation of the diffusers.
- Reverse osmosis (RO) water also has less minerals in the water and the diffuser will not be able to diffuse the mist properly and the desired results will not be achieved.
- Hard water is also not recommended. This would require that the oscillator be cleaned every time after use when using hard water, because the calcium carbonate from hard water will pile. Also, hard water is too heavy for oscillator to diffuse mist.
- Please use water with a temperature of 25 °C ~ 40 °C [77°F~104°F]；if using water below 5 °C/41°F, the diffuser starts longer.

Notes on the use of oils

- For best performance of this Aroma diffuser, we recommend using essential oil from SERENE HOUSE.
- Essential oils are highly concentrated oils. Use with caution. Do not spill the oils as they may damage plastic objects and furniture. If essential oil drops on the surface of this machine or other objects or on the floor, please clean by cloth immediately.
- Children and pets are very sensitive to essential oil that is unedible. Use with caution.
- Stop using the product and open the windows for ventilation. If you have difficulty breathing due to allergic reaction or any special physical conditions, such as pregnancy, lung failure, cancer, epilepsy or other illnesses, please consult your doctor before using essential oils.

Safety Precautions

- In order to prevent any accidents happening, must follow the instructions below as you are using this product:
 - The instructions of this manual are for users applying this product correctly, and preventing damage or property loss to users or others.
 - "WARNING" is central contents for preventing any accidents happening, please follow cautiously.

使用注意事項

- 使用本產品前，請仔細閱讀本說明書，若使用方法不當可能引起機器故障。
- 本產品使用超音波震盪霧化原理達到擴香效果，雖然可能會增加一些環境中的濕度，但主要用途仍為擴香，並非加濕機。
- 請勿在未裝水槽上蓋與上蓋的情況下將電源接通。
- 若未確實蓋緊上蓋，可能導致機器無法霧化或霧化效果不佳。
- 運轉過程中，請勿取下上蓋，或者堵塞主體下方風扇進氣口。
- 在機器運轉過程中，且水槽內有水時，請勿在電源尚未關閉前打開上蓋，或將手放到水槽內，否則有可能造成機器漏水、故障或受傷。
- 水槽內殘留的液體若超過24小時，建議倒掉並進行清潔保養步驟。
- 請使用自來水、軟水、礦泉水，不建議使用其他液體。
- 請注意不要使用茶飴水或純水，因水中礦物質已被過濾，將影響機器霧化效果，不易產生霧氣。
- 逆滲透(RO)水也只含微量礦物質，會造成機器霧化效果不佳，不易產生霧氣。
- 不建議使用硬水，因硬水的碳酸鈣會沉澱堆積，每次使用完後都必須清理震盪霧化器，此外硬水分子太重，無法有效產生霧化效果。
- 建議使用溫度25°C~40°C的水，如使用低於5°C的水，機器啟動所需的時間較久，此為正常情況。

精油使用注意事項

- 建議使用 SERENE HOUSE 精油；切勿使用含有香水、香精或含雜質的精油，以免傷害霧化器裝置。
- 精油屬於濃縮的高純度油，有可能溶解塑膠或傢俱塗裝，若不慎沾附於產品外側或傢俱上，請立即擦拭，避免產品外觀或傢俱褪色，使用時請特別小心。
- 幼童與寵物對香味非常敏感，在密閉空間內使用時請特別小心，及避免誤食。
- 使用期間如感覺不舒服或身體不適時，請立即停止使用，並打開窗戶使空氣流通，如您有任何身體上的特殊狀況，例如懷孕、肺衰竭、癌症或癩癩等症狀，使用精油前建議請先諮詢您的醫師。

注意事項

- 為了預防使用時發生意外，請務必遵守以下事項：
 - 本使用說明書的注意事項，是為了讓使用者能正確的使用本產品，防止對使用者或他人造成危害及財產損失。
 - 警告事項皆為預防意外發生的重要內容，請務必遵守。

使用注意事項

- 使用本产品前，请仔细阅读本说明书，若使用方法不当可能引起机器故障。
- 本产品使用超音波震荡雾化原理达到扩香效果，虽然可能会增加一些环境中的湿度，但主要用途仍为扩香，并非加湿机。
- 请勿在未装水槽上盖与上盖的情况下将电源接通。
- 若未确实盖紧上盖，可能导致机器无法雾化或雾化效果不佳。
- 运转过程中，请勿取下上盖，或者堵塞主体下方风扇进气口。
- 在机器运转过程中，且水槽内有水时，请勿在电源尚未关闭前打开上盖，或将手放到水槽内。否则有可能造成机器漏水、故障或受伤。
- 水槽内残留的液体若超过24小时，建议倒掉并进行清洁保养步骤。
- 请使用自来水、软水、矿泉水，不建议使用其他液体。
- 请注意不要使用茶飴水或纯水，因水中矿物质已被过滤，将影响机器雾化效果，不易产生雾气。
- 逆渗透(RO)水也只含微量矿物质，会造成机器雾化效果不佳，不易产生雾气。
- 不建议使用硬水，因硬水的碳酸钙会沉淀堆积，每次使用完后都必须清理震荡雾化器。此外硬水分子太重，无法有效产生雾化效果。
- 建议使用温度25°C~40°C的水，如使用低于5°C的水，机器启动所需的时间较久，此为正常情况。

精油使用注意事项

- 建议使用 SERENE HOUSE 精油；切勿使用含有香水、香精或含杂质的精油，以免伤害雾化器装置。
- 精油属于浓缩的高纯度油，有可能溶解塑料或家具涂装，若不慎沾附于产品外侧或家具上，请立即擦拭，避免产品外观或家具褪色，使用时请特别小心。
- 幼童与宠物对香味非常敏感，在密闭空间内使用时请特别小心，及避免误食。
- 使用期间如感觉不舒服或身体不适时，请立即停止使用，并打开窗户使空气流通，如您有任何身体上的特殊状况，例如怀孕、肺衰竭、癌症或癩癩等症状，使用精油前建议请先咨询您的医师。

注意事項

- 為了預防使用時發生意外，請務必遵守以下事項：
 - 本操作使用说明书的注意事项，是为了让用户能正确使用本产品，防止对用户或他人造成危害及财产损失。
 - 警告事项均预防意外发生的重要内容，请务必遵守。

 WARNING
 <ul style="list-style-type: none">Stop using the product immediately and unplug once smoke, smell, noise, or other unusual situations appear; it is very possible to cause fire hazard or electric shock, if the product operates continuously.
 <ul style="list-style-type: none">Do not alter, repair or dismantle this product on your own, it may cause fire hazard, electric shock, malfunction or injury.
 <ul style="list-style-type: none">Please follow local regulations when you are discarding consumables.
 <ul style="list-style-type: none">Please use a DC 5V adapter, otherwise the device may malfunction. The DC 5V adapter will heat up when the product is operating and it is normal. Do not connect the power during installation, as electric shock and injury may occur. The product should always be unplugged and the water tank should always be empty when moving the product or when the product is not in operation. When unplugging DC 5V adapter from the outlet, do not pull on the wire. Hold the DC 5V adapter firmly and then unplug it, or else damage or injury may occur.
 <ul style="list-style-type: none">If power cord or plug is damaged, or the product is dropped, hit, damaged, or broken, stop using it, this is possible to cause electric shocks or short circuit. Do not operate this product with wet hands, or drip or spill water or other liquids onto the product. These may cause electric shock or injuries. Do not deliberately place your eyes, nose or mouth close to the fragrance mist emitted as this may cause physical discomfort. Do not put fingers or hands into the product. In order to avoid any danger or accidents, parents guard is necessary when children use this product. Please follow the instructions to use this product; it is possible to result in poisoning or fire hazard, if other substances are used. Do not immerse this product in water, this product is for household use only. This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible. Do not let children use this product alone, keep it out of reach of children, or it may cause electric shocks or injuries. To avoid fire hazard, electric shocks, injuries or malfunction, please do not keep this product in the following places: <ul style="list-style-type: none">Under direct sunlight or high temperature environments, and keep away from fire sources. Places with high pressure or flammable materials. Do not place the product on soft surfaces such as carpet, as this may block the ventilation inlet on the bottom of the unit, causing the device to not function correctly. Do not over bend, heat, or place heavy objects on the power cord, or it may cause fire hazard or malfunction.

 警告
 <ul style="list-style-type: none">萬一出現冒煙、異味、雜音等異常現象，如繼續使用可能會導致火災、觸電等，請立即關閉電源，並移除電源線，停止使用。
 <ul style="list-style-type: none">請勿擅自對本產品進行改造、修理或拆解，否則有可能造成火災、觸電、故障或受傷。
 <ul style="list-style-type: none">耗材廢棄時，請遵照各國法規。
 <ul style="list-style-type: none">請使用DC 5V規格之變壓器，否則將導致機器故障。 當機器運作時，變壓器會發熱，乃屬正常現象。 請勿於安裝機器時連接電源，否則有可能造成觸電或受傷。 本產品於長期不用或移動時，請務必先關閉電源並拔下所有插頭，並請倒掉容器內的水，否則可能造成產品故障。 拔下電源線時，請勿拉扯，必須緊握電源線接頭再拔除，否則有可能造成電源線破損。
 <ul style="list-style-type: none">當電源線破損時，或是產品不小心摔落或受到撞擊而受損或破裂時，不得繼續使用本產品，否則有可能造成觸電、短路等問題。 請勿用濕的手操作本產品，或讓水等其他液體沾附、漸灑到上面，否則有可能造成觸電受傷。 請勿故意將眼口鼻靠進出霧口所排出的香氣霧氣，否則有可能造成身體不適。 請勿在本產品運作時將手或手指放置於本產品之內。 為避免危險，幼童須在成年人監督下使用產品，預防意外發生。 錯誤使用本產品，將可能導致火災等意外，請依指示使用本產品，若使用其他介質將可能引發中毒或火災等危險。 請勿將本產品浸入水中；本產品僅供空間香氛使用。 除非有專業人士的督導和指示，本產品不適合由身體、感官或精神能力欠佳，或缺乏經驗及知識的人士使用（包括兒童）。 建議放在幼童與寵物觸及不到的地方，避免意外發生。 請勿將本產品放置在以下地方，否則有可能引起火災、觸電、受傷、故障： <ul style="list-style-type: none">陽光直射或高溫環境，或靠近火源。 高壓物及易燃物周圍。 請勿置放於地毯等柔軟的地方，否則會堵塞底部的進氣口，造成機器無法正常運作。 請勿將電源線過度彎折、加熱或上方放置重物，否則有可能引起火災或故障。 連接延長線時，請注意所使用的電器規格，電源線應放置於明顯的地方，避免拉扯或絆倒。 若電源線損壞時，請由製造廠或其他服務處或具有相關資格的人員加以更換以避免危險。

- If an extension cord is used, please pay attention to the introductions to electric appliances using. The specifications should be the same. The cord should be placed at evident places to avoid children pulling or stumbling.
- In order to prevent accidents happening, if the power cord is damaged, please replace it via the manufacturer, other service departments, or staffs who own related qualifications.

Troubleshooting

When the product is broken-down, please confirm the following items before sending it for maintenance:

Machine does not operate
<ul style="list-style-type: none">Check the adapter <ul style="list-style-type: none">Make sure the adapter is fully and correctly plugged into the electrical outlet. Power cord not connected to the main unit <ul style="list-style-type: none">Be sure plug is correctly inserted into the power jack on the main unit . The power is correctly connected but the device still does not operate <ul style="list-style-type: none">Check whether the water tank contains any water and then recheck that the ON/OFF switch is on. Check that the water level in the tank does not exceed the maximum water level line (MAX); if this is the case, empty out the excess water.
The product does not atomize or does not atomize effectively

- The water temperature is too low
 - Please use tap water or mineral water at a temperature 25 °C~ 40 °C (77°F~104°F).
- Use hard water or steamed distilled water
 - Please use tap water or mineral water (The calcium carbonate from areal hard water will pile, please filter the water before using).
- Dirty atomizer
 - Perform maintenance according to the ‘Cleaning & Maintenance’ section of this manual.
- Placement of the product
 - Place on a firm, level, and stable surface as well as in light wind place .
- Check the water volume
 - Make sure the water does not exceed its designated water mark level (MAX) , or drain the excess water.
- The lid does not attach securely to the main unit
 - Reattach the lid according to the procedure in the ‘Operating Instructions’ section of this manual.

Please refer to the actual product specification indicated on the package.

<div> <p>Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848</p> </div>
--

障礙排除

疑似故障時，請在委託維修前確認以下事項：

機器無法運作
<ul style="list-style-type: none">電源線未正確接上主體的電源孔 <ul style="list-style-type: none">請確認電源線是否正確接上主體的電源孔。 電源已正確接上，但仍然不會運作 <ul style="list-style-type: none">請先確認水槽是否有水，然後再確認電源開關是否開啟。或確認是否超過最高水位線（ MAX ），如超出，請將超出水量倒出水槽外。
無法霧化或霧化效果不佳

- 水溫太低
 - 請使用溫度在25°C到40°C的自來水或礦泉水。
- 使用硬水或蒸餾水
 - 請使用自來水或礦泉水（某些地區的水質容易造成水垢，請將水過濾後再使用）。
- 霧化機髒污
 - 請依照本說明書的「清潔保養」方法進行保養。
- 機器放置在地毯等柔軟物體上，或者使用場所的風量過大
 - 請在水平、平穩及風量小的場所使用。
- 水槽內水位超過最高水位線（ MAX ）
 - 請將多餘的水倒掉。
- 上蓋未確實與主體蓋緊
 - 請注意水槽上蓋安裝時有方向性，請依定位口方向位置裝回並蓋緊。

產品規格如外包装所示
<div> <p>如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫，請勿自行動手拆解或維修本产品。 服務專線：+886 2 7721 8848</p> </div>

障礙排除

疑似故障時，請在委托维修前确认以下事项：

机器无法运作
<ul style="list-style-type: none">电源线未正确接上主体的电源孔 <ul style="list-style-type: none">请确认电源线是否正确接上主体的电源孔。 电源已正确接上，但仍然不会运作 <ul style="list-style-type: none">请先确认水槽是否有水，然后再确认电源开关是否开启。或确认是否超过最高水位线（ MAX ），如超出，请将超出水量倒出水槽外。
无法雾化或雾化效果不佳

- 水温太低
 - 请使用温度在25° C到40° C的自来水或矿泉水。
- 使用硬水或蒸馏水
 - 请使用自来水或矿泉水（某些地区的水质容易造成水垢，请将水过滤后再使用）。
- 雾化机脏污
 - 请依照本说明书的「清洁保养」方法进行保养。
- 机器放置在地毯等柔软物体上，或者使用场所的风量过大
 - 请在水平、平稳及风量小的场所使用。
- 水槽内水位超过最高水位线（ MAX ）
 - 请将多余的水倒掉。
- 上盖未确实与主体盖紧
 - 请注意水槽上盖安装时有方向性，请依定位口方向位置装回并盖紧。

产品规格如外包装所示
<div> <p>如产品出现其它故障，请联系SERENE HOUSE官方客服或请与专卖店联系。请勿自行动手拆解或维修本产品。 服务专线：+86 400–885–3268</p> </div>

Warranty Card

SERENE HOUSE is providing 1 Year Warranty Service, please keep this Warranty card properly (Will not reissue one another if missing), or you can register your product's warranty on our website to guarantee your product's warranty rights.

- To register your product's warranty→ <https://www.serenehouse.tw/forms/product-registration>
- Customer should follow the instruction to use the product, if the product is malfunction during Warranty Period, please keep your Warranty card and Receipt, to apply for maintenance services, we will repair or replace a new one for you.
 - Under these situations, there will be additional charge even though it is in Warranty Period.
 - Fire Hazzard, Broken, Gas explosion, Earthquake, Windstorm, Flood, Thunder, Abnormal Voltage, Natural disasters or Force Majeure that cause product to breakage or malfunction.
 - Content of Warranty Card is incomplete, alters, or not able to provide a valid purchase evidence.
 - Discolor, scars, stains and improper keeping that cause product to malfunction.
 - Replacement consumable accessories (batteries, remote control, cleansing brush)
 - When you need your product to be repaired, please register from website or contact to local distributor, we will contact you as soon as possible.
Maintenance Request Form→ <https://www.serenehouse.tw/forms/repair-application>

Customer Info				
Name		Mr / Mrs	Phone	
Address				
E-mail				
Product Info				
Name				
Model				
Manufacturer Code				
Retailer		Website	Product Registration	Maintenance Request Form
Purchase Date	Y	M	D	
Warranty Period	12 Months After Purchase (Not including consumable accessories)			<ul style="list-style-type: none">Customer Service's Phone Number: (02) 7721-8848 Customer Service's Email: service_tw@serene-house.com

產品保證書

SERENE HOUSE提供一年保固服務，請妥善保管本產品保證書（遺失恕不補發），或可於購買商品後上品牌官網提交產品保固登錄，確保您的商品保固權益。

產品保固登錄→<https://www.serenehouse.tw/forms/product-registration>

- 顧客依照使用說明書，於正常使用情況下，在保固期間內發生故障時，請備妥商品、本保證書及產品購買憑證（如發票、訂購單據等），申請維修服務，我們將為您免費修理或換新。
- 若出現下列情況，雖在保固期限內仍須採取額外報價付費修理：
 - 錯誤使用方式或不當的修理與改造所造成的故障或損傷。
 - 火災、損害、煤氣或天然氣爆炸、地震、風災、水災、打雷、電壓異常及其他天災或不可抗外力因素所造成的故障及損壞。
 - 保證書內容不完整、經人為塗改、或未能提供有效購買憑證。
 - 產品使用後的傷痕、變色、汙損及保管不當所造成的損壞。
 - 損耗性零件及配件的更換（如震盪片、清潔刷、電池、遙控器等）。
- 當您需要維修產品時，可先於官網提交維修申請，我們將盡速為您服務。
維修申請→<https://www.serenehouse.tw/forms/repair-application>

顧客資料				
姓 名		先生 / 女士	電 話	
通訊地址				
E-mail				
商品資訊				
商品資訊				
商品名稱		官方網站	產品登錄	維修申請
型 號				
生產序號				
銷售商				
購買日期	年	月	日	<ul style="list-style-type: none">客服專線：(02) 7721-8848 客服郵箱：service_tw@serene-house.com
保固期間	自購買日起12個月 (不含耗材)			

产品保修卡

为确保您的权益，请妥善保管本产品保修卡（遗失恕不补发）。如需服务时请出示本保证书，依照下列刊载之内容，提供免费维修。

- 顾客依照使用说明书，于正常使用情况下，在保固期间内发生故障时，请带着商品与本保证书，即可委托原购买门市代为修理，此属免费维修。
- 若出现下列情况，虽在保固期限内仍须采取额外报价付费修理：
 - 错误使用方式或不当的修理与改造所造成的故障或损伤。
 - 火灾、损害、煤气或天然气爆炸、地震、风灾、水灾、打雷、电压异常及其他天灾或不可抗外力因素所造成的故障及损坏。
 - 保证书上未注明顾客姓名、购买日期及购买门市，或是保证书内容经人为涂改时。
 - 使用后的伤痕、变色、污损及保管不当所造成的损坏。
 - 损耗性零件及配件的更换（如震荡片、清洁刷、电池、遥控器等等）。

顧客資料				
姓 名		先生 / 女士	电 话	
地 址				
E-mail				
商品信息				
商品名称		专卖店店章盖章处 (请务必盖章)		
型 号				
生产序号				
销售商				
购买日期	年	月	日	<div> <p>东莞静庐商贸有限公司 广东省东莞市虎门镇基智北路5号2栋 service@serenehouse.com.cn +86 400 885 3268</p> </div>
保修期间	自购买日起12个月 (不含耗材)			

- 栏目填写不清、不实或空白时，本保修卡无效，请填写姓名、电话与地址；如未填写购买日期与加盖专卖店店章，请立即向购买本商品的门市提出填写要求，本保修卡只附贈一次，请务必小心保管，遗失恕不补发。