




Aroma Diffuser (With Intermittent Mode)



Light house Instruction Manual

Product & Accessories

- Please check to ensure the following items are present and inspect for damage before use.
- | | | | |
|---------------------------|---------------------|-----------------|--------------|
| ① Mist Nozzle | ② Cover | ③ Control panel | ④ Main unit |
| ⑤ Power (ON / OFF) | ⑥ Atomizer | ⑦ Water tank | ⑧ Vent |
| ⑨ Water mark- MAX (100ml) | ⑩ Ventilation inlet | ⑪ Power jack | ⑫ AC adapter |

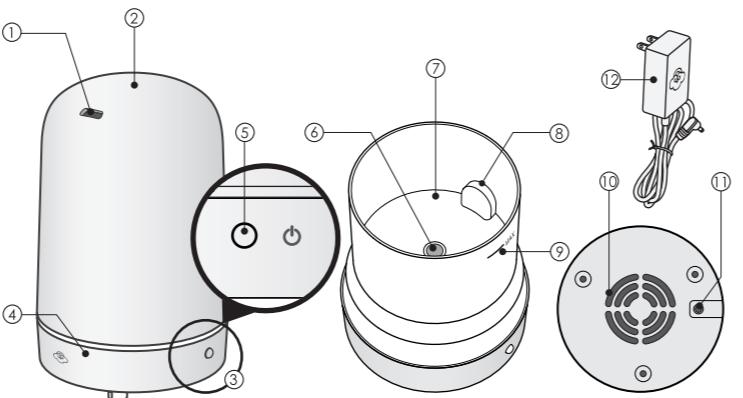

(The image is for reference only. Actual product may vary.)



香氛霧化機 (連續 / 間歇功能)




明燈

操作使用說明書

產品與配件介紹

- 使用前・請確認以下物品是否齊全・有無破損情況。

- | | | | |
|-----------------------|-------|--------|----------|
| ① 噴霧口 | ② 上蓋 | ③ 控制面板 | ④ 主體 |
| ⑤ 電源開關 | ⑥ 霧化器 | ⑦ 水槽 | ⑧ 出風口 |
| ⑨ 最高水位線-MAX (100ml) | ⑩ 進氣口 | ⑪ 電源孔 | ⑫ 變壓器電源線 |

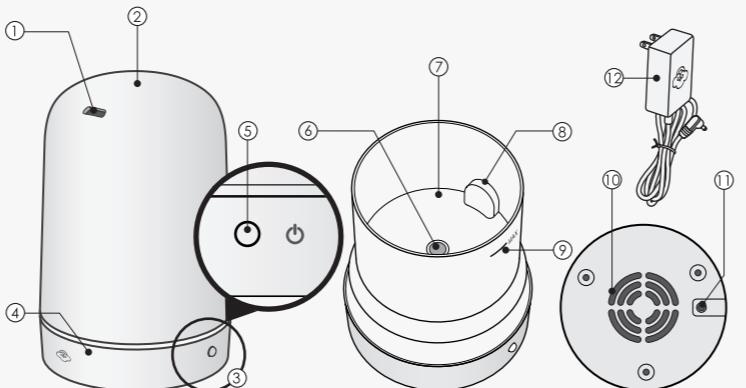


(圖片僅供參考・請以實品為主)

产品与配件介绍

- 使用前，请确认以下物品是否齐全，有无破损情况。


- | | | | |
|-----------------------|-------|--------|----------|
| ① 喷雾口 | ② 上盖 | ③ 控制面板 | ④ 主体 |
| ⑤ 电源开关 | ⑥ 雾化器 | ⑦ 水槽 | ⑧ 出风口 |
| ⑨ 最高水位线-MAX (100ml) | ⑩ 进气口 | ⑪ 电源孔 | ⑫ 适配器电源线 |

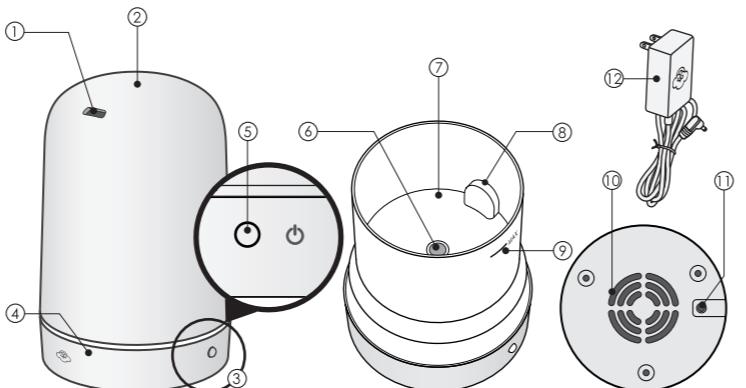

(图片仅供参考，请以实物为主。)

Operating Instructions

- Always place your aroma diffuser on a firm, flat and level surface.
- Condensation may occur around the aroma diffuser when operating in high humidity environment.
- Performance and time of diffusing scents may vary due to room's size, ventilation and humidity.

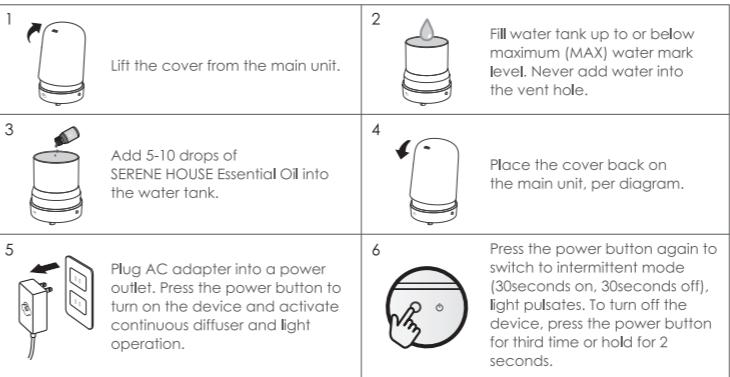

- Please read all instructions before using the product. Use it safely and correctly.
- Please use water with a temperature of 25 °C ~ 40 °C (77°F~104°F); if using water below 5 °C /41°F, the diffuser starts longer.
- Never allow water or oil to enter the vent.
- If the cover is not properly covered, the water in the water tank may not be effectively atomized.
- Do not move or tip the device when it is in operation and there is water or oil in the tank.
- For safety purposes, the diffuser is programmed to stop operating automatically when it detects the water is below its programmed level.
- Please empty the water in the water tank and follow step 1 to 6 when reusing this device. For proper handling and maintenance, please refer to the Cleaning & Maintenance section in this manual.

Cleaning & Maintenance

- Always disconnect the AC adapter from the electrical outlet before cleaning.
- For best atomizing performance, be sure to clean the aroma diffuser after each use.
- Empty the water from the tank, add a small amount of warm water (do not exceed 40°C/104°F), and a few drops of neutral cleanser. Use a cotton swab to clean the atomizer and internal surface of the water tank. Gently rinse off the soap out of the water tank after washing.
- Never use acidic cleansers as this may cause malfunction.
- Be careful to not allow water to enter the vent, the ventilation inlet and the buttons.
- If water accidentally flows into the ventilation inlet, vent or control buttons, allow internal mechanism to dry thoroughly (at least 6 hours) before the next use, otherwise this may cause the device to malfunction.

Precautions before use

- This product is manufactured using the ultrasonic atomization principle, and while it does add slight humidity to the air, its primary purpose is as a fragrance diffuser.
- Never connect the power without placing the cover.
- Do not remove the lid or block the ventilation inlet under the main unit during usage.
- When the device is in operation and there is water in water tank, do not touch the atomizer as personal injury or device malfunction may occur.
- After each use, make sure to pour out any remaining water in the tank.
- Make sure to wipe clean with a cloth if oil drops on the main unit or floor.
- Soft water is best for your Serene House diffuser. You may also use bottled or mineral water.
- It is important to not use steamed distilled water, as this water had the minerals removed from the water that affects the operation of the diffusers.
- Reverse osmosis (RO) water also has less minerals in the water and the diffuser will not be able to diffuse the mist properly and the desired results will not be achieved.
- Hard water is also not recommended. This would require that the oscillator be cleaned every time after use when using hard water, because the calcium carbonate from hard water will pile. Also, hard water is too heavy for oscillator to diffuse mist.

Notes on the use of oils

- For best performance of this Aroma diffuser, we recommend using essential oil from SERENE HOUSE.
- Essential oils are highly concentrated oils. Use with caution. Do not spill the oils as they may damage plastic objects and furniture. If essential oil drops on the surface of this machine or other objects or on the floor, please clean by cloth immediately.
- Children and pets are very sensitive to essential oil that is undiluted. Use with caution.

清潔保養

- 在清潔保養之前，電器必須切斷電源，務必拔除變壓器及移除主體上的變壓器電源線接頭。
- 建議每次使用完畢即進行清潔保養，以確保機器正常運作。
- 於水槽內加入適量溫水（水溫勿超過40°C）並滴入少許中性清潔劑，使用乾淨棉棒輕拭水槽內部及霧化器表面，待清洗完畢後以乾淨的布將機器擦乾即可。
- 請勿使用酸性清潔劑，否則有可能導致機器損壞。
- 請慎防進氣口、出風口或按鍵開關部位進水導致機器故障。
- 若水不慎進入機器主體，請靜置至少6小時，待機器完全乾燥後，方可使用。

使用注意事項

- 本產品使用超音波震盪霧化原理達到擴香效果，雖未達加濕機標準，但可降低環境乾燥度。
- 請勿在未裝水槽上蓋的情況下將電源接通。
- 運轉過程中，請勿取下上蓋，或者堵塞主體下方風扇進氣口。
- 在機器運轉過程中，且水槽內有水時，請勿在電源尚未關閉前打開上蓋，或將手放到水槽內。否則有可能造成機器漏水，故障或受傷。
- 水槽內殘留的水如果超過24小時，請務必倒掉並進行清潔保養步驟。
- 露油若不慎滴到水槽外側或地板等周圍物體上，請立即用布擦拭乾淨。
- SERENE HOUSE 香氛霧化機水质建議：請使用軟水或礦泉水，不建議使用其他液體。
- 請注意不要使用蒸餾水或純水，因水中礦物質已被過濾，將影響機器霧化效果，不易產生霧氣。
- 反滲透(RO)水也只含微量礦物質，會造成機器霧化效果不佳，不易產生霧氣。
- 不建議使用硬水。因硬水的碳酸鈣會沉澱堆積，每次使用完後都必須清理震盪霧化器。此外硬水分子太重，無法有效產生霧化效果。

精油使用注意事項

- 建議使用 SERENE HOUSE 精油；切勿使用含有香水、香精或含杂质的精油，以免傷害霧化器裝置。
- 精油屬於濃縮的高純度油，有可能溶解塑料或傢俱塗裝，若不慎沾附於產品外側或傢俱上，請立即擦拭，避免產品外觀或傢俱褪色，使用時請特別小心。
- 幼童與寵物對香味非常敏感，在密閉空間內使用時請特別小心，及避免誤食。
- 使用期間如感覺不舒服或身體不適時，請立即停止使用，並打開窗戶使空氣流通。如您有任何身體上的特殊狀況，例如懷孕、肺衰竭、癌症或癲癇等症狀，使用精油前建議請先諮詢您的醫師。

清洁保养

- 在清洁保养之前，电器必须切断电源，务必拔除适配器及移除主体上的适配器电源线接头。
- 建议每次使用完毕即进行清洁保养，以确保机器正常运作。
- 于水槽内加入适量温水（水温勿超过40°C）并滴入少许中性清洁剂，使用干净棉棒轻拭水槽内部及雾化器表面，待清洗完后以干净的布将机器擦干即可。
- 请勿使用酸性清洁剂，否则有可能导致机器损坏。
- 请慎防进气口、出风口或按键开关部位进水导致机器故障。
- 若水不慎进入机器主体，请静置至少6小时，待机器完全干燥后，方可使用。

使用注意事项

- 本产品使用超音波震荡雾化原理达到扩香效果，虽未达加湿机标准，但可降低环境干燥度。
- 请勿在未装水槽上盖的情况下将电源接通。
- 运转过程中，请勿取下上盖，或者堵塞主体下方风扇进气口。
- 在机器运转过程中，且水槽内有水时，请勿在电源尚未关闭前打开上盖，或将手放到水槽内。否则有可能造成机器漏水，故障或受伤。
- 水槽内残留的水如果超过24小时，请务必倒掉并进行清洁保养步骤。
- 精油若不慎滴到水槽外侧或地板等周围物体上，请立即用布擦拭干净。
- SERENE HOUSE 香氛雾化机水质建议：请使用软水或矿泉水，不建议使用其他液体。
- 请注意不要使用蒸馏水或纯水，因水中矿物质已被过滤，将影响机器雾化效果，不易产生雾气。
- 反渗透(RO)水也只含微量矿物质，会造成机器雾化效果不佳，不易产生雾气。
- 不建议使用硬水。因硬水的碳酸钙会沉淀堆积，每次使用完后都必须清理震荡雾化器。此外硬水分子太重，无法有效产生雾化效果。

精油使用注意事项

- 建议使用 SERENE HOUSE 精油；切勿使用含有香水、香精或含杂质的精油，以免伤害雾化器装置。
- 精油属于浓缩的高纯度油，有可能溶解塑料或家具涂层，若不慎沾附于产品外侧或家具上，请立即擦拭，避免产品外观或家具褪色，使用时请特别小心。
- 幼童与宠物对香味非常敏感，在密闭空间内使用时请特别小心，及避免误食。
- 使用期间如感觉不舒服或身体不适时，请立即停止使用，并打开窗户使空气流通。如您有任何身体上的特殊状况，例如怀孕、肺衰竭、癌症或癫痫等症状，使用精油前建议请先咨询您的医师。

• Stop using the product and open the windows for ventilation. If you have difficulty breathing due to allergic reaction or any special physical conditions, such as pregnancy, lung failure, cancer, epilepsy or other illnesses, please consult your doctor before using essential oils.

Safety Precautions

In order to prevent any accidents happening, must follow the instructions below as you are using this product:

- The instructions of this manual are for users applying this product correctly, and preventing damage or property loss to users or others.
- "WARNING" is central contents for preventing any accidents happening, please follow cautiously.

WARNING

• Stop using the product immediately and unplug once smoke, smell, noise, or other unusual situations appear; it is very possible to cause fire hazard or electric shock, if the product operates continuously.

• Do not alter, repair or dismantle this product on your own, it may cause fire hazard, electric shock, malfunction or injury.

• Please follow local regulations when you are discarding consumables.

• Please use a DC 24V / 500 mA adapter, otherwise the device may malfunction.

• The AC adapter will heat up when the product is operating and it is normal.

• Only the included AC adapter may be used with the product, using other AC adapter may result in fire.

• Do not connect the power during installation, as electric shock and injury may occur.

• The product should always be unplugged and the water tank should always be empty when moving the product or when the product is not in operation.

• When unplugging the AC adapter from the outlet, do not pull on the wire. Hold the AC adapter firmly and then unplug it, or else damage or injury may occur.

• If power cord or plug is damaged, or the product is dropped, hit, damaged, or broken, stop using it, this is possible to cause electric shocks or short circuit.

• Do not operate this product with wet hands, or drip or spill water or other liquids onto the product. These may cause electric shock or injuries.

注意事項

為了預防使用時發生意外，請務必遵守以下事項：

• 本使用說明書的注意事項，是為了讓使用者能正確的使用本產品，防止對使用者或他人造成危害及財產損失。

• 警告事項皆為預防意外發生的重要內容，請務必遵守。

警告

• 萬一出現冒煙、異味、雜音等異常現象時，仍繼續使用的話，可能導致火災、觸電等，請立即將電源移除，停止使用。

• 請勿擅自對本產品進行改造、修理或拆解，否則有可能造成火災、觸電、故障或受傷。

• 耗材廢棄時，請遵照各國法規。

• 請使用DC24V / 500mA規格之變壓器，否則將導致機器故障。

• 當機器運作時，變壓器會發熱，乃屬正常現象。

• 請使用本產品所附變壓器，如使用它牌變壓器，可能會引發機器故障或火災。

• 請勿於安裝機器時連接電源，否則有可能造成觸電或受傷。

• 本產品於長期不使用或移動時，請務必關閉電源並拔下所有插頭，並請倒掉容器內的水，否則可能造成產品故障。

• 拔下變壓器時，請勿拉扯電源線，必須緊握變壓器或插頭後再進行拔除，否則有可能造成變壓器破損或受傷。

• 當電源線或插頭破損時，或是產品不小心摔落或受到撞擊而受損或破裂時，不得繼續使用本產品，否則有可能造成觸電、短路等問題。

• 請勿用濕的手操作本產品，或讓水等其他液體沾附、濺灑到上面，否則有可能造成觸電受傷。

• 請勿故意將眼口鼻靠近出霧口所排出的香氛霧氣，否則有可能造成身體不適。

• 請勿在本產品運作時將手或手指放置於本產品之內。

注意事项

为了预防使用时发生意外，请务必遵守以下事项：

• 本使用说明书的注意事项，是为了让使用者能正确的使用本产品，防止对使用者或他人造成危害及财产损失。

• 警告事项皆为预防意外发生的重要内容，请务必遵守。

警告

• 万一出现冒烟、异味、杂音等异常现象时，仍继续使用的话，可能导致火灾、触电等，请立即将电源移除，停止使用。

• 请勿擅自对本产品进行改造、修理或拆解，否则有可能造成火灾、触电、故障或受伤。

• 耗材废弃时，请遵照各国法规。

• 请使用DC24V / 500mA规格之适配器，否则将导致机器故障。

• 当机器运作时，适配器会发热，乃属正常现象。

• 请使用本产品所附适配器，如使用它牌适配器，可能会引发机器故障或火灾。

• 请勿于安装机器时连接电源，否则有可能造成触电或受伤。

• 本产品于长期不使用或移动时，请务必关闭电源并拔下所有插头，并请倒掉容器内的水，否则可能造成产品故障。

• 拔下适配器时，请勿拉扯电源线，必须紧握适配器或插头后再进行拔除，否则有可能造成适配器破损或受伤。

• 当电源线或插头破损时，或是产品不小心摔落或受到撞击而受损或破裂时，不得继续使用本产品，否则有可能造成触电、短路等问题。

• 请勿用湿的手操作本产品，或让水等其他液体沾附、溅洒到上面，否则有可能造成触电受伤。

• 请勿故意将眼口鼻靠近出雾口所排出的香氛雾气，否则有可能造成身体不适。

• 请勿在本产品运作时将手或手指放置于本产品之内。

• Do not deliberately place your eyes, nose or mouth close to the fragrance mist emitted as this may cause physical discomfort.

• Do not put fingers or hands into the product.

• In order to avoid any danger or accidents, parents guard is necessary when children use this product.

• Please follow the instructions to use this product; it is possible to result in poisoning or fire hazard, if other substances are used. Do not immerse this product in water, this product is for household use only.

• This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible.

• Do not let children use this product alone, keep it out of reach of children, or it may cause electric shocks or injuries.

• To avoid fire hazard, electric shocks, injuries or malfunction, please do not keep this product in the following places:

- Under direct sunlight or high temperature environments, and keep away from fire sources.

- Places with high pressure or flammable materials.

• Do not place the product on soft surfaces such as carpet, as this may block the ventilation inlet on the bottom of the unit, causing the device to not function correctly.

• Do not over bend, heat, or place heavy objects on the power cord, or it may cause fire hazard or malfunction.

• If an extension cord is used, please pay attention to the introductions to electric appliances using. The specifications should be the same. The cord should be placed at evident places to avoid children pulling or stumbling.

• In order to prevent accidents happening, if the power cord is damaged, please replace it via the manufacturer, other service departments, or staffs who own related qualifications.

Troubleshooting

When the product is broken-down, please confirm the following items before sending it for maintenance:

Machine does not operate

• Check the adapter

→ Make sure the adapter is fully and correctly plugged into the electrical outlet.

• Power cord not connected to the main unit

→ Be sure plug is correctly inserted into the power jack on the main unit.

• 霧化器髒污

→ 請依照本說明書的「清潔保養」方法進行保養。

• 机器放置在地毯等柔軟物體上，或者使用場所的風量過大

→ 請在水平、平穩及風量小的場所使用。

• 水槽內水位超過最高水位線 (MAX)

→ 請將多餘的清水倒掉。

• 上蓋未確實與主體蓋緊

→ 請注意水槽上蓋安裝時有方向性，請依定位口方向位置裝回並蓋緊。

產品規格

• The power is correctly connected but the device still does not operate

→ Check whether the water tank contains any water and then recheck that the ON/OFF switch is on. Check that the water level in the tank does not exceed the maximum water levelline (MAX); if this is the case, empty out the excess water.

The product does not atomize or does not atomize effectively

• The water temperature is too low

→ Please use tap water or mineral water at a temperature 25 ° C ~ 40 ° C(77°F~104°F).

• Use hard water or steamed distilled water

→ Please use tap water or mineral water [The calcium carbonate from areas hard water will pile, please filter the water before using].

• Dirty atomizer

→ Perform maintenance according to the 'Cleaning & Maintenance' section of this manual.

• Placement of the product

→ Place on a firm, level, and stable surface as well as in light wind place .

• Check the water volume

→ Make sure the water does not exceed its designated water mark level (MAX) , or drain the excess water.

• The lid does not attach securely to the main unit

→ Reattach the lid according to the procedure in the 'Operating Instructions' section of this manual.

Product Specification

Product Name: Light House

Aroma Diffuser

Product Model: 171201068

Product Material: Plastic

Product Size: Ø9 X H14.7cm

Product Weight: 310g ± 5%

Power Input: AC100 ~ 240V, 50/60Hz

Output: DC 24V

Rated Power: 4W

Operating Mode: Continuous mode

/ Intermittent mode

Continuous Time: ≥ 5hr

Intermittent Time: ≥ 10hr

Suggested Room Size: 10~15 m²

Ultrasonic Frequency(MHz): 2.45 ± 10 %

Water Tank Capacity: 100mL

Accessories Included: AC Adapter,

Instruction Manual

and Warranty card

SERENE HOUSE

Design Team: Made In China

连续使用時間：≥ 5 小時

間歇使用時間：≥ 10 小時

建議使用空間：10~15 m²

頻率 (MHz) : 2.45 ± 10 %

水槽容量：100ml

配件：變壓器電源線、說明書與保證書

設計：SERENE HOUSE

中國製造

連續霧化模式 / 間歇霧化模式

如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。

請勿自行拆解或維修本產品。

服務專線：+886 2 7721 8848

• 雾化器脏污

→ 请依照本说明书的「清洁保养」方法进行保养。

• 机器放置在地毯等柔软物体上，或者使用场所的风量过大

→ 请在水平、平稳及风量小的场所使用。

• 水槽内水位超过最高水位线 (MAX)

→ 请将多余的清水倒掉。

• 上盖未确实与主体盖紧

→ 请注意水槽上盖安装时有方向性，请依定位口方向位置装回并盖紧。

产品规格

产品名称: 明灯 香氛雾化机

产品型号: 171201068

产品材质: 塑胶

产品尺寸: 直径9 X 高14.7公分

产品重量: 310g ± 5%

电压: INPUT: AC100 ~ 240V , 50/60HZ

OUTPUT: DC 24V

额定功率: 4W

运作模式: 连续雾化模式 / 间歇雾化模式

连续使用时间: ≥ 5 小时

间歇使用时间: ≥ 10 小时

建议使用空间: 10 ~ 15 m²

频率 (MHz): 2.45 ± 10 %