




### Aroma Diffuser ( With Intermittent Mode )


#### Instruction Manual

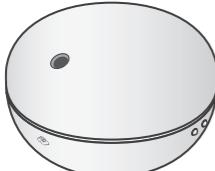

MACARON

### Product & Accessories

- Please check to ensure the following items are present and inspect for damage before use.
- ① Cover      ② Mist Nozzle      ③ Main Unit      ④ Control Panel
- ⑤ Power Button      ⑥ Light Button      ⑦ Vent      ⑧ Atomizer
- ⑨ Water Tank      ⑩ Water Mark - MAX(250ML)      ⑪ Ventilation Inlet
- ⑫ Power Jack      ⑬ AC Adapter

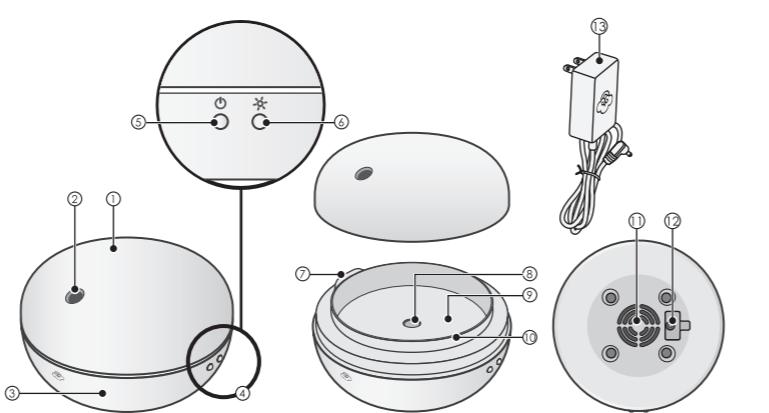


(The image is for reference only. Actual product may vary.)



### 香氛霧化機 (連續 / 間歇功能)


#### 操作使用說明書

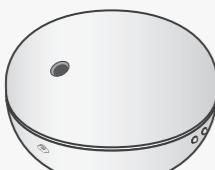

馬卡龍

### 產品與配件介紹


- 使用前，請確認以下物品是否齊全，有無破損情況。
- ① 上蓋      ② 噴霧口      ③ 主體      ④ 控制面板
- ⑤ 電源開關      ⑥ 燈光模式設定鍵      ⑦ 出風口      ⑧ 霧化器
- ⑨ 水槽      ⑩ 最高水位線-MAX ( 250ml )      ⑪ 進氣口
- ⑫ 變壓器電源線

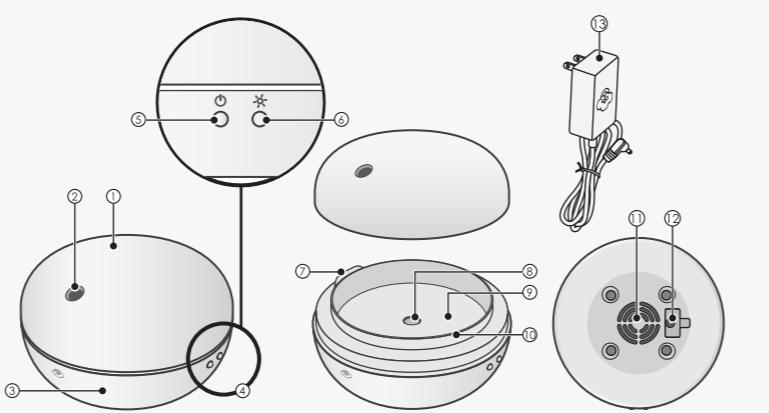

(圖片僅供參考，請以實品為主)


### Operating Instructions

- Always place your aroma diffuser on a firm, flat and level surface.
- Condensation may occur around the aroma diffuser when operating in high humidity environment.

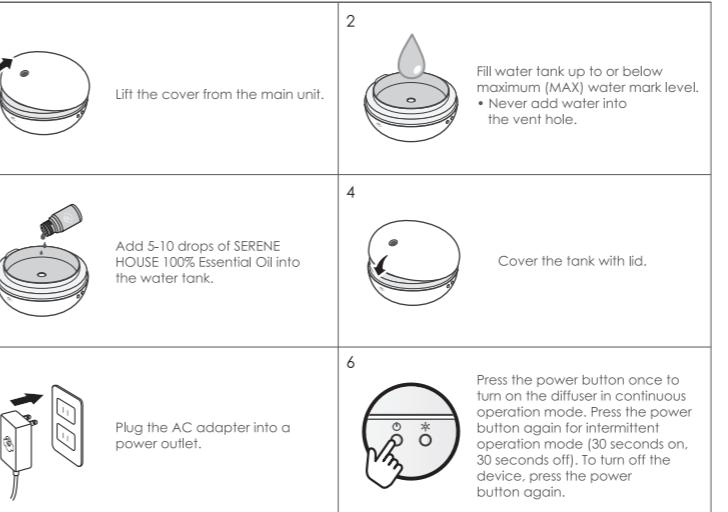

### Light Instructions

- Press the power button once to turn on the device and begin continuous operation. Device will automatically activate strong warm white light mode.
- To select a soft light mode, press the light button once.
- To switch off the light, press the light button again.

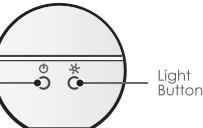

### Cleaning & Maintenance

- Always disconnect the power and unplug the adapter before cleaning.
- For best atomizing performance, be sure to clean the product after each use.
- Remove the lid, empty the water from the tank, add a small amount of warm water ( do not exceed 40°C/104°F), and a few drops of neutral cleanser. Use a cotton swab to clean the atomizer and internal surface of the water tank. Gently rinse all the soap out of the water tank after washing.
- Never use acidic cleansers as this may cause malfunction.
- Be careful not to allow water to enter the vent, the ventilation inlet and the buttons.
- If any liquids accidentally flows into the ventilation inlet, vent or control buttons, allow internal mechanism to dry thoroughly (at least 6 hours) before the next use, otherwise this may cause the product to malfunction.

### Precautions before use

- This product is manufactured using the ultrasonic atomization principle, and while it does add slight humidity to the air, its primary purpose is as a fragrance diffuser.
- Never connect the power without placing the cover on the unit.
- If the cover is not properly covered, the water in the water tank may not be effectively atomized.
- Do not remove the cover or block the ventilation inlet under the main unit during usage.
- When the device is in operation and there is water in water tank, do not touch the atomizer as personal injury or device malfunction may occur.
- After each use, make sure to pour out any remaining water in the tank.
- Recommend to use tap water, soft water and mineral water, not recommend to use other type of water.
- It is important to not use steamed distilled water, as this water had the minerals removed from the water that affects the operation of the diffusers.
- Reverse osmosis (RO) water also has less minerals in the water and the diffuser will not be able to diffuse the mist properly and the desired results will not be achieved.
- Hard water is also not recommended. This would require that the oscillator be cleaned every time after use when using hard water, because the calcium carbonate from hard water will pile. Also, hard water is too heavy for oscillator to diffuse mist.
- Please use water with a temperature of 25 °C ~ 40 °C ( 77°F~104°F ); if using water below 5 °C/41°F, the diffuser starts longer.

### 燈光設定

- 按 下 電 源 開 關 啟動 機 器 後，燈 光 亮 度 100%。
- 按 下 燈 光 模 式 設 定 鍵，燈 光 變 暗。
- 再 次 按 下 燈 光 模 式 設 定 鍵，燈 光 關 闭。



### 清潔保養

- 在清潔保養之前，需先切斷電源，並請務必拔除變壓器插頭及移除主體上的接頭。
- 建議每次使用完畢即進行清潔保養，以確保機器正常運作。
- 於水槽內加入適量溫水（水溫勿超過40°C），並滴入少許中性清潔劑，使用乾淨棉棒輕拭水槽內部及霧化器表面，待清潔完畢後以乾淨的布將機器擦乾即可。
- 請勿使用酸性清潔劑，否則有可能導致機器損壞。
- 請慎防進氣口、出風口或按鍵開關部位進水導致機器故障。
- 若有液體不慎進入機器主體，請靜置至少6小時，待機器完全乾燥後，方可使用。

### 使用注意事項

- 本產品使用超音波震盪霧化原理達到擴香效果，雖然可能會增加一些環境中的濕度，但主要用途仍為擴香，並非加濕機。
- 請勿在未裝上蓋的情況下接通電源。
- 若未確實蓋上蓋，可能導致機器無法霧化或霧化效果不佳。
- 運轉過程中，請勿取下上蓋，或者堵塞主體下方風扇進氣口。
- 在機器運轉過程中，且水槽內有水時，請勿在電源尚未關閉前打開上蓋，或將手放到水槽內。否則有可能造成機器漏水、故障或受傷。
- 水槽內殘留的液體若超過24小時，建議倒掉並進行清潔保養步驟。
- 請使用自來水、軟水、礦泉水，不建議使用其他液體。
- 請注意不要使用蒸餾水或純水，因水中礦物質已被過濾，將影響機器霧化效果，不易產生霧氣。
- 逆滲透(RO)水也只含微量礦物質，會造成機器霧化效果不佳：不易產生霧氣。
- 不建議使用硬水，因硬水的碳酸鈣會沉澱堆積，每次使用完後都必須清理震盪霧化器。此外硬水分子太重，無法有效產生霧化效果。
- 建議使用溫度25°C~40°C的水，如使用低於5°C的水，機器啟動所需的时间較久，此為正常情況。

### 灯光设定

- 按 下 電 源 開 關 啟動 機 器 後，燈 光 亮 度 100%。
- 按 下 燈 光 模 式 設 定 鍵，燈 光 變 暗。
- 再 次 按 下 燈 光 模 式 設 定 鍵，燈 光 關 闭。



### 清洁保养

- 在清洁保养之前，需先切断电源，并请务必拔除适配器插头及移除主体上的接头。
- 建议每次使用完毕即进行清洁保养，以确保机器正常运作。
- 于水槽内加入适量温水（水温勿超过40°C），并滴入少许中性清洁剂，使用干净棉棒轻拭水槽内部及雾化器表面，待清洁完毕后以干净的布将机器擦干即可。
- 请勿使用酸性清洁剂，否则有可能导致机器损坏。
- 请慎防进气口、出风口或按键开关部位进水导致机器故障。
- 若有液体不慎进入机器主体，请静置至少6小时，待机器完全干燥后，方可使用。


### 使用注意事项

- 本产品使用超音波震荡雾化原理达到扩香效果，虽然可能会增加一些环境中的湿度，但主要用途仍为扩香，并非加湿机。
- 请勿在未装上盖的情况下接通电源。
- 若未确实盖上盖，可能导致机器无法雾化或雾化效果不佳。
- 运转过程中，请勿取下上盖，或者堵塞主体下方风扇进气口。
- 在机器运转过程中，且水槽内有水时，请勿在电源尚未关闭前打开上盖，或将手放到水槽内。否则有可能造成机器漏水、故障或受伤。
- 水槽内残留的液体若超过24小时，建议倒掉并进行清洁保养步骤。
- 请使用自来水、软水、矿泉水，不建议使用其他液体。
- 请注意不要使用蒸馏水或纯水，因水中矿物质已被过滤，将影响机器雾化效果，不易产生雾气。
- 逆渗透(RO)水也只含微量元素，会造成机器雾化效果不佳，不易产生雾气。
- 不建议使用硬水，因硬水的碳酸钙会沉淀堆积，每次使用完后都必须清理震荡雾化器。此外硬水分子太重，无法有效产生雾化效果。
- 建议使用温度25°C~40°C的水，如使用低于5°C的水，机器启动所需的时间较久，此为正常情况。



### 香氛霧化機 (連續 / 間歇模式)


#### 操作使用說明書

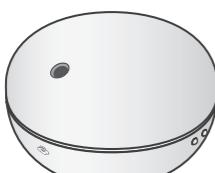

馬卡龍

### 产品与配件介绍

- 使用前，请确认以下物品是否齐全，有无破损情况。
- ① 上盖      ② 喷雾口      ③ 主体      ④ 控制面板
- ⑤ 电源开关      ⑥ 灯光模式设定键      ⑦ 出风口      ⑧ 雾化器
- ⑨ 水槽      ⑩ 最高水位线-MAX ( 250ml )      ⑪ 电源孔
- ⑫ 适配器电源线

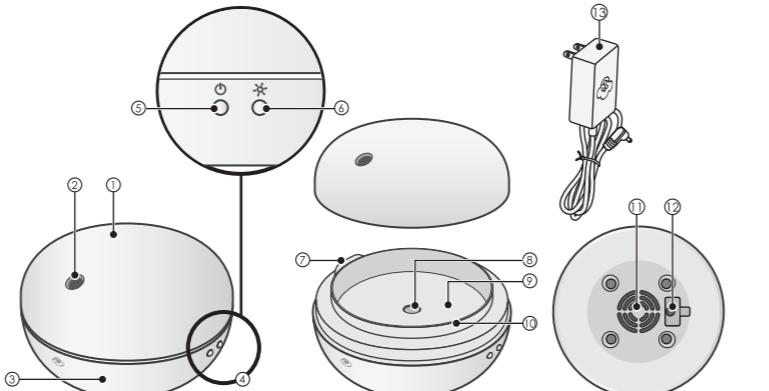

(图片仅供参考，请以实品为主)

## Notes on the use of oils

- For best performance of this Aroma diffuser, we recommend using essential oil from SERENE HOUSE.
- Essential oils are highly concentrated oils. Use with caution. Do not spill the oils as they may damage plastic objects and furniture. If essential oil drops on the surface of this machine or other objects or on the floor, please clean by cloth immediately.
- Children and pets are very sensitive to essential oil that is undiluted. Use with caution.
- Stop using the product and open the windows for ventilation. If you have difficulty breathing due to allergic reaction or any special physical conditions, such as pregnancy, lung failure, cancer, epilepsy or other illnesses, please consult your doctor before using essential oils.

## Safety Precautions

In order to prevent any accidents happening, must follow the instructions below as you are using this product:

- The instructions of this manual are for users applying this product correctly, and preventing damage or property loss to users or others.
- "WARNING!" is central contents for preventing any accidents happening, please follow cautiously.

## WARNING

- Stop using the product immediately and unplug once smoke, smell, noise, or other unusual situations appear; it is very possible to cause fire hazard or electric shock, if the product operates continuously.
- Do not alter, repair or dismantle this product on your own, it may cause fire hazard, electric shock, malfunction or injury.
- Please follow local regulations when you are discarding consumables.
- Please use a DC 24V/ 500mA adapter, otherwise the product mal malfunction.
  - The AC adapter will heat up when the product is operating and it is normal.
  - Do not connect the power during installation, as electric shock and injury may occur.
  - The product should always be unplugged and the water tank should always be empty when moving the product or when the product is not in operation.
  - While unplugging the power cord, please hold it tight or may cause damage to the power cord.

## 精油使用注意事項

- 本產品建議與SERENE HOUSE精油搭配使用，切勿使用含有香水、香精或含雜質的精油，以免傷害霧化器裝置。
- 精油屬於濃縮的高純度油，有可能溶解塑膠或傢俱塗裝，若不慎沾附於產品外側或傢俱上，請立即擦拭，避免產品外觀或傢俱褪色。
- 幼童與寵物對香味非常敏感，在密閉空間內使用時請特別小心，及避免誤食。
- 使用期間如感覺不舒服或身體不適，請立即停止使用，並打開窗戶使空氣流通。如您有任何身體上的特殊狀況，例如懷孕、肺衰竭、癌症或癲癇等症狀，使用前建議先諮詢您的醫師。

## 注意事項

為了預防使用時發生意外，請務必遵守以下事項：

- 本操作使用說明書的注意事項，是為了讓使用者能正確使用本產品，防止對使用者或他人造成危害及財產損失。
- 警告事項皆為預防意外發生的重要內容，請務必遵守。

## 警告

- 萬一出現冒煙、異味、雜音等異常現象，如繼續使用可能會導致火災、觸電等，請立即關閉電源，並移除變壓器電源線，停止使用。
- 請勿擅自對本產品進行改造、修理或拆解，否則有可能造成火災、觸電、故障或受傷。
- 耗材廢棄時，請遵照各國法規。
- 請使用DC 24V/500mA規格之變壓器，否則將導致機器故障。
  - 當機器運作時，變壓器會發熱，乃屬正常現象。
  - 請勿於安裝機器時連接電源，否則有可能造成人員觸電或受傷。
  - 本產品於長期不用或移動時，請務必先關閉電源並拔下所有插頭，並請倒掉容器內的水，否則可能造成產品故障。
  - 拔下變壓器時，請勿拉扯電源線，必須緊握變壓器插頭後再拔除，否則有可能造成變壓器破損或人員受傷。

## 精油使用注意事項

- 本产品建议与SERENE HOUSE精油搭配使用，切勿使用含有香水、香精或含杂质的精油，以免伤害雾化器装置。
- 精油属于浓缩的高纯度油，有可能溶解塑料或家具涂装，若不慎沾附于产品外侧或家具上，请立即擦拭，避免产品外观或家具褪色。
- 幼童与宠物对香味非常敏感，在密闭空间内使用时请特别小心，及避免误食。
- 使用期间如感觉不舒服或身体不适，请立即停止使用，并打开窗户使空气流通。如您有任何身体上的特殊状况，例如怀孕、肺衰竭、癌症或癫痫等症状，使用前建议先咨询您的医师。

## 注意事项

为了预防使用时发生意外，请务必遵守以下事项：

- 本操作使用说明书的注意事项，是为了让用户能正确使用本产品，防止对用户或他人造成危害及财产损失。
- 警告事项均预防意外发生的重要内容，请务必遵守。

## 警告

- 万一出现冒烟、异味、杂音等异常现象，如继续使用可能会导致火灾、触电等，请立即关闭电源，并移除适配器电源线，停止使用。
- 请勿擅自对本产品进行改造、修理或拆解，否则有可能造成火灾、触电、故障或受伤。
- 耗材抛弃时，请遵照各国法规。
- 请使用DC 24V/500mA规格之适配器，否则将导致机器故障。
  - 当机器运作时，适配器会发热，乃属正常现象。
  - 请勿于安装机器时连接电源，否则有可能造成人员触电或受伤。
  - 本产品于长期不用或移动时，请务必先关闭电源并拔下所有插头，并请倒掉容器内的水，否则可能造成产品故障。
  - 拔下适配器时，请勿拉扯电源线，必须紧握适配器插头后再拔除，否则有可能造成适配器破损或人员受伤。



- If power cord or plug is damaged, or the product is dropped, hit, damaged, or broken, stop using it, this is possible to cause electric shocks or short circuit.
- Do not operate this product with wet hands, or drip or spill water or other liquids onto the product. These may cause electric shock or injuries.
- Do not deliberately place your eyes, nose or mouth close to the fragrance mist emitted as this may cause physical discomfort.
- Do not put fingers or hands into the product.
- In order to avoid any danger or accidents, parents guard is necessary when children use this product.
- Please follow the instructions to use this product; it is possible to result in poisoning or fire hazard, if other substances are used.
- The product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible.
- Do not let children use this product alone, keep it out of reach of children, or it may cause electric shocks or injuries.
- To avoid fire hazard, electric shocks, injuries or malfunction, please do not keep this product in the following places:
  - Under direct sunlight or high temperature environments, and keep away from fire sources.
  - Places with high pressure or flammable materials.
- Do not place the product on soft surfaces such as carpet, as this may block the ventilation inlet on the bottom of the unit, causing the device to not function correctly.
- Do not over bend, heat, or place heavy objects on the power cord, or it may cause fire hazard or malfunction.
- If an extension cord is used, please pay attention to the introductions to electric appliances using. The specifications should be the same. The cord should be placed at evident places to avoid children pulling or stumbling.
- In order to prevent accidents happening, if the power cord is damaged, please replace it via the manufacturer, other service departments, or staffs who own related qualifications.

## Troubleshooting

When the product is broken-down, please confirm the following items before sending it for maintenance:

### Machine does not operate

- Power cord not connected to the main unit**
  - Be sure plug is correctly inserted into the power jack on the main unit.
- The power is correctly connected but the product still does not operate**
  - Check whether the water tank contains any water and then recheck that the ON/OFF switch is on. Check that the water level in the tank does not exceed the maximum water level line (MAX); if this is the case, empty out the excess water.



## The product does not atomize or does not atomize effectively

- The water temperature is too low**
  - Please use tap water or mineral water at a temperature 25 °C~40 °C(77°F~104°F).
- Use hard water or steamed distilled water**
  - Please use tap water or mineral water (The calcium carbonate from area hard water will pile, please filter the water before using).
- Dirty atomizer**
  - Perform maintenance according to the 'Cleaning & Maintenance' section of this manual.
- Placement of the product**
  - Place on a firm, level, and stable surface as well as in light wind place.
- Check the water volume**
  - Make sure the water does not exceed its designated water mark level (MAX), or drain the excess water.
- The cover does not attach securely to the main unit**
  - Reattach the cover according to the procedure in the 'Operating Instructions' section of this manual.

## Product Specification

Product Name:	Aroma Diffuser- Macaron	Product Weight:	375g
Product Model:	171201066	Operating Mode:	Continuous Mode / Intermittent mode (30 seconds on; 30 seconds off)
Product Material:	Plastic	Continuous Mode:	≥13 hours
Power : Input :	AC100-240V 50/60 Hz	Intermittent Mode:	≥26 hours
Output :	DC24V	Color of light:	Warm white
Rated Power:	4W	Suggested Room Size:	15-35 square meters
Frequency:	2.45 MHz ±10%	Product Size:	Ø160×H112MM

Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop.

Service Line: +866 2 7721 8848

## Warranty Card

SERENE HOUSE is providing 1 Year Warranty Service, please keep this Warranty card properly (Will not reissue one another if missing), or you can register your product's warranty on our website to guarantee your product's warranty rights. To register your product's warranty → <https://www.serenehouse.tw/forms/product-registration>

- Customer should follow the instruction to use the product, if the product is malfunction during Warranty Period, please keep your Warranty card and Receipt, to apply for maintenance services, we will repair or replace a new one for you.
- Under these situations, there will be additional charge even though it is in Warranty Period.
  - Fire Hazard, Broken, Gas explosion, Earthquake, Windstorm, Flood, Thunder, Abnormal Voltage, Natural disasters or Force Majeure that cause product to breakage or malfunction.
  - Content of Warranty Card is incomplete, alters, or not able to provide a valid purchase evidence.
  - Discolor, scars, stains and improper keeping that cause product to malfunction.
  - Replacement consumable accessories (batteries, remote control, cleaning brush)
- When you need your product to be repaired, please register from website or contact to local distributor, we will contact you as soon as possible.

Maintenance Request Form → <https://www.serenehouse.tw/forms/repair-application>

### Customer Info

Name	Mr / Mrs	Phone
Address		
E-mail		
Product Info		
Name		
Model		
Manufacturer Code		
Retailer		
Purchase Date	Y	M D
Warranty Period	12 Months After Purchase (Not including consumable accessories)	



• Customer Service's Phone Number: (02) 7721-8848  
• Customer Service's Email: service\_tw@serene-house.com

## 產品保證書

SERENE HOUSE提供一年保固服務，請妥善保管本產品保證書（遺失恕不補發），或可於購買商品後上品牌官網提交產品保固登錄，確保您的商品保固權益。  
上品牌官網提交產品保固登錄：確保您的商品保固權益。  
1. 顧客依照使用說明書，於正常使用情況下，在保固期間內發生故障時，請備妥商品、本保證書及產品保固登錄→<https://www.serenehouse.tw/forms/product-registration>  
2. 若出現下列情況，雖在保固期限內仍須採取額外報價付費修理：

- 錯誤使用方式或不當的修理與改造所造成的故障或損壞。
- 火災、損害、煤氣或天然氣爆炸、地震、風災、水災、打雷、電壓異常及其他天災或不可抗外力因素所造成的故障及損壞。
- 保證書內容不完整、經人為塗改、或未能提供有效購買憑證。
- 產品使用後的傷痕、變色、汙損及保管不當所造成的損壞。
- 損耗性零件及配件的更換（如震盪片、清潔刷、電池、遙控器等）。

3. 當您需要維修產品時，可先於官網提交維修申請，我們將盡力為您服務。  
維修申請→<https://www.serenehouse.tw/forms/repair-application>

### 顧客資料

姓 名	先生 / 女士	電 話
通訊地址		
E-mail		
商品資訊		
商品資訊		
商品名稱		
型 號		
生產序號		
銷 售 商		
購買日期	年	月 日
保固期間	自購買日起12個月 (不含耗材)	



• 客服專線：(02) 7721-8848  
• 客服郵箱：service\_tw@serene-house.com

## 無法霧化或霧化效果不佳

- 水溫太低
  - 請使用溫度在25°C到40°C的自來水或礦泉水。
- 使用硬水或蒸餾水
  - 請使用自來水或礦泉水（某些地區的水質容易造成水垢，請將水過濾後再使用）。
- 霧化機脏污
  - 請依照本說明書的「清潔保養」方法進行保養。
- 机器放置在地毯等柔軟物體上，或者使用場所的風量過大
  - 請在水平、平穩及風量小的場所使用。
- 水槽內水位超過最高水位線 ( MAX )
  - 請將多餘的水倒掉。
- 上蓋未確實與主體蓋緊
  - 請依照本說明書的「使用說明」步驟重新蓋緊上蓋。

## 產品規格

產品名稱：	馬卡龍 香氛霧化機
產品型號：	171201066
產品材質：	塑膠
電壓：	Input : AC100-240V 50/60 Hz Output : DC 24V
額定功率：	4W
頻率：	2.45 Mhz ± 10%
水槽容量：	250ml

如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。  
請勿自行拆解或維修本產品。

服務專線：+866 2 7721 8848

## 无法雾化或雾化效果不佳

- 水温太低
  - 请使用温度在25°C到40°C的自来水或矿泉水。
- 使用硬水或蒸馏水
  - 请使用自来水或矿泉水（某些地区的水质容易造成水垢，请将水过滤后再使用）。
- 雾化机脏污
  - 请依照本说明书的「清洁保养」方法进行保养。
- 机器放置在地毯等柔软物体上，或者使用场所的风量过大
  - 请在水平、平稳及风量小的场所使用。
- 水槽内水位超过最高水位线 ( MAX )
  - 请将多余的水倒掉。
- 上盖未确实与主体盖紧
  - 请依照本说明书的「使用说明」步骤重新盖紧上盖。

## 产品规格

产品名称：	马卡龙 香氛雾化机
产品型号：	171201066
产品材质：	塑料
电压：	Input : AC100-240V 50/60 Hz Output : DC 24V
额定功率：	4W
频率：	2.45 Mhz ±10%
水槽容量：	250ml