



SERENE AIR®  
Aroma Diffuser


Instruction Manual



OPU

## Product & Accessories

- Please check to ensure the following items are present and inspect for damage before use.
- ① Mist Nozzle      ② Cover      ③ Main Unit      ④ Water Level Indicator
- ⑤ Control Panel    ⑥ Power Indicator Light    ⑦ Power Button    ⑧ Mist Mode Button
- ⑨ Low Mist Mode Indicator Light    ⑩ High Mist Mode Indicator Light
- ⑪ Light Button    ⑫ Lid    ⑬ Vent    ⑭ Vent cover
- ⑮ Atomizer    ⑯ Water Tank    ⑰ Water Mark - MAX(400ML)
- ⑱ Power Jack    ⑲ Ventilation Inlet    ⑳ AC Adapter    ㉑ 30ML Measuring Cup

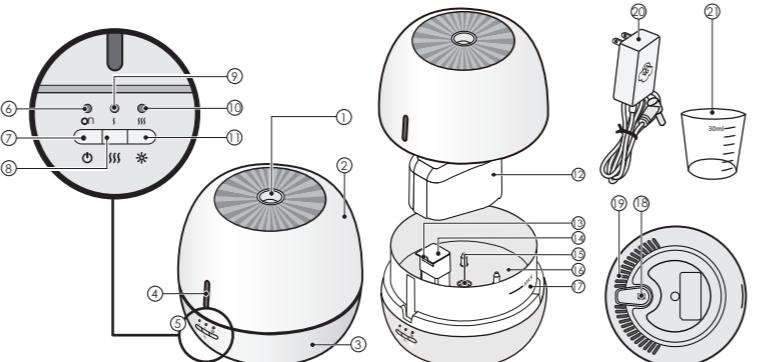

(The image is for reference only. Actual product may vary.)



SERENE AIR®  
長效淨化機


操作使用說明書



OPU

## 產品與配件介紹

- 使用前，請確認以下物品是否齊全，有無破損情況。
- ① 噴霧口      ② 上蓋      ③ 主體      ④ 水位指示
- ⑤ 控制面板    ⑥ 電源指示燈    ⑦ 電源開關鍵    ⑧ 霧化模式設定鍵
- ⑨ 小霧模式指示燈    ⑩ 大霧模式指示燈    ⑪ 燈光模式設定鍵
- ⑬ 出風口    ⑭ 挡水套    ⑮ 霧化器    ⑯ 水槽
- ⑰ 最高水位線-MAX (400ml)    ⑱ 電源孔
- ⑲ 進氣口    ⑳ 變壓器電源線
- ㉑ 30ml量杯

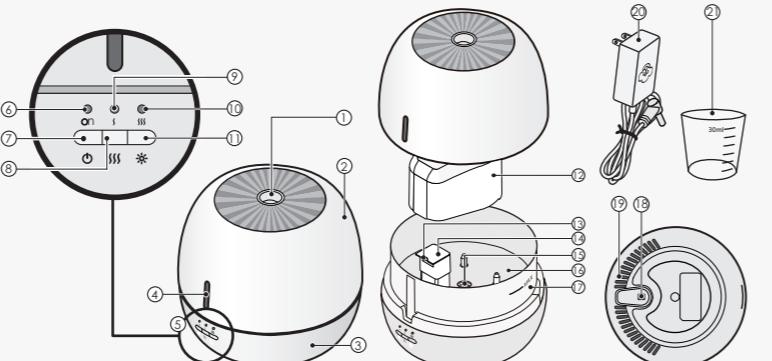

(圖片僅供參考，請以實品為主)



SERENE AIR®  
长效净化机


操作使用说明书



OPU

## 产品与配件介绍


- 使用前，请确认以下物品是否齐全，有无破损情况。
- ① 喷雾口      ② 上盖      ③ 主体      ④ 水位指示
- ⑤ 控制面板    ⑥ 电源指示灯    ⑦ 电源开关    ⑧ 雾化模式设定键
- ⑨ 小雾模式指示灯    ⑩ 大雾模式指示灯    ⑪ 灯光模式设定键
- ⑬ 出风口    ⑭ 挡水套    ⑮ 雾化器    ⑯ 水槽
- ⑰ 最高水位线-MAX (400ml)    ⑱ 电源孔
- ⑲ 进气口    ⑳ 适配器电源线
- ㉑ 30ml量杯

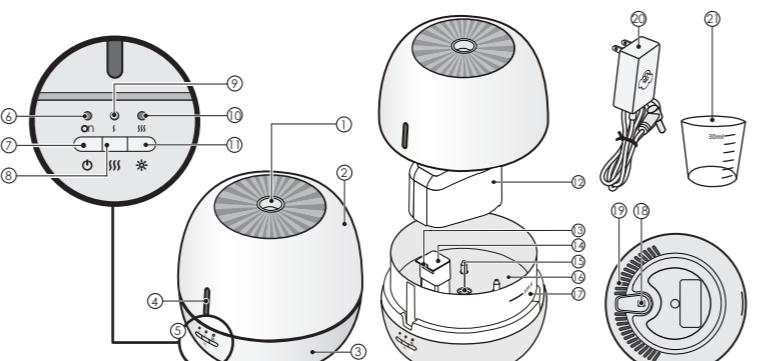

(图片仅供参考，请以实物为主。)

## Operating Instructions

- Always place your aroma diffuser on a firm, flat and level surface.
- Condensation may occur around the aroma diffuser when operating in high humidity environment.
- Performance and time of diffusing scents may vary due to room's size, ventilation and humidity.

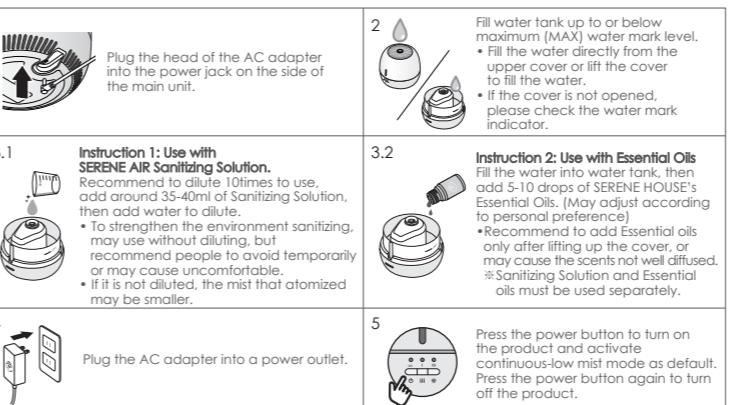

## Mist Mode Instructions

- The diffuser will begin with continuous low mist mode when the power is on, and the low mist mode indicator light is on.
- Press the mist mode button once again to switch to continuous high mist mode, and the high mist mode indicator light is on.
- Press the mist mode button again to switch to intermittent mode (30 seconds on, 30 seconds off) and the power indicator light pulsates.
- Press the mist mode button the third time to switch back to continuous low mist mode and the low mist mode indicator light is on again.
- For safety purpose, the product is programmed to stop operating automatically when it detects the water is below its programmed level.

## 使用說明

- 請在穩固、平坦、水平的地方使用本產品。
- 若室內環境濕度較高，使用時，易在機器周圍產生水氣。
- 扩香效果與霧化時間可能會因空間大小、通風與溫濕度而有所變化。



## 霧化模式設定

- 按下电源开关，启动连续雾化-小雾模式，电源指示灯、小雾模式指示灯亮。
- 按雾化模式设定键，切换为连续雾化-大雾模式，电源指示灯、大雾模式指示灯亮。
- 再按雾化模式设定键，切换为间歇雾化模式（30秒开30秒关，重复循环），电源指示灯呼吸闪烁。
- 再按雾化模式设定键，回复为连续雾化-小雾模式（见第1点）。
- 为保障使用安全，当机器侦测到水量不足时，将自动断电。

## 使用說明

- 請在穩固、平坦、水平的地方使用本產品。
- 若室內環境濕度較高，使用時，易在机身周圍產生水氣。
- 扩香效果與霧化時間可能會因空間大小、通風與溫濕度而有所變化。

 


## 霧化模式設定

- 按下电源开关，启动连续雾化-小雾模式，电源指示灯、小雾模式指示灯亮。
- 按雾化模式设定键，切换为连续雾化-大雾模式，电源指示灯、大雾模式指示灯亮。
- 再按雾化模式设定键，切换为间歇雾化模式（30秒开30秒关，重复循环），电源指示灯呼吸闪烁。
- 再按雾化模式设定键，回复为连续雾化-小雾模式（见第1点）。
- 为保障使用安全，当机器侦测到水量不足时，将自动断电。

## Light Instructions

- Device will automatically cycle through 7 color LED pattern(warm white, green, blue, red, yellow, purple, and light white) when it is turned on.
- To select a single color, press the light button until you reach your desired color.
- To switch off the light, keep pressing the light button. At the end of the 7 color cycle, the light will turn off.



## Cleaning & Maintenance


- Always disconnect the power and unplug the adapter before cleaning.
- For best atomizing performance, be sure to clean the product after each use.
- Remove the lid, empty the water from the tank, add a small amount of warm water (do not exceed 40°C/104°F), and a few drops of neutral cleanser. Use a cotton swab to clean the atomizer and internal surface of the water tank. Gently rinse all the soap out of the water tank after washing.
- Never use acidic cleansers as this may cause malfunction.
- Be careful to not allow water to enter the vent, the ventilation inlet and the buttons.
- If any liquids accidentally flows into the ventilation inlet, vent or control buttons, allow internal mechanism to dry thoroughly (at least 6 hours) before the next use, otherwise this may cause the product to malfunction.

## Precautions before use

- This product works with the basis of Ultrasonic Vibration, allows the water molecule to spread into the air, condensation may occur around the aroma diffuser when operating in high humidity environment.
- Do not move or tip the product when it is in operation.
- Do not open the cover and vent cover or block the ventilation inlet while the product is in operation as water leakage, injury, or malfunction may occur.
- After each use, make sure to pour out any remaining water in the tank.
- If the lid and cover are not properly covered, it may affect the performance of atomizing.
- Recommend to use tap water, soft water, mineral water or use with SERENE AIR Sanitizing Solution, not recommend to use other type of water.
- It is important to not use steamed distilled water, as this water had the minerals remove from the water that affects the operation of the diffusers.
- Reverse osmosis (RO) water also has minerals in the water and the diffuser will not be able to diffuse the mist properly and the desired results will not be achieved.
- Hard water is also not recommended. This would require that the oscillator to be cleaned every time after use when using hard water, because the calcium carbonate from hard water will pile. Also, hard water is too heavy for oscillator to diffuse mist.
- Recommend using water with a temperature of 25°C~40°C, if the temperature is below 5°C, the product may need longer time to start.

## 燈光模式設定

1. 下達電源開關，機器將自動循環七彩情境燈（暖白光、綠光、藍光、紅光、黃光、紫光和白光）。
2. 若要切換為單色情境燈，請再按壓燈光模式設定鍵，直到喜愛的顏色出現即止。
3. 使用中如欲關閉情境燈，請重複按壓燈光模式設定鍵至七彩情境燈輪替顯示完畢為止。

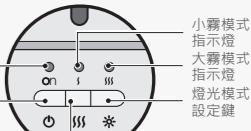

## 清潔保養


- 在清潔保養之前，電器必須切斷電源，務必拔除變壓器及移除主體上的接頭。
- 建議每次使用完畢即進行清潔保養，以確保機器正常運作。
- 於水槽內加入適量溫水（水溫勿超過40°C），並滴入少許中性清潔劑，使用乾淨棉棒輕拭水槽內部及霧化器表面，待清潔完畢後以乾淨的布將機器擦乾即可。
- 請勿使用酸性清潔劑，否則有可能導致機器損壞。
- 請慎防進氣口、出風口或按鍵開關部位進水導致機器故障。
- 若有液體不慎進入機器主體，請靜置至少6小時，待機器完全乾燥後，方可使用。

## 使用注意事項

- 本產品使用超音波震盪霧化原理，使水分子快速擴散於空氣中，若室內環境濕度較高，機器在使用時，周圍易產生水氣。
- 機器運作時，請勿移動、傾斜或傾倒主體。
- 運轉過程中，請勿取下上蓋、出風口外蓋及出風口的擋水套，或者堵塞主體下方風扇進氣口，並請勿將手放到水槽內，否則可能造成機器漏水、故障或受傷。
- 水槽內殘留的液體若超過24小時，建議倒掉並進行清潔保養步驟。
- 若未確實蓋緊上蓋或出風口外蓋，可能導致機器無法霧化或霧化效果不佳。
- 請使用自來水、軟水、礦泉水，或搭配SERENE HOUSE抗菌液，不建議使用其他液體。
- 請注意不要使用蒸餾水或純水，因水中礦物質已被過濾，將影響機器霧化效果，不易產生霧氣。
- 逆滲透(RO)水也只含微量礦物質，會造成機器霧化效果不佳，不易產生霧氣。
- 不建議使用硬水，因硬水的碳酸鈣會沉積堆積，每次使用完後都必須清理震盪霧化器。此外硬水分子太重，無法有效產生霧化效果。
- 建議使用溫度25°C~40°C的水，如使用低於5°C的水，機器啟動所需的时间較久，此為正常情況。

## 灯光模式设定

1. 下达电源开关，机器将自动循环七彩情境灯。（暖白光、绿光、蓝光、红光、黄光、紫光和白光）。
2. 若要切换为单色情境灯，请再按压灯光模式设定键，直到喜爱的颜色出现即止。
3. 使用中如欲关闭情境灯，请重按压灯光模式设定键至七彩情境灯轮替显示完毕为止。

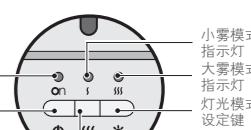

## 清洁保养

- 在清洁保养之前，电器必须切断电源，务必拔除变压器及移除主体上的接头。
- 建议每次使用完毕即进行清洁保养，以确保机器正常运作。
- 于水槽内加入适量温水（水温勿超过40°C），并滴入少许中性清洁剂，使用干净棉棒轻拭水槽内部及雾化器表面，待清洁完毕后以干净的布将机器擦干即可。
- 请勿使用酸性清洁剂，否则有可能导致机器损坏。
- 请慎防进气口、出风口或按键开关部位进水导致机器故障。
- 若有液体不慎进入机器主体，请静置至少6小时，待机器完全干燥后，方可使用。

## 使用注意事项

- 本产品使用超音波震荡雾化原理，使水分子快速扩散于空气中，若室内环境湿度较高，机器在使用时，周围易产生水气。
- 机器运作时，请勿移动、倾斜或倾倒主体。
- 运转过程中，请勿取下上盖、出风口气盖及出风口的挡水套，或者堵塞主体下方风扇进气口，并请勿将手放到水槽内，否则可能造成机器漏水、故障或受伤。
- 水槽内残留的液体若超过24小时，建议倒掉并进行清洁保养步骤。
- 若未确实盖紧上盖或出风口气盖，可能导致机器无法雾化或雾化效果不佳。
- 请使用自来水、软水、矿泉水，或搭配SERENE HOUSE抗菌液，不建议使用其他液体。
- 请注意不要使用蒸馏水或纯水，因水中矿物质已被过滤，将影响机器雾化效果，不易产生雾气。
- 逆渗透(RO)水也只含微量矿物质，会造成机器雾化效果不佳，不易产生雾气。
- 不建议使用硬水，因硬水的碳酸钙会沉积堆积，每次使用完后都必须清理震荡雾化器。此外硬水分子太重，无法有效产生雾化效果。
- 建议使用温度25°C~40°C的水，如使用低于5°C的水，机器启动所需的时间较久，此为正常情况。

## Notes on the use of oils

- For best performance of this Aroma diffuser, we recommend using essential oil from SERENE HOUSE.
- Essential oils are highly concentrated oils. Use with caution. Do not spill the oils as they may damage plastic objects and furniture. If essential oil drops on the surface of this machine or other objects or on the floor, please clean by cloth immediately.
- Children and pets are very sensitive to essential oil that is undiluted. Use with caution.
- Stop using the product and open the windows for ventilation. If you have difficulty breathing due to allergic reaction or any special physical conditions, such as pregnancy, lung failure, cancer, epilepsy or other illnesses, please consult your doctor before using essential oils.

## Safety Precautions

In order to prevent any accidents happening, must follow the instructions below as you are using this product:

- The instructions of this manual are for users applying this product correctly, and preventing damage or property loss to users or others.
- WARNING! is central contents for preventing any accidents happening, please follow cautiously.

## WARNING

Stop using the product immediately and unplug once smoke, smell, noise, or other unusual situations appear; it is very possible to cause fire hazard or electric shock, if the product operates continuously.

Do not alter, repair or dismantle this product on your own, it may cause fire hazard, electric shock, malfunction or injury.

Please follow local regulations when you are discarding consumables.

Please use a DC 24V/ 500mA adapter, otherwise the product may malfunction.  
The AC adapter will heat up when the product is operating and it is normal.  
Do not connect the power during installation, as electric shock and injury may occur.  
The product should always be unplugged and the water tank should always be empty when moving the product or when the product is not in operation.  
While unplugging the power cord, please hold it tight or may cause damage to the power cord.

## 精油使用注意事項

- 本產品建議與SERENE HOUSE精油搭配使用，切勿使用含有香水、香精或含雜質的精油，以免傷害霧化器裝置。
- 精油屬於濃縮的高純度油，有可能溶解塑膠或傢俱塗裝，若不慎沾附於產品外側或傢俱上，請立即擦拭，避免產品外觀或傢俱褪色。
- 幼童與寵物對香味非常敏感，在密閉空間內使用時請特別小心，及避免誤食。
- 使用期間如感覺不舒服或身體不適，請立即停止使用，並打開窗戶使空氣流通。如您有任何身體上的特殊狀況，例如懷孕、肺衰竭、癌症或癲癇等症狀，使用前建議先諮詢您的醫師。

## 注意事項

為了預防使用時發生意外，請務必遵守以下事項：

- 本使用說明書的注意事項，是為了讓使用者能正確的使用本產品，防止對使用者或他人造成危害及財產損失。
- 警告事項皆為預防意外發生的重要內容，請務必遵守。

## 警告

萬一出現冒煙、異味、雜音等異常現象時，仍繼續使用的話，可能導致火災、觸電等，請立即將電源移除，停止使用。

請勿擅自對本產品進行改造、修理或拆解，否則有可能造成火災、觸電、故障或受傷。

耗材廢棄時，請遵照各國法規。

請使用DC 24V/500mA規格之變壓器，否則將導致機器故障。  
當機器運作時，變壓器會發熱，乃屬正常現象。  
請勿於安裝機器時連接電源，否則有可能造成觸電或受傷。  
本產品於長期不用或移動時，請務必先關閉電源並拔下所有插頭，並請倒掉容器內的水，否則可能造成產品故障。  
拔下變壓器時，請勿拉扯電源線，必須緊握變壓器再拔除，否則有可能造成電源線破損。

## 精油使用注意事项

- 本产品建议与SERENE HOUSE精油搭配使用，切勿使用含有香水、香精或含杂质的精油，以免伤害雾化器装置。
- 精油属于浓缩的高纯度油，有可能溶解塑料或家具涂装，若不慎沾附于产品外侧或家具上，请立即擦拭，避免产品外观或家具褪色。
- 幼童与宠物对香味非常敏感，在密闭空间内使用时请特别小心，及避免误食。
- 使用期间如感觉不舒服或身体不适，请立即停止使用，并打开窗户使空气流通。如您有任何身体上的特殊状况，例如怀孕、肺衰竭、癌症或癫痫等症状，使用前建议先咨询您的医师。

## 注意事项

为了预防使用时发生意外，请务必遵守以下事项：

- 本操作使用说明书的注意事项，是为了让用户能正确使用本产品，防止对用户或他人造成危害及财产损失。
- 警告事项均预防意外发生的重要内容，请务必遵守。

## 警告

万一出现冒烟、异味、杂音等异常现象，如继续使用可能会导致火灾、触电等，请立即关闭电源，并移除电源线，停止使用。

请勿擅自对本产品进行改造、修理或拆解，否则有可能造成火灾、触电、故障或受伤。

耗材抛弃时，请遵照各国法规。

请使用DC 24V/500mA规格之适配器，否则将导致机器故障。  
当机器运作时，适配器会发热，乃属正常现象。  
请勿于安装机器时连接电源，否则有可能造成触电或受伤。  
本产品于长期不用或移动时，请务必先关闭电源并拔下所有插头，并请倒掉容器内的水，否则可能造成产品故障。  
拔下适配器时，请勿拉扯电源线，必须紧握适配器再拔除，否则有可能造成电源线破損。

- If power cord or plug is damaged, or the product is dropped, hit, damaged, or broken, stop using it, this is possible to cause electric shocks or short circuit.
- Do not operate this product with wet hands, or drip or spill water or other liquids onto the product. These may cause electric shock or injuries.
- Do not deliberately place your eyes, nose or mouth close to the fragrance mist emitted as this may cause physical discomfort.
- Do not put fingers or hands into the product.
- In order to avoid any danger or accidents, parents guard is necessary when children use the product.
- Please follow the instructions to use this product; it is possible to result in poisoning or fire hazard, if other substances are used.
- Do not immerse this product in water, this product is for household use only.
- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible.
- Do not let children use this product alone, keep it out of reach of children, or it may cause electric shocks or injuries.
- To avoid fire hazard, electric shocks, injuries or malfunction, please do not keep this product in the following places:
  - Under direct sunlight or high temperature environments, and keep away from fire sources.
  - Places with high pressure or flammable materials.
- Do not place the product on soft surfaces such as carpet, as this may block the ventilation inlet on the bottom of the unit, causing the device to not function correctly.
- Do not over bend, heat, or place heavy objects on the power cord, or it may cause fire hazard or malfunction.
- If an extension cord is used, please pay attention to the introductions to electric appliances using. The specifications should be the same. The cord should be placed at evident places to avoid children pulling or stumbling.
- In order to prevent accidents happening, if the power cord is damaged, please replace it via the manufacturer, other service departments, or staffs who own related qualifications.

## Troubleshooting

When the product is broken-down, please confirm the following items before sending it for maintenance:

### Machine does not operate

#### • Power cord not connected to the main unit

- Be sure plug is correctly inserted into the power jack on the main unit.
- The power is correctly connected but the product still does not operate
  - Check whether the water tank contains any water and then recheck that the ON/OFF switch is on. Check that the water level in the tank does not exceed the maximum water level line (MAX); if this is the case, empty out the excess water.

## The product does not atomize or does not atomize effectively

#### • The water temperature is too low

- Please use tap water or mineral water at a temperature 25 °C~ 40 °C (77°F~104°F).

#### • Use hard water or steamed distilled water

- Please use tap water or mineral water (The calcium carbonate from areal hard water will pile, please filter the water before using).

#### • Dirty atomizer

- Perform maintenance according to the 'Cleaning & Maintenance' section of this manual.

#### • Placement of the product

- Place on a firm, level, and stable surface as well as in light wind place.

#### • Check the water volume

- Make sure the water does not exceed its designated water mark level (MAX), or drain the excess water.

#### • The lid does not attach securely to the main unit

- Reattach the lid according to the procedure in the 'Operating Instructions' section of this manual.

#### • Using undiluted SANITIZING SOLUTION

- Using undiluted SANITIZING SOLUTION may weaken the atomizing effects.

#### • Water accidentally flow into the vent

- Please pour out the water, place the product upside down, tap the product to remove the moisture, then wait for few minutes to reuse.

## Product Specification

Product Name:	SERENE AIR® Aroma Diffuser- OPU	Water Tank Capacity:	400ML
Product Model:	191201023	LED Lights:	7 colors (Loop/Fixed)
Product Size:	ø164*H147MM	Operating Mode:	Ultrasonic Vibration Atomization
Product Material:	Plastic	Continuous Mode:	Low mist ≥8 hours ; High mist ≥6 hours ;
Power : Input :	AC100-240V 50/60 Hz	Intermittent Mode:	≥14 hours
Output :	DC24V	Suggested Room Size:	15-35 square meters
Rated Power:	8W	Product Weight:	570g
Frequency:	2.45 MHz		

## 無法霧化或霧化效果不佳

#### • 水溫太低

- 請使用溫度在25°C到40°C的自來水或礦泉水。

#### • 使用硬水或蒸餾水

- 請使用自來水或礦泉水（某些地區的水質容易造成水垢，請將水過濾後再使用）。

#### • 霧化機腔髒

- 請依照本說明書的「清潔保養」方法進行保養。

#### • 機器放置在地毯等柔軟物體上，或者使用場所的風量過大

- 請在水平、平穩及風量小的場所使用。

#### • 水槽內水位超過最高水位線 ( MAX )

- 請將多餘的水倒掉。

#### • 上蓋 / 出風口外蓋未確實安裝

- 請參照本說明書中的「使用說明」，將上蓋與出風口外蓋正確安裝在主體上。

#### • 使用抗菌液原液

- 未經稀釋使用的抗菌液，可能會使霧氣減弱，為正常現象。

#### • 機器主體進水潮濕

- 移除非上蓋與出風口外蓋，並將機器靜置至少六小時，待機器完全乾燥後再使用。

## 產品規格

### 產品名稱：OPU長效淨化機

### 產品型號：191201023

### 產品尺寸：ø164\*H147MM

### 產品材質：塑膠

### 電壓：Input : AC100-240V 50/60 Hz

### Output : DC24V

### 額定功率 : 8W

### 頻率 : 2.45 MHz

### 產品重量 : 570g

### 水槽容量 : 400ml

### LED燈光 : 七彩 ( 循環 / 定色 )

### 運作模式 : 超聲波震蕩霧化模式

### 連續使用時間 : 小霧 : ≥8小時；

### 大霧 : ≥6小時；

### 間歇 : ≥14小時

### 建議使用空間 : 15-35平方公尺

如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。

請勿自行動手拆解或維修本產品。

服務專線 : +886 2 7721 8848

## 产品保修卡

## Warranty Card

SERENE HOUSE is providing 1 Year Warranty Service, please keep this Warranty card

properly (Will not reissue one another if missing), or you can register your product's warranty on our website to guarantee your product's warranty rights.

To register your product's warranty → <https://www.serenehouse.tw/forms/product-registration>

1. Customer should follow the instruction to use the product, if the product is malfunction during Warranty Period, please keep your Warranty card and Receipt,

to apply for maintenance services, we will repair or replace a new one for you.

2. Under these situations, there will be additional charge even though it is in Warranty Period.

• Fire Hazard, Broken, Gas explosion, Earthquake, Windstorm, Flood, Thunder, Abnormal Voltage, Natural disasters or Force Majeure that cause product to breakage or malfunction.

• Content of Warranty Card is incomplete, alters, or not able to provide a valid purchase evidence.

• Discolor, scars, stains and improper keeping that cause product to malfunction.

• Replacement consumable accessories (batteries, remote control, cleaning brush)

3. When you need your product to be repaired, please register from website or contact to local distributor, we will contact you as soon as possible.

Maintenance Request Form → <https://www.serenehouse.tw/forms/repair-application>

## Customer Info

Name	Mr / Mrs	Phone
Address		
E-mail		

## Product Info

Name	Model	Manufacturer Code	Retailer
<tbl