




Aroma Diffuser (With Intermittent Mode)



Ranger
Instruction Manual

Product & Accessories

- Please check to ensure the following items are present and inspect for damage before use.
- ① Mist Nozzle ② Cover ③ Power (ON / OFF) ④ Main unit ⑤ Vent
- ⑥ Atomizer ⑦ Water tank ⑧ MAX-water mark level (60ml)
- ⑨ USB power cord ⑩ Power jack ⑪ Ventilation inlet

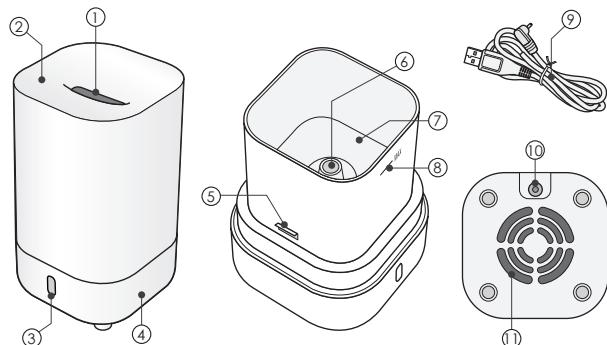

(The image is for reference only. Actual product may vary.)




香氛霧化機 (連續 / 間歇功能)



遊騎兵
操作使用說明書

產品與配件介紹

- 使用前，請確認以下物品是否齊全，有無破損情況。
- ① 噴霧口 ② 上蓋 ③ 電源開關 / 電源指示燈 ④ 主體
- ⑤ 出風口 ⑥ 霧化器 ⑦ 水槽 ⑧ 最高水位線-MAX (60 ml)
- ⑨ USB電源線 ⑩ 電源孔 ⑪ 進氣口

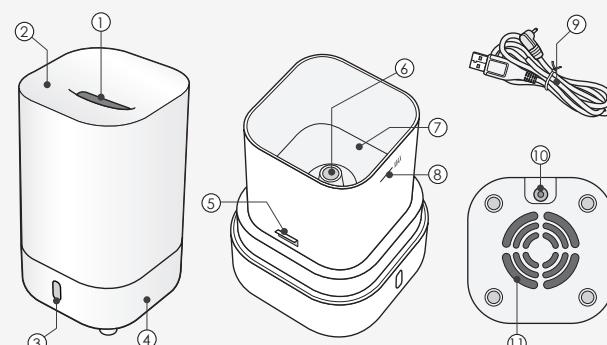

(圖片僅供參考，請以實品為主)




香氛雾化机 (连续 / 间歇功能)



游骑兵
操作使用说明书

产品与配件介绍


- 使用前，请确认以下物品是否齐全，有无破损情况。
- ① 喷雾口 ② 上盖 ③ 电源开关 / 电源指示灯 ④ 主体
- ⑤ 出风口 ⑥ 雾化器 ⑦ 水槽 ⑧ 最高水位线-MAX (60 ml)
- ⑨ USB电源线 ⑩ 电源孔 ⑪ 进气口

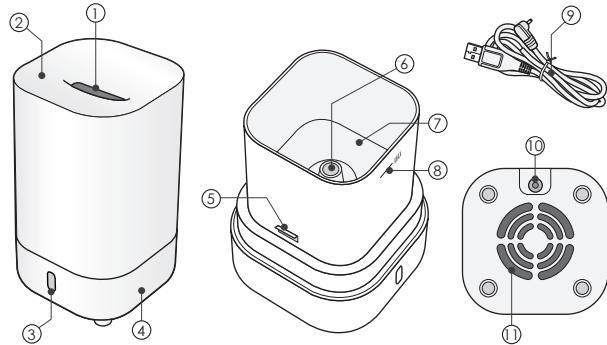

(图片仅供参考，请以实物为主。)

Operating Instructions

- Always place your aroma diffuser on a firm, flat and level surface.
- Condensation may occur around the aroma diffuser when operating in high humidity environment.

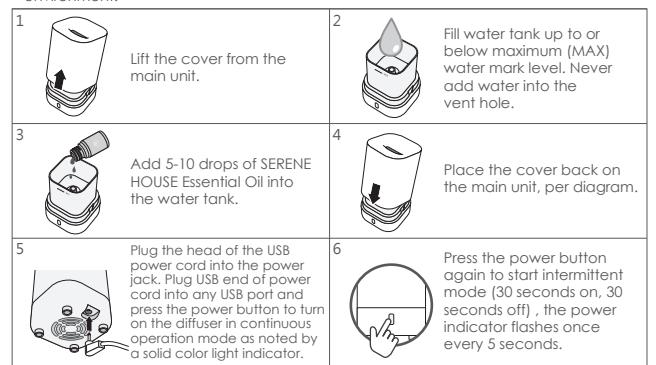

- Please read all instructions before using the product. Use it safely and correctly.
- Please use water with a temperature of 25 °C ~ 40 °C (77°F~104°F); if using water below 5 °C/41°F, the diffuser starts longer.
- Never allow water or oil to enter the vent.
- If the cover is not properly covered, the water in the water tank may not be effectively atomized.
- Do not move or flip the device when it is in operation and there is water or oil in the tank.
- For safety purposes, the diffuser is programmed to stop operating automatically when it detects the water is below its programmed level.
- Please empty the water in the water tank and follow step 1 to 6 when reusing this device. For proper handling and maintenance, please refer to the Cleaning & Maintenance section in this manual.

Mode Instructions

- Press the power button once to turn on diffuser and begin continuous operation. Continuous mode will be indicated by a solid power button.
- Press the power button twice to activate intermittent mode (30 seconds on, 30 seconds off). The power indicator flashes once every 5 seconds.
- Press the button the third time to turn the machine off.

Cleaning & Maintenance

- Always disconnect the USB power cord from the electrical outlet before cleaning.
- For best atomizing performance, be sure to clean the aroma diffuser after each use.
- Remove the cover, empty the water from the tank, add a small amount of warm water (do not exceed 40°C/104°F), and a few drops of neutral cleanser. Use a cotton swab to clean the atomizer and internal surface of the water tank. Gently rinse all the soap out of the water tank after washing.
- Never use acidic cleaners as this may cause malfunction.
- Be careful to not allow water to enter the vent, the ventilation inlet and the button.
- If water accidentally flows into the ventilation inlet, vent or control button, allow internal mechanism to dry thoroughly (at least 6 hours) before the next use, otherwise this may cause the device to malfunction.

Precautions before use

- This product is manufactured using the ultrasonic atomization principle, and while it does add slight humidity to the air, its primary purpose is as a fragrance diffuser.
- Never connect the power without placing the cover on the unit.
- Do not remove the cover or block the ventilation inlet under the main unit during usage.
- When the device is in operation and there is water in water tank, do not touch the atomizer as personal injury or device malfunction may occur.
- After each use, make sure to pour out any remaining water in the tank.
- Make sure to wipe clean with a cloth if oil drips on the main unit or floor.
- Soft water is best for your Serene House diffuser. You may also use bottled or mineral water.
- It is important to not use steamed distilled water, as this water had the minerals removed from the water that affects the operation of the diffusers.

模式設定

- 按第一下電源開關，啟動連續霧化模式，電源指示燈恆亮。
- 按第二下電源開關，啟動間歇霧化模式（30秒開30秒關，重複循環）。電源指示燈即進入呼吸燈光模式，呼吸燈光週期為5秒閃爍一次。
- 按第三下電源開關，機器隨即關閉。

清潔保養

- 在清潔保養之前，電器必須切斷電源，務必拔除USB電源線及移除主體上的電源接頭。
- 建議每次使用完畢即進行清潔保養，以確保機器正常運作。
- 於水槽內加入適量溫水（水溫勿超過40°C）並滴入少許中性清潔劑，使用乾淨棉棒輕拭水槽內部及霧化器表面，待清洗完畢後以乾淨的布將機器擦乾即可。
- 請勿使用酸性清潔劑，否則有可能導致機器損壞。
- 請慎防進氣口、出風口或按鍵開關部位進水導致機器故障。
- 若水不慎進入機器主體，請靜置至少6小時，待機器完全乾燥後，方可使用。

使用注意事項

- 本產品使用超音波震盪霧化原理達到擴香效果，雖未達加濕機標準，但可降低環境乾燥度。
- 請勿在未裝上蓋的情況下將電源接通。
- 運轉過程中，請勿取下上蓋，或者堵塞主體下方風扇進氣口。
- 在機器運轉過程中，且水槽內有水時，請勿在電源尚未關閉前打開上蓋，或將手放到水槽內，否則有可能造成機器漏水、故障或受傷。
- 水槽內殘留的水如果超過24小時，請務必倒掉並進行清潔保養步驟。
- 精油若不慎滴到水槽外側或地板等周圍物體上，請立即用布擦拭乾淨。
- SERENE HOUSE 香氛霧化機水質建議，請使用軟水或礦泉水，不建議使用其他液體。
- 請注意不要使用蒸餾水或純水，因水中礦物質已被過濾，將影響機器霧化效果，不易產生霧氣。
- 逆滲透(RO)水也只含微量礦物質，會造成機器霧化效果不佳，不易產生霧氣。
- 不建議使用硬水，因硬水的碳酸鈣會沉積堆積，每次使用完後都必須清理震盪霧化器，此外硬水分子太重，無法有效產生霧化效果。

模式設定

- 按第一下電源开关，启动连续雾化模式，电源指示灯恒亮。
- 按第二下电源开关，启动间歇雾化模式（30秒开30秒关，重复循环）。电源指示灯即进入呼吸灯光模式，呼吸灯光周期为5秒闪烁一次。
- 按第三下电源开关，机器随即关闭。

清洁保养

- 在清洁保养之前，电器必须切断电源，务必拔除USB电源线及移除主体上的电源接头。
- 建议每次使用完毕即进行清洁保养，以确保机器正常运作。
- 于水槽内加入适量温水（水温勿超过40°C）并滴入少许中性清洁剂，使用干净棉棒轻拭水槽内部及雾化器表面，待清洗完后以干净的布将机器擦干即可。
- 请勿使用酸性清洁剂，否则有可能导致机器损坏。
- 请慎防进气口、出风口或按键开关部位进水导致机器故障。
- 若水不慎进入机器主体，请静置至少6小时，待机器完全干燥后，方可使用。

使用注意事项

- 本产品使用超音波震荡雾化原理达到扩香效果，虽未达加湿机标准，但可降低环境干燥度。
- 请勿在未装上盖的情况下将电源接通。
- 运转过程中，请勿取下上盖，或者堵塞主体下方风扇进气口。
- 在机器运转过程中，且水槽内有水时，请勿在电源尚未关闭前打开上盖，或将手放到水槽内，否则有可能造成机器漏水、故障或受伤。
- 水槽内残留的水如果超过24小时，请务必倒掉并进行清洁保养步骤。
- 精油若不慎滴到水槽外侧或地板等周围物体上，请立即用布擦拭干净。
- SERENE HOUSE 香氛雾化机水质建议，请使用软水或矿泉水，不建议使用其他液体。
- 请注意不要使用蒸馏水或纯水，因水中矿物质已被过滤，将影响机器雾化效果，不易产生雾气。
- 反渗透(RO)水也只含微量矿物质，会造成机器雾化效果不佳，不易产生雾气。
- 不建议使用硬水，因硬水的碳酸钙会沉积堆积，每次使用完后都必须清理震荡雾化器，此外硬水分子太重，无法有效产生雾化效果。

• Reverse osmosis (RO) water also has less minerals in the water and the diffuser will not be able to diffuse the mist properly and the desired results will not be achieved.
• Hard water is also not recommended. This would require that the oscillator be cleaned every time after use when using hard water, because the calcium carbonate from hard water will pile. Also, hard water is too heavy for oscillator to diffuse mist.

Notes on the use of oils

- For best performance of this Aroma diffuser, we recommend using essential oil from SERENE HOUSE.
- Essential oils are highly concentrated oils. Use with caution. Do not spill the oils as they may damage plastic objects and furniture. If essential oil drops on the surface of this machine or other objects or on the floor, please clean by cloth immediately.
- Children and pets are very sensitive to essential oil that is undiluted. Use with caution.
- Stop using the product and open the windows for ventilation. If you have difficulty breathing due to allergic reaction or any special physical conditions, such as pregnancy, lung failure, cancer, epilepsy or other illnesses, please consult your doctor before using essential oils.

Safety Precautions

In order to prevent any accidents happening, must follow the instructions below as you are using this product:

- The instructions of this manual are for users applying this product correctly, and preventing damage or property loss to users or others.
- "WARNING" is central contents for preventing any accidents happening, please follow cautiously.

WARNING

- Stop using the product immediately and unplug once smoke, smell, noise, or other unusual situations appear; it is very possible to cause fire hazard or electric shock, if the product operates continuously.

- Do not alter, repair or dismantle this product on your own, it may cause fire hazard, electric shock, malfunction or injury.

- Please follow local regulations when you are discarding consumables.

精油使用注意事項

- 建議使用 SERENE HOUSE 精油；切勿使用含有香水、香精或含雜質的精油，以免傷害霧化器裝置。
- 精油屬於濃縮的高純度油，有可能溶解塑膠或傢俱塗裝，若不慎沾附於產品外側或傢俱上，請立即擦拭，避免產品外觀或傢俱褪色。使用時請特別小心。
- 幼童與寵物對香味非常敏感，在密閉空間內使用時請特別小心，及避免誤食。
- 使用期間如感覺不舒服或身體不適時，請立即停止使用，並打開窗戶使空氣流通。如您有任何身體上的特殊狀況，例如懷孕、肺衰竭、癌症或癲癇等症狀，使用精油前建議請先諮詢您的醫師。

注意事項

為了預防使用時發生意外，請務必遵守以下事項：

- 本使用說明書的注意事項，是為了讓使用者能正確的使用本產品，防止對使用者或他人造成危害及財產損失。
- 警告事項皆為預防意外發生的重要內容，請務必遵守。

警告

- 萬一出現冒煙、異味、雜音等異常現象時，仍繼續使用的話，可能導致火災、觸電等，請立即將電源移除，停止使用。

- 請勿擅自對本產品進行改造、修理或拆解，否則有可能造成火災、觸電、故障或受傷。

- 耗材廢棄時，請遵照各國法規。

- ! • 本產品所附的USB電源線也可支援外接的USB變壓器。

- 請勿於安裝機器時連接電源，否則有可能造成觸電或受傷。

- 本產品於長期不使用或移動時，請務必關閉電源並拔下所有插頭，並請倒掉容器內的水，否則可能造成產品故障。
- 拔下插頭時，請勿拉扯USB電源線，必須緊握插頭後再進行拔除，否則有可能造成破損或受傷。

精油使用注意事项

- 建议使用 SERENE HOUSE 精油；切勿使用含有香水、香精或含杂质的精油，以免伤害雾化器装置。
- 精油属于浓缩的高纯度油，有可能溶解塑料或家具涂装，若不慎沾附于产品外侧或家具上，请立即擦拭，避免产品外观或家具褪色。使用时请特别小心。
- 幼童与宠物对香味非常敏感，在密闭空间内使用时请特别小心，及避免误食。
- 使用期间如感觉不舒服或身体不适时，请立即停止使用，并打开窗户使空气流通。如您有任何身体上的特殊状况，例如怀孕、肺衰竭、癌症或癫痫等症状，使用精油前建议请先咨询您的医师。

注意事项

为了预防使用时发生意外，请务必遵守以下事项：

- 本使用说明书的注意事项，是为了让使用者能正确的使用本产品，防止对使用者或他人造成危害及财产损失。

- 警告事项皆为预防意外发生的重要内容，请务必遵守。

警告

- 万一出现冒烟、异味、杂音等异常现象时，仍继续使用的话，可能导致火灾、触电等，请立即断开电源，停止使用。

- 请勿擅自对本产品进行改造、修理或拆解，否则有可能造成火灾、触电、故障或受伤。

- 耗材废弃时，请遵照各国法规。

- ! • 本产品所附的USB电源线也可支持外接的USB适配器。

- 请勿于安装机器时连接电源，否则有可能造成触电或受伤。

- 本产品于长期不使用或移动时，请务必关闭电源并拔下所有插头，并请倒掉容器内的水，否则可能造成产品故障。
- 拔下插头时，请勿拉扯USB电源线，必须紧握插头后再进行拔除，否则有可能造成破损或受伤。



- Optional : This product can also be connected with USB Power Adapter.
- Do not connect the power during installation, as electric shock and injury may occur.
- The product should always be unplugged and the water tank should always be empty when moving the product or when the product is not in operation.
- When unplugging the USB power cord from the outlet, do not pull on the wire. Hold the plug firmly and then unplug it, or else damage or injury may occur.



- If USB power cord or plug is damaged, or the product is dropped, hit, damaged, or broken, stop using it, this is possible to cause electric shocks or short circuit.
- Do not operate this product with wet hands, or drip or spill water or other liquids onto the product. These may cause electric shock or injuries.
- Do not deliberately place your eyes, nose or mouth close to the fragrance mist emitted as this may cause physical discomfort.
- Do not touch fingers or hands into the product.
- In order to avoid any danger or accidents, parents guard is necessary when children use this product.
- Please follow the instructions to use this product; it is possible to result in poisoning or fire hazard, if other substances are used. Do not immerse this product in water, this product is for household use only.
- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible.
- Do not let children use this product alone, keep it out of reach of children, or it may cause electric shocks or injuries.
- To avoid fire hazard, electric shocks, injuries or malfunction, please do not keep this product in the following places:
 - Under direct sunlight or high temperature environments, and keep away from fire sources.
 - Places with high pressure or flammable materials.
 - Do not place the product on soft surfaces such as carpet, as this may block the ventilation inlet on the bottom of the unit, causing the device to not function correctly.
 - Do not over bend, heat, or place heavy objects on the USB power cord, or it may cause fire hazard or malfunction.
- If an extension cord is used, please pay attention to the introductions to electric appliances used. The specifications should be the same. The USB power cord should be placed at evident places to avoid children pulling or stumbling.
- In order to prevent accidents happening, if the USB power cord is damaged, please replace it via the manufacturer, other service departments, or staffs who own related qualifications.

Specifications

- Fragrance results may vary depending on ventilation, temperature, humidity, and the size of surrounding space.



- 當USB電源線或插頭破損時，或是產品不小心摔落或受到撞擊而受損或破裂時，不得繼續使用本產品，否則有可能造成觸電、短路等問題。
- 請勿用濕的手操作本產品，或讓水等其他液體沾附、濺灑到上面，否則有可能造成觸電受傷。
- 請勿故意將眼口鼻靠近出霧口所排出的香氛霧氣，否則有可能造成身體不適。
- 請勿在本產品運作時將手或手指放置於本產品之內。
- 為避免危險，幼童須在成年人監督下使用產品，預防意外發生。
- 錯誤使用本產品，將可能導致火災的意外，請依指示使用本產品，若使用其他介質將可能引發中毒或火災的危險；請勿將本產品浸入水中，本產品僅供空間香氛使用。
- 除非有專業人士的督導和指示，本產品不適合由身體、感官或精神能力欠佳，或缺乏經驗及知識的人士使用（包括兒童）。
- 建議放在幼童與寵物觸及不到的地方，避免意外發生。
- 請勿將本產品放置在以下地方，否則有可能引起火災、觸電、受傷、故障：
 - 阳光直射或高溫的環境，並遠離火源。
 - 高壓物及易燃物周圍。
- 請勿放置於地毯等柔軟的地方，否則會堵塞底部的進氣口，造成機器無法正常運作。
- 請勿將USB電源線過度彎折、加熱或上方放置重物，否則有可能引起火災或故障。
- 連接長延線時，請注意所使用的電器規格，USB電源線應放置於明顯的地方，避免拉扯或絆倒。
- 若USB電源線損壞時，請由製造廠或其他服務處或具有相關資格的人員加以更換以避免危險。

產品規格

產品名稱：遊騎兵香氛霧化機

內容物：主機X1、USB電源線X1、

說明書X1、產品保證書X1

產品材質：塑膠

產品規格：INPUT : DC 5V/4W

頻率(MHz) : 3.0±0.05%

水槽容量 : 60ml

產品尺寸 : 直徑7x高11.9公分

產品重量：約 215 公克

運作模式：連續霧化/間歇霧化

連續霧化時間：≥3小時

間歇霧化時間：≥6小時

建議使用空間：10~15 平方公尺

產品用途：空間香氛用

產地：中國



- Atomization mode: Intermittent atomization time: ≥ 6 hr
Continuous atomization time: ≥ 3 hr
Suggested room size: 10 ~ 15 m² (107.6 ~ 161.4 sq ft)
Ultrasonic frequency(MHz): 3.0 ± 0.05%
Water tank capacity: 60 ml (2.0 fl oz)
Power input: DC 5V, 4W
Operation mode: Continuous mode / Intermittent mode
Accessories included: USB power cord / Manual / Warranty card
Design team: SERENE HOUSE
Patented Product
The device complies with Part 18 of the FCC Rules.

Troubleshooting

When the product is broken-down, please confirm the following items before sending it for maintenance:

Machine does not operate

- Check the USB power
→ Make sure the USB power is fully and correctly plugged into the electrical outlet.
• The USB power cord is not connected to the main unit
→ Be sure plug is correctly inserted into the power jack on the main unit .
• The power is correctly connected but the device still does not operate
→ Check whether the water tank contains any water and then recheck that the ON/OFF switch is on . Check that the water level in the tank does not exceed the maximum water level line (MAX) ; if this is the case, empty out the excess water.

The product does not atomize or does not atomize effectively

- The water temperature is too low
→ Fill the water tank with mineral water at a temperature 25 ° C ~ 40 ° C(77°F~104°F).
• Use hard water or distilled water
→ Please use tap water or mineral water (The calcium carbonate from arid hard water will pile, please filter the water before using).
• Dirty atomizer
→ Perform maintenance according to the 'Cleaning & Maintenance' section of this manual.
• Placement of the product
→ Place the device on a flat, stable and suitable surface as well as in light wind place .
• Check the water volume
→ Make sure the water does not exceed its designated water mark level (MAX) , or drain the excess water.
• The cover does not attach securely to the main unit
→ Reattach the cover according to the procedure in the 'Operating Instructions' section of this manual.

Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +868 2 7721 8848

障礙排除

疑似故障時，請在委託維修前確認以下事項：

機器無法運作

- USB接頭未確實插在插座上
→ 請確認USB接頭是否正確的安插到插座上。
- USB電源線未正確的接上主體的電源孔
→ 請確認USB電源線是否正確的接上主體的電源孔。
- 電源已正確接上，但仍然不會運作
→ 請先確認水槽是否有水，然後再確認電源開關是否開啟。或確認是否超過最高水位線(MAX)，如超出，請將超出水量倒出水槽外。

無法霧化或霧化效果不佳

- 水溫太低
→ 請使用溫度在25°C到40°C的自來水或礦泉水。
- 使用硬水或蒸餾水
→ 請使用自來水或礦泉水 (某些地區的水質容易造成水垢，請將水過濾後再使用)。
- 霧化器髒污
→ 請依照本說明書的「清潔保養」方法進行保養。
- 機器放置在地毯等柔軟物體上，或者使用場所的風量過大
→ 請在水平、平穩及風量小的場所使用。
- 水槽內水位超過最高水位線 (MAX)
→ 請將多餘的清水倒掉。
- 上蓋未確實與主體蓋緊
→ 請依照本說明書的「使用說明」步驟重新蓋緊上蓋。

如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。請勿自行拆解或維修本產品。
服務專線 : +868 2 7721 8848

Warranty Card

SERENE HOUSE is providing 1 Year Warranty Service, please keep this Warranty card properly (Will not reissue one another if missing), or you can register your product's warranty on our website to guarantee your product's warranty rights.

To register your product's warranty → <https://www.serenehouse.tw/forms/product-registration>

1. Customer should follow the instruction to use the product, if the product is malfunction during Warranty Period, please keep your Warranty card and Receipt, to apply for maintenance services, we will repair or replace a new one for you.

2. Under these situations, there will be additional charge even though it is in Warranty Period.

- Fire Hazard, Broken, Gas explosion, Earthquake, Windstorm, Flood, Thunder, Abnormal Voltage, Natural disasters or Force Majeure that cause product to breakage or malfunction.
- Content of Warranty Card is incomplete, alters, or not able to provide a valid purchase evidence.
- Discolor, scars, stains and improper keeping that cause product to malfunction.
- Replacement consumable accessories (batteries, remote control, cleansing brush)

- 3. When you need your product to be repaired, please register from website or contact to local distributor, we will contact you as soon as possible.

Maintenance Request Form → <https://www.serenehouse.tw/forms/repair-application>

Customer Info

Name _____ Mr / Mrs _____ Phone _____

Address _____

E-mail _____

Product Info

Name _____

Model _____

Manufacturer Code _____

Retailer _____

Purchase Date Y M D

Warranty Period 12 Months After Purchase (Not including consumable accessories)

Customer Service's Phone Number: (02) 7721-8848

Customer Service's Email: service_tw@serene-house.com

QR Code Product Registration Request Form

QR Code Product Registration Request Form