

SERENE HOUSE®



Serene Pod® Wax Warmer
Instruction Manual

IMPORTANT SAFETY INSTRUCTIONS

In order to ensure safety and correct usage, please read all the safeguards below as using electric products every time.

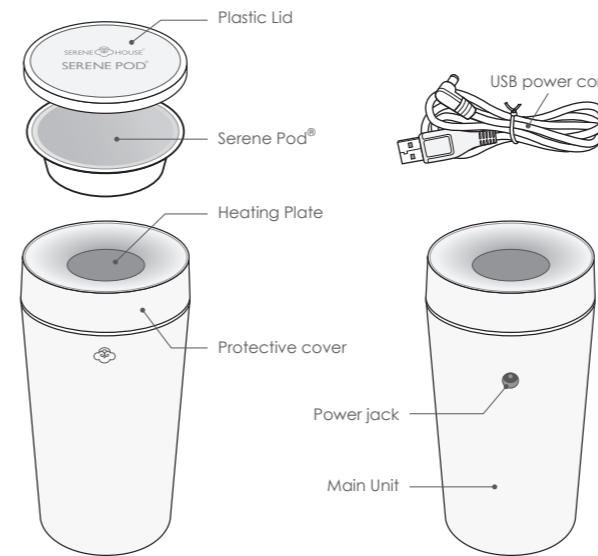 
⚠ WARNING

- When using electric products, basic precautions should always be followed, including the following:
- Read all instructions before using the product.
 - Do not put hands, fingers or any other objects into the product while it is in use.
 - To reduce risk of injury, close supervision is necessary when used near children.
 - Failure to follow instructions could result in a fire hazard. The appliance is only to be used with the Serene Pod®. The use of other substances may give rise to a toxic or fire risk. Do not immerse this appliance in water. This appliance is for household use only. This product is portable.
 - This product could be powered by connecting with USB power cord.
 - Recommend place the USB power cord at evident places to avoid children pulling or stumbling, as the USB power cord is being used.
 - If an extension cord is used, please pay attention to the introductions to electric appliances using. The specifications should be the same.
 - If the USB power cord is damaged, please stop using it and contact local distributor or related service department for repair or maintenance.
 - Optional: This product can also be connected with USB Power Adapter. (USB power adaptor is NOT included.)

▲ FOR ADULT USE ONLY. THIS IS NOT A TOY AND IS NOT INTENDED FOR USE BY CHILDREN. KEEP OUT OF REACH OF CHILDREN.

Product & Accessories

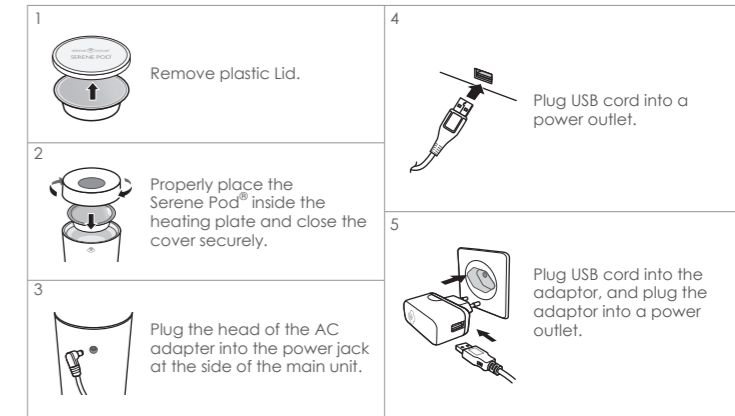 
- Serene Pod® is required to be used with this product. Serene Pod® is sold separately.



(The image is for reference only. Actual product may vary.)

Operating Instructions

- Please remove all packaging before use. (Please do not tear up the woven membrane of Serene Pod®.)



SERENE HOUSE®



可攜式隨行香氛膠囊機
操作使用說明書

重要警告事項

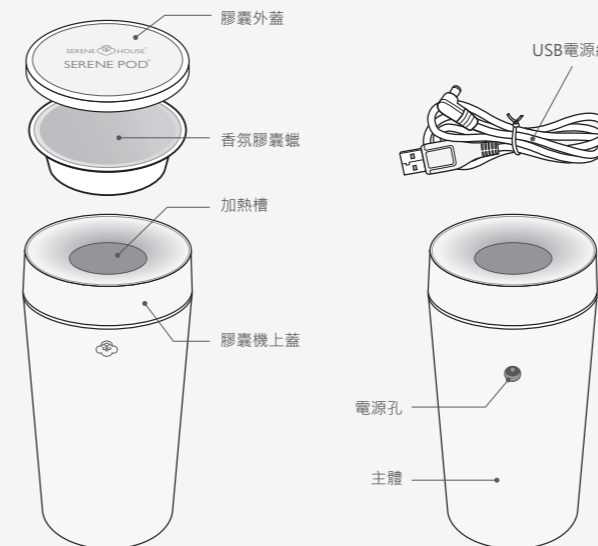 
⚠ 注意！

- 當使用此電器產品時，必須按照下列排序的警告事項執行：
- 使用此產品前請詳閱使用說明書。
 - 請勿在本產品運作時將手、手指或其他異物放置於本產品之內。
 - 為避免危險，幼童須在成年人監督下使用產品，預防意外發生。
 - 錯誤使用本產品，將可能導致火災的意外，請依指示使用本產品，若使用其他介質將可能引發中毒或火災的危險；請勿將本產品浸入水中，本產品僅供空間香氛使用，亦可隨行攜帶至各處擴香。
 - 本產品以內附的USB電源線接電使用。
 - 使用USB電源線時建議將其放置明顯的地方，避免拉扯與意外發生。
 - 本產品可接延長線使用，使用時請注意使用的相關電器規定。
 - 若USB電源線損壞時，請勿繼續使用本產品，並請由當地服務處或具有相關資格的人員加以更換以避免危險。
 - 本產品所附的USB電源線可支援外接的USB變壓器。(本產品不含USB變壓器。)

▲ 請勿讓兒童獨自使用，建議放在兒童觸及不到的地方，否則有可能造成觸電、受傷。

產品與配件介紹

- 本產品僅能搭配使用 SERENE HOUSE 香氛膠囊蠟 Serene Pod®，香氛膠囊蠟為單獨販賣商品。



(圖片僅供參考，請以實品為主。)

使用說明與相關注意事項

- 使用前請去除所有包裝 (請勿撕開香氛膠囊蠟上的透氣膜)。



- 使用本產品前，請仔細閱讀本說明書。
- 本產品僅能使用SERENE HOUSE香氛膠囊蠟Serene Pod®，勿將液體或其他物品放入加熱槽內加熱。
- 香氛膠囊蠟可重複加熱使用，若香味變淡或效果降低時建議更換新的香氛膠囊蠟；香氛膠囊蠟為耗材，請至各門市或線上購買。
- 如果您有任何身體上的特殊狀況，例如懷孕、肺衰竭、癌症或癲癇等症狀，使用前請向您的醫師徵詢意見。

SERENE HOUSE®



便攜式香氛膠囊機
操作使用說明書

重要警惕措施

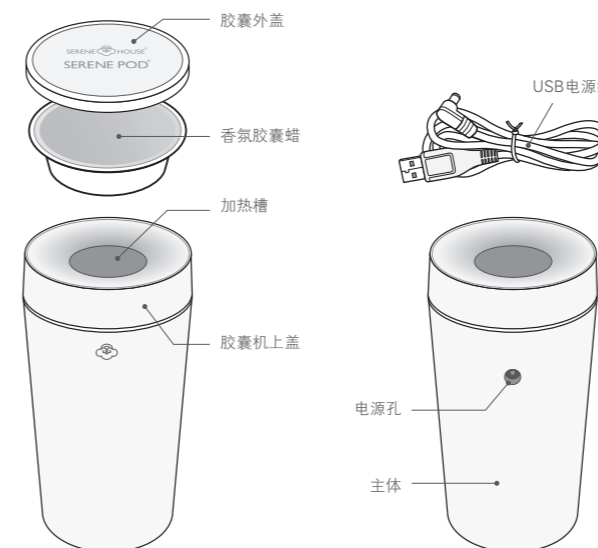 
⚠ 注意！

- 當使用此電器產品時，必須按照下列排序的警告事項執行：
- 使用此產品前請詳閱使用說明書。
 - 請勿在本產品運作時將手、手指或其他異物放置於本產品之內。
 - 為避免危險，幼童須在成年人監督下使用產品，預防意外發生。
 - 錯誤使用本產品，將可能導致火災的意外，請依指示使用本產品，若使用其他介質將可能引發中毒或火災的危險；請勿將本產品浸入水中，本產品僅供空間香氛使用，亦可隨行攜帶至各處擴香。
 - 本產品以內附的USB電源線接電使用。
 - 使用USB電源線時建議將其放置明顯的地方，避免拉扯與意外發生。
 - 本產品可接拖板使用，使用時請注意使用的相关電器規定。
 - 若USB電源線損壞時，請勿繼續使用本產品，並請由當地服務處或具有相關資格的人員加以更換以避免危險。
 - 本產品所附的USB電源線可支持外接的USB适配器。(本產品不含USB适配器。)

▲ 請勿讓兒童獨自使用，建議放在兒童觸及不到的地方，否則有可能造成觸電、受傷。

产品与配件介绍

- 本产品仅能搭配使用 SERENE HOUSE 香氛胶囊蜡 Serene Pod®，香氛胶囊蜡为单独贩卖商品。



(图片仅供参考，请以实物为主。)

使用说明与相关注意事项

- 使用前请去除所有包装 (请勿撕开香氛胶囊蜡上的透气膜)。



- 使用本产品前，请仔细阅读本说明书。
- 本产品仅能使用SERENE HOUSE香氛胶囊蜡Serene Pod®，勿将液体或其他物品放入加热槽内加热。
- 香氛胶囊蜡可重复加热使用，若香味变淡或效果降低时建议更换新的香氛胶囊蜡；香氛胶囊蜡为耗材，请至各门市或线上购买。
- 如果您有任何身体上的特殊状况，例如怀孕、肺衰竭、癌症或癫痫等状况，使用前请向您的医师征询意见。

 
Precautions for Use of Serene Pod®

- Do not tear up or damage the woven membrane of the Serene Pod® in order to avoid spillage of melted wax.
- To prevent burns, please do not touch Serene Pod® when it is being heated.
- Serene Pod® is not edible, please keep children and pets away from it to prevent accidental ingestion.
- Stop using this product and open windows for ventilation if you are not feeling well.
- If the bottom of Serene Pod® is deformed, it is very possible to cause weak effect of heating, and the diffusion of scents is not well, please replace a new Serene Pod® immediately to make sure fine effect of diffusion.

Cleaning & Maintenance

 
- Please disconnect the product from its power source prior to cleaning and maintenance.
- Wait until the product is dry completely after cleaning, then use this product again.
- Do not immerse or wash this product directly, it may cause mechanical malfunction or danger.
- Do not use acidic cleaner, it may cause malfunction to the product.
- Please clean and maintain once a week at least. The lack of maintenance may cause malfunction.

| | |
|--|--|
|  | <ul style="list-style-type: none">Stop using the product immediately and unplug once smoke, smell, noise, or other unusual situations appear; it is very possible to cause fire hazard or electric shock, if the product operates continuously. |
|  | <ul style="list-style-type: none">Do not alter, repair or dismantle this product on your own, it may cause fire hazard, electric shock, malfunction or injury. |
|  | <ul style="list-style-type: none">Please follow local regulations when you are discarding consumables. |
|  | <ul style="list-style-type: none">Please apply the correct voltage as required by the specifications of product. When this product is not in use for long term, must turn the power off, unplug, and take out Serene Pod® from heating plate, or it will result in electric shock or malfunction. Once all power sources are disconnected, allow Serene Pod® to cool thoroughly into a solid form before handling, cleaning and maintenance. If the liquid wax accidently dripped onto objects such as the device or the floor, wipe clean with a damp cloth immediately to avoid discoloration of the exterior of the product or the furniture. |
|  | <ul style="list-style-type: none">If USB power cord or plug is damaged, or the product is dropped, hit, damaged, or broken, stop using it, this is possible to cause electric shocks or short circuit. Do not operate this product with wet hands, or drip or spill water or other liquids onto the product. These may cause electric shock or injuries. Do not power on the device when there is no Serene Pod® in the heating plate, doing so may cause the product to malfunction. In order to prevent any accidents happening, keep this product out of reach of children and pets. To avoid fire hazard, electric shocks, injuries or malfunction, please do not keep this product in the following places: <ul style="list-style-type: none">Under direct sunlight or high temperature environments, and keep away from fire sources. Places with high pressures or flammable materials. Do not over bend, heat, or place heavy objects on the USB power cord, or it may cause fire hazard or malfunction. |

| | |
|--|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|--|--|


香氛膠囊蠟使用注意事項

 
- 使用時，請勿撕開或破壞透氣膜，避免加熱中的蠟液流出。
- 使用中請勿用手碰觸香氛膠囊蠟，以免燙手。
- 香氛膠囊蠟非食品，請遠離兒童及寵物，請勿食用。
- 使用期間，感覺不舒服或身體不適時，請立即停止使用，並打開窗戶使空氣流通。
- 香氛膠囊蠟底部如有變形，易導致加熱效果不佳，香味無法擴散；請立即更替新品，以確保正常的擴香效果。

 
| | |
|--|--|
|  | <ul style="list-style-type: none">萬一出現冒煙、異味、雜音等異常現象時，仍繼續使用的話，可能導致火災、觸電等，請立即將電源移除，停止使用。 |
|--|--|

 
| | |
|--|--|
|  | <ul style="list-style-type: none">請勿擅自對本產品進行改造、修理或拆解，否則有可能造成火災、觸電、故障或受傷。 |
|--|--|

| | |
|--|--|
|  | <ul style="list-style-type: none">耗材廢棄時，請遵照各國法規。 |
|--|--|


| | |
|--|--|
|  | <ul style="list-style-type: none">請依產品規格使用正確電壓。 本產品於長期不使用或移動時，請務必移除所有電源插頭，取出加熱槽內的香氛膠囊蠟，否則有可能造成觸電或故障。 電源移除後，請在香氛蠟液完全冷卻凝固的狀態下，再取出香氛膠囊蠟及進行清潔保養。 萬一不小心將香氛蠟液滴到機器或地板等物體上，請立即用布擦拭乾淨；如不做處理，有可能導致外觀部分褪色。 |
|--|--|


| | |
|--|---|
|  | <ul style="list-style-type: none">當USB電源線或插頭破損時，或是產品不小心摔落或受到撞擊而受損或破裂時，不得繼續使用本產品，否則有可能造成觸電、短路等問題。 請勿用濕的手操作本產品，或讓水等其他液體沾附、灑灑到上面，否則有可能造成觸電受傷。 加熱槽在沒有香氛膠囊蠟的情況下，請勿將電源接通，否則有可能導致產品故障。 建議放在幼童與寵物觸及不到的地方，避免意外發生。 請勿將本產品放置在以下地方，否則有可能引起火災、觸電、受傷、故障： <ul style="list-style-type: none">陽光直射或高溫的環境，並遠離火源。 高壓物及易燃物周圍。 請勿將USB電源線過度彎折、加熱或上方放置重物，否則有可能引起火災或故障。 |
|--|---|

| | |
|--|---|
|  | <ul style="list-style-type: none">當USB電源線或插頭破損時，或是產品不小心摔落或受到撞擊而受損或破裂時，不得繼續使用本產品，否則有可能造成觸電、短路等問題。 請勿用濕的手操作本產品，或讓水等其他液體沾附、灑灑到上面，否則有可能造成觸電受傷。 加熱槽在沒有香氛膠囊蠟的情況下，請勿將電源接通，否則有可能導致產品故障。 建議放在幼童與寵物觸及不到的地方，避免意外發生。 請勿將本產品放置在以下地方，否則有可能引起火災、觸電、受傷、故障： <ul style="list-style-type: none">陽光直射或高溫的環境，並遠離火源。 高壓物及易燃物周圍。 請勿將USB電源線過度彎折、加熱或上方放置重物，否則有可能引起火災或故障。 |
|--|---|

| | |
|--|--|
|  | <ul style="list-style-type: none">如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。請勿自行動手拆解或維修本產品。服務專線：+886 2 7721 8848 |
|--|--|

 
| | |
|--|--|
|  | <ul style="list-style-type: none">如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。請勿自行動手拆解或維修本產品。服務專線：+86 400-885-3268 |
|--|--|

| | |
|--|--|
|  | <ul style="list-style-type: none">如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。請勿自行動手拆解或維修本產品。服務專線：+86 400-885-3268 |
|--|--|

| | |
|--|--|
|  | <ul style="list-style-type: none">萬一出現冒烟、異味、杂音等异常现象时，仍继续使用的話，可能导致火灾、触电等，请立即将电源移除，停止使用。 |
|--|--|

| | |
|--|--|
|  | <ul style="list-style-type: none">请勿擅自对本产品进行改造、修理或拆解，否则有可能造成火灾、触电、故障或受伤。 |
|--|--|

| | |
|--|--|
|  | <ul style="list-style-type: none">耗材废弃时，请遵照各国法规。 |
|--|--|


| | |
|--|--|
|  | <ul style="list-style-type: none">请依产品规格使用正确电压。 本产品于长期不使用或移动时，请务必移除所有电源插头，取出加热槽内的香氛胶囊腊，否则有可能造成触电或故障。 电源移除后，请在香氛蜡液完全冷却凝固的状态下，再取出香氛胶囊蜡及进行清洁保养。 万一不小心将香氛蜡液滴到机器或地板等物体上，请立即用布擦拭干净；如不做处理，有可能导致外观部分褪色。 |
|--|--|

| | |
|--|---|
|  | <ul style="list-style-type: none">当USB电源线或插头破损时，或是产品不小心掉落或受到撞击而受损或破裂时，不得继续使用本产品，否则有可能造成触电、短路等问题。 请勿用湿的手操作本产品，或让水等其他液体沾附、溅洒到上面，否则有可能造成触电受伤。 加热槽在沒有香氛胶囊蜡的情况下，请勿将电源接通，否则有可能导致产品故障。 建议放在幼童与宠物触及不到的地方，避免意外发生。 请勿将本产品放置在以下地方，否则有可能引起火灾、触电、受伤、故障： <ul style="list-style-type: none">阳光直射或高温的环境，并远离火源。 高压物及易燃物周围。 请勿将USB电源线过度弯折、加热或上方放置重物，否则有可能引起火灾或故障。 |
|--|---|

Safety Precautions


In order to prevent any accidents happening, must follow the instructions below as you are using this product :


- The instructions of this manual are for users applying this product correctly, and preventing damage or property loss to users or others.
- “WARNING” is central contents for preventing any accidents happening, please follow cautiously.

 
| | |
|---|---|
|  | <ul style="list-style-type: none">Stop using the product immediately and unplug once smoke, smell, noise, or other unusual situations appear; it is very possible to cause fire hazard or electric shock, if the product operates continuously. |
|---|---|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not alter, repair or dismantle this product on your own, it may cause fire hazard, electric shock, malfunction or injury. |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Please follow local regulations when you are discarding consumables. |
|---|--|

| | |
|---|---|
|  | <ul style="list-style-type: none">Please apply the correct voltage as required by the specifications of product. When this product is not in use for long term, must turn the power off, unplug, and take out Serene Pod® from heating plate, or it will result in electric shock or malfunction. Once all power sources are disconnected, allow Serene Pod® to cool thoroughly into a solid form before handling, cleaning and maintenance. If the liquid wax accidently dripped onto objects such as the device or the floor, wipe clean with a damp cloth immediately to avoid discoloration of the exterior of the product or the furniture. |
|---|---|

| | |
|---|--|
|  | <ul style="list-style-type: none">If USB power cord or plug is damaged, or the product is dropped, hit, damaged, or broken, stop using it, this is possible to cause electric shocks or short circuit. Do not operate this product with wet hands, or drip or spill water or other liquids onto the product. These may cause electric shock or injuries. Do not power on the device when there is no Serene Pod® in the heating plate, doing so may cause the product to malfunction. In order to prevent any accidents happening, keep this product out of reach of children and pets. To avoid fire hazard, electric shocks, injuries or malfunction, please do not keep this product in the following places: <ul style="list-style-type: none">Under direct sunlight or high temperature environments, and keep away from fire sources. Places with high pressures or flammable materials. Do not over bend, heat, or place heavy objects on the USB power cord, or it may cause fire hazard or malfunction. |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|


注意事項


為了預防使用時發生意外，請務必遵守以下事項：


- 本使用說明書的注意事項，是為了讓使用者能正確的使用本產品，防止對使用者或他人造成危害及財產損失。
- 警告事項皆為預防意外發生的重要內容，請務必遵守。

 
| | |
|---|--|
|  | <ul style="list-style-type: none">萬一出現冒煙、異味、雜音等異常現象時，仍繼續使用的話，可能導致火災、觸電等，請立即將電源移除，停止使用。 |
|---|--|


| | |
|---|--|
|  | <ul style="list-style-type: none">請勿擅自對本產品進行改造、修理或拆解，否則有可能造成火災、觸電、故障或受傷。 |
|---|--|


| | |
|---|--|
|  | <ul style="list-style-type: none">耗材廢棄時，請遵照各國法規。 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">請依產品規格使用正確電壓。 本產品於長期不使用或移動時，請務必移除所有電源插頭，取出加熱槽內的香氛膠囊蠟，否則有可能造成觸電或故障。 電源移除後，請在香氛蠟液完全冷卻凝固的狀態下，再取出香氛膠囊蠟及進行清潔保養。 萬一不小心將香氛蠟液滴到機器或地板等物體上，請立即用布擦拭乾淨；如不做處理，有可能導致外觀部分褪色。 |
|---|--|

| | |
|---|---|
|  | <ul style="list-style-type: none">當USB電源線或插頭破損時，或是產品不小心摔落或受到撞擊而受損或破裂時，不得繼續使用本產品，否則有可能造成觸電、短路等問題。 請勿用濕的手操作本產品，或讓水等其他液體沾附、灑灑到上面，否則有可能造成觸電受傷。 加熱槽在沒有香氛膠囊蠟的情況下，請勿將電源接通，否則有可能導致產品故障。 建議放在幼童與寵物觸及不到的地方，避免意外發生。 請勿將本產品放置在以下地方，否則有可能引起火災、觸電、受傷、故障： <ul style="list-style-type: none">陽光直射或高溫的環境，並遠離火源。 高壓物及易燃物周圍。 請勿將USB電源線過度彎折、加熱或上方放置重物，否則有可能引起火災或故障。 |
|---|---|

| | |
|---|--|
|  | <ul style="list-style-type: none">如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。請勿自行動手拆解或維修本產品。服務專線：+886 2 7721 8848 |
|---|--|


| | |
|---|--|
|  | <ul style="list-style-type: none">如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。請勿自行動手拆解或維修本產品。服務專線：+86 400-885-3268 |
|---|--|


| | |
|---|--|
|  | <ul style="list-style-type: none">如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。請勿自行動手拆解或維修本產品。服務專線：+86 400-885-3268 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">萬一出現冒烟、異味、杂音等异常现象时，仍继续使用的話，可能导致火灾、触电等，请立即将电源移除，停止使用。 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">请勿擅自对本产品进行改造、修理或拆解，否则有可能造成火灾、触电、故障或受伤。 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">耗材废弃时，请遵照各国法规。 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">请依产品规格使用正确电压。 本产品于长期不使用或移动时，请务必移除所有电源插头，取出加热槽内的香氛胶囊腊，否则有可能造成触电或故障。 电源移除后，请在香氛蜡液完全冷却凝固的状态下，再取出香氛胶囊蜡及进行清洁保养。 万一不小心将香氛蜡液滴到机器或地板等物体上，请立即用布擦拭干净；如不做处理，有可能导致外观部分褪色。 |
|---|--|


| | |
|---|---|
|  | <ul style="list-style-type: none">当USB电源线或插头破损时，或是产品不小心掉落或受到撞击而受损或破裂时，不得继续使用本产品，否则有可能造成触电、短路等问题。 请勿用湿的手操作本产品，或让水等其他液体沾附、溅洒到上面，否则有可能造成触电受伤。 加热槽在沒有香氛胶囊蜡的情况下，请勿将电源接通，否则有可能导致产品故障。 建议放在幼童与宠物触及不到的地方，避免意外发生。 请勿将本产品放置在以下地方，否则有可能引起火灾、触电、受伤、故障： <ul style="list-style-type: none">阳光直射或高温的环境，并远离火源。 高压物及易燃物周围。 请勿将USB电源线过度弯折、加热或上方放置重物，否则有可能引起火灾或故障。 |
|---|---|


| | |
|---|--|
|  | <ul style="list-style-type: none">如產品出現其它故障，請聯繫SERENE HOUSE官方客服或請與專賣店聯繫。請勿自行動手拆解或維修本產品。服務專線：+86 400-885-3268 |
|---|--|

Troubleshooting


When the product is broken-down, please confirm the following items before sending it for maintenance:


| | |
|---|--|
|  | <ul style="list-style-type: none">Machine does not operate |
|---|--|

| | |
|---|---|
|  | <ul style="list-style-type: none">The plugs of USB power cord are not correctly inserted into the power jack and electrical outlet. <ul style="list-style-type: none">→ Please make sure that the plugs of USB power cord are correctly inserted into the power jack and electrical outlet. |
|---|---|

| | |
|---|--|
|  | <ul style="list-style-type: none">The power indicator is not on. <ul style="list-style-type: none">→ Please confirm the plugs of USB power cord are inserted into the power jack and electrical outlet properly. |
|---|--|

| | |
|---|---|
|  | <ul style="list-style-type: none">Poor Scents Diffusion |
|---|---|

| | |
|---|--|
|  | <ul style="list-style-type: none">The scents fade or the woven membrane is damaged <ul style="list-style-type: none">→ Please replace new Serene Pod®. |
|---|--|

 
| | |
|---|---|
|  | <ul style="list-style-type: none">The heating plate is dirty <ul style="list-style-type: none">→ Please conduct maintenance according to the Cleaning & Maintenance section of this manual. |
|---|---|

 
| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

 
| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

 
| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|


| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

 
| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

 
| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

 
| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

 
| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

 
| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|


| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|


| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|


| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

 
| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|--|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please contact with SERENE HOUSE customers service or local shop. Service Line: +886 2 7721 8848 |
|---|--|

| | |
|---|---|
|  | <ul style="list-style-type: none">Do not attempt to dismantle or repair the product by yourself. If the unit still does not |
|---|---|