




Aroma Diffuser
Instruction Manual

Product & Accessories


Please check to ensure the following items are present and inspect for damage before use.

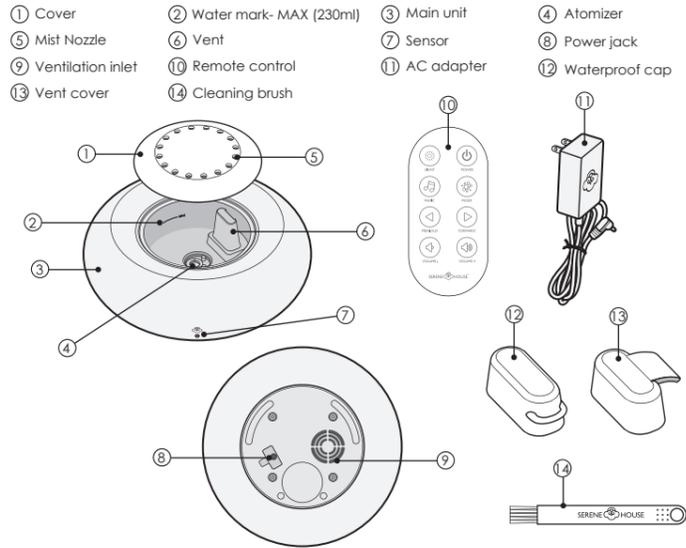

(The image is for reference only. Actual product may vary.)

Operating Instructions

Always place your aroma diffuser on a firm, flat and level surface.
Condensation may occur around the aroma diffuser when operating in high humidity environment.

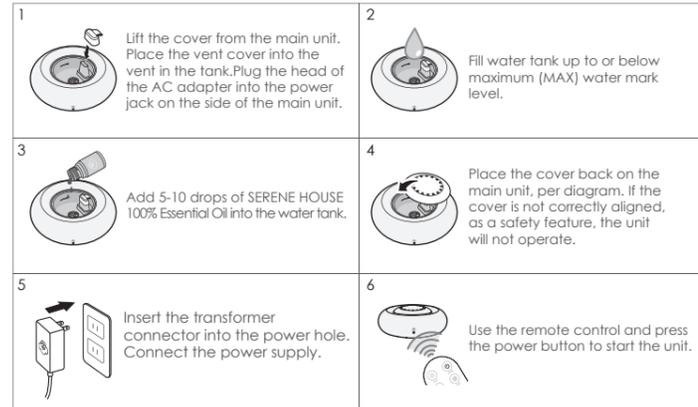

Please use tap water, soft water or mineral water, other liquids are not recommended.
Please use water with temperature 25°C ~40°C (77°F~104°F); if using water below 5°C/41°F, the diffuser starts longer.
Do not move or tip the device when it is operation and there is water or oil in the tank.
For safety purposes, the diffuser is programmed to stop operating automatically when it detects the water is below its programmed level.

Remote Control



	ON / OFF BUTTON
	ROTATING 7 LED LIGHTS OR INDIVIDUAL LIGHT
	CONTINUOUS / INTERMITTENT ATOMIZING MODE
	BUILT-IN MUSIC / BLUETOOTH ENABLED
	MUSIC SELECTION BUTTON
	VOOLUME ADJUSTMENT BUTTON

Bluetooth Instructions

1. Turn on the power of Remote control.
2. Press its music button to change to Bluetooth mode.
3. Start up the Bluetooth of your smartphone, select "SERENE HOUSE" device, make sure it's connected ready with the diffuser machine.
4. Choose the music by Remote control or your smartphone and start to enjoy!

Cleaning & Maintenance


Always disconnect the AC adapter from the electrical outlet before cleaning.
For best atomizing performance, be sure to clean the aroma diffuser after each use.
Remove the lid, empty the water from the tank, add a small amount of warm water (do not exceed 40°C/104°F). And few drops of neutral cleanser. Use a cotton swab to clean the atomizer and internal surface of the water tank. Gently rinse all the soap out of the water tank after washing.
Never use acidic cleansers as this may cause malfunction.
Be careful to not allow water to enter the vent.
If water accidentally flows into the ventilation inlet, vent or control buttons, allow internal mechanism to dry thoroughly (at least 6 hours) before the next use, otherwise this may cause the device to malfunction.



甜甜圈香氛雾化机
操作使用说明书

產品與配件介紹

使用前，請確認以下物品是否齊全，有無破損情況。

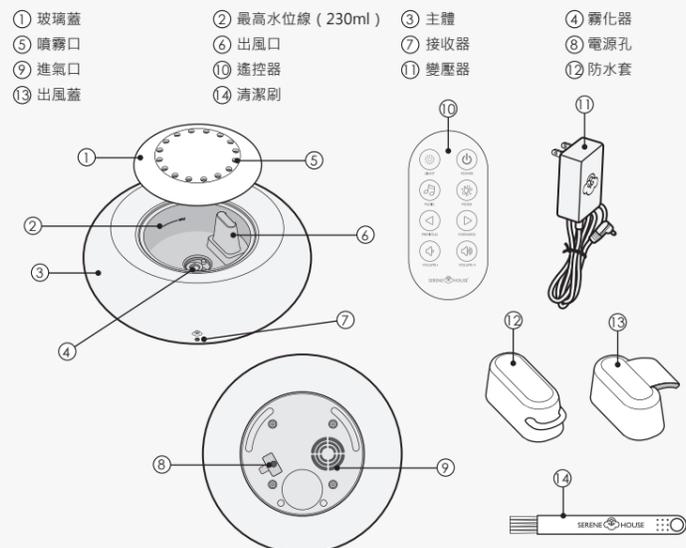

(圖片僅供參考，請以實品為主)

使用說明與相關注意事項

請在穩固、平坦、水平的地方使用本產品。
若室內環境濕度較高，在使用香氛霧化機時，易在機器周圍產生水氣。



請使用自來水、軟水或礦泉水，不建議使用其他液體，並請注意不要使用蒸餾水，因水中礦物質已被過濾，將影響機器霧化效果，不易產生霧氣。
請使用溫度25°C~40°C的水，如使用低於5°C的水，香氛霧化機啟動所需的時間較久，此為正常情況。
切勿從任何風口加入水和精油。
若未確實安裝出風蓋及玻璃蓋，可能導致機器無法霧化或霧化效果不佳。
機器運作時，請勿移動、傾斜或傾倒主體。
如遇水量不足，機器將會自動斷電。

遙控器說明



	電源鍵：機器開啟或關閉。
	燈光鍵：開啟七彩LED燈光自動輪換或鎖定單色情境燈。
	霧化模式設定鍵：切換連續或間歇霧化模式 (間歇霧化為30秒開30秒關，重複循環)。
	音樂設定鍵：播放內建音樂 / 連接藍牙。
	音樂選取鍵：往左選擇一首音樂，往右選擇下一首音樂。
	音量調整鍵：左鍵減小音量，右鍵增大音量。

藍牙操作說明

1. 打開遙控器開關。
2. 按下音樂設定鍵調整為藍牙連接模式。
3. 開啟您行動裝置的藍牙功能，選擇「SERENE HOUSE」裝置，確認是否與機器正常連接。
4. 使用遙控器選擇音樂或使用您的行動裝置自由設定播放。

清潔保養


在每次清潔保養前，務必先關閉電源並拔除變壓器及移除主體上的變壓器電源線接頭，建議每次使用完畢即進行清潔保養，以確保機器正常運作。
1. 拔除插座上的變壓器，再拔除主體上的電源線。為避免水從水槽中灑灑出來，每次拔除變壓器時請保持機器主體平穩擺放。
2. 取下玻璃蓋，並將水槽中的出風蓋更換為防水套，淨空水槽內的水，並加入適量溫水 (水溫勿超過40°C)，再滴入少許中性清潔劑，使用清潔刷輕拭霧化器及水槽內部表面，清潔完畢後請將水槽內的清潔劑清洗乾淨。
3. 請注意不讓水進入出風口。
4. 請勿使用酸性清潔劑，否則有可能導致機器損壞。
5. 若水不慎進入進氣口、出風口，請靜置至少6小時，待機器完全乾燥後，方可使用。
6. 清潔完畢後，請將玻璃蓋蓋回主體上。



甜甜圈香氛雾化机
操作使用说明书

产品与配件介绍

使用前，请确认以下物品是否齐全，有无反损坏情况。

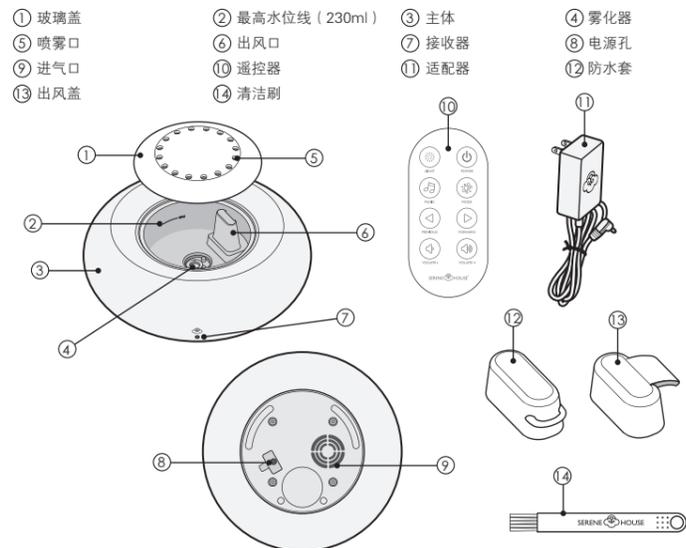

(图片仅供参考，请以实品为主。)

使用说明与相关注意事项

请在稳固、平坦、水平的地方使用本产品。
若室内环境湿度较高，在使用香氛雾化机时，易在机器周围产生水气。



请使用自来水、软水或矿泉水，不建议使用其他液体，并请注意不要使用蒸馏水，因水中矿物质已被过滤，将影响机器雾化效果，不易产生雾气。
请使用温度25°C~40°C的水，如使用低于5°C的水，香氛雾化机启动所需的时间较久，此为正常情况。
切勿从任何风口加入水和精油。
若未确实安装出风盖及玻璃盖，可能导致机器无法雾化或雾化效果不佳。
机器运作时，请勿移动、倾斜或倾倒主体。
如遇水量不足，机器将会自动断电。

遥控器说明



	电源键：机器开启或关闭。
	灯光键：开启七彩LED灯光自动轮换或锁定单色情境灯。
	雾化模式设定键：切換連續或間歇雾化模式 (間歇雾化為30秒開30秒關，重複循環)。
	音乐设定键：播放內建音樂 / 連接藍牙。
	音乐选取键：往左选择一首音乐，往右选择下一首音乐。
	音量调整键：左键减小音量，右键增大音量。

蓝牙操作说明

1. 打开遥控器开关。
2. 按下音乐设定键调整为蓝牙连接模式。
3. 开启您移动装置的蓝牙功能，选择「SERENE HOUSE」装置，确认是否与机器正常连接。
4. 使用遥控器选择音乐或使用您的移动装置自由设定播放。

清洁保养

在每次清洁保养前，务必先关闭电源并拔除适配器及移除主体上的适配器电源线接头，建议每次使用完毕即进行清洁保养，以确保机器正常运作。
1. 拔除插座上的适配器，再拔除主体上的电源线。为避免水从水槽中洒洒出来，每次拔除适配器时请保持机器主体平穩擺放。
2. 取下玻璃盖，并将水槽中的出风盖更换为防水套，净空水槽内的水，并加入适量温水 (水温勿超过40°C)，再滴入少许中性清洁剂，使用清洁刷轻拭雾化器及水槽内部表面，清洁完毕后请将水槽内的清洁剂清洗干淨。
3. 请注意不让水进入出风口。
4. 请勿使用酸性清洁剂，否则有可能导致机器损坏。
5. 若水不慎进入进气口、出风口，请静置至少6小时，待机器完全干燥后，方可使用。
6. 清洁完毕后，请将玻璃盖盖回主体上。

Precautions before use

- This product is manufactured using the ultrasonic atomization principle, and while it does add slight humidity to the air, its primary purpose is as a fragrance diffuser.
- Never connect the power without placing the cover on the unit.
- Do not remove the cover or block the ventilation inlet under the main unit during usage.
- When the device is in operation and there is water in water tank, do not touch the atomizer as personal injury or device malfunction may occur.
- After each use, make sure to pour out any remaining water in the tank.
- Please use tap water, soft water or mineral water, other liquids are not recommended.
- Make sure to wipe clean with a cloth if oil drips on the main unit or floor.
- Soft water is best for your Serene House diffuser. You may also use bottled or mineral water.
- It is important to not use steamed distilled water, as this water had the minerals removed from the water that affects the operation of the diffusers.
- Reverse osmosis (RO) water also has less minerals in the water and the diffuser will not be able to diffuse the mist properly and the desired results will not be achieved.
- Hard water is also not recommended. This would require that the oscillator be cleaned every time after use when using hard water, because the calcium carbonate from hard water will pile. Also, hard water is too heavy for oscillator to diffuse mist.

Notes on the use of oils

- For best performance of this Aroma diffuser, we recommend using essential oil from SERENE HOUSE.
- Essential oils are highly concentrated oils. Use with caution. Do not spill the oils as they may damage plastic objects and furniture. If essential oil drops on the surface of this machine or other objects or on the floor, please clean by cloth immediately.
- Children and pets are very sensitive to essential oil that is unedible. Use with caution.
- Stop using the product and open the windows for ventilation. If you have difficulty breathing due to allergic reaction or any special physical conditions, such as pregnancy, lung failure, cancer, epilepsy or other illnesses, please consult your doctor before using essential oils.

Safety Precautions

In order to prevent any accidents happening, must follow the instructions below as you are using this product:

- The instructions of this manual are for users applying this product correctly, and preventing damage or property loss to users or others.
- "WARNING" is central contents for preventing any accidents happening, please follow cautiously.

使用注意事項

- 本產品使用超音波震盪霧化原理達到擴香效果，以擴香效果為主，亦可些許降低環境乾燥度。
- 請勿在未裝上玻璃蓋的情況下接通電源。
- 機器運轉過程中，請勿取下玻璃蓋，或是堵塞主體下方風扇進氣口。
- 在機器運轉過程中，且水槽內有水時，請勿在電源尚未關閉前打開玻璃蓋，或將手放到水槽內，否則有可能造成機器漏水、故障或人員受傷。
- 水槽內殘留的水如果超過24小時，請務必倒掉並進行清潔保養步驟。
- 請使用自來水、軟水或礦泉水，不建議使用其他液體。
- 請注意不要使用蒸餾水或純水，因水中礦物質已被過濾，將影響機器霧化效果，不易產生霧氣。
- 逆滲透（RO）水也只含微量礦物質，會影響機器霧化效果，不易產生霧氣。
- 不建議使用硬水，因硬水的碳酸鈣會沉澱堆積，每次使用完畢後都必須清理霧化器。此外，硬水的水分子太重，也會影響霧化效果。

精油使用注意事項

- 建議使用SERENE HOUSE精油，切勿使用含有香水、香精或含雜質的精油，以免傷害霧化器裝置。
- 精油屬於濃縮的高純度油，有可能溶解塑膠或傢俱塗裝，若不慎沾附於產品外側或傢俱上，請立即擦拭，避免產品外觀或傢俱褪色，使用時請特別小心。
- 精油若不慎滴到水槽外側或地板等周圍物體上，也請立即用布擦拭乾淨。
- 幼童與寵物對香味非常敏感，在密閉空間使用時請特別小心，及請避免誤食。
- 使用期間如感覺不舒服或身體不適時，請立即停止使用，並打開窗戶使空氣流通。如您有任何身體上的特殊狀況，例如懷孕、肺衰竭、癌症或癩癩等症狀，使用精油前建議先諮詢您的醫師。

注意事項

為了預防使用時發生意外，請務必遵守以下事項：

- 本使用說明書的注意事項，是為了讓使用者能正確的使用本產品，防止對使用者或他人造成危害及財產損失。
- 警告事項皆為預防意外發生的重要內容，請務必遵守。

警告

- 萬一出現冒煙、異味、雜音等異常現象時，仍繼續使用的話，可能導致火災、觸電等，請立即將電源移除，停止使用。

使用注意事項

- 本产品使用超音波震盪霧化原理达到扩香效果，以扩香效果为主，亦可些许降低环境干燥度。
- 请勿在未装玻璃盖的情况下接通电源。
- 机器运转过程中，请勿取下玻璃盖，或是堵塞主体下方风扇进气口。
- 在机器运转过程中，且水槽内有水时，请勿在电源尚未关闭前打开玻璃盖，或将手放到水槽内，否则有可能造成机器漏水、故障或人员受伤。
- 水槽内残留的水如果超过24小时，请务必倒掉并进行清洁保养步骤。
- 请使用自来水、软水或矿泉水，不建议使用其他液体。
- 请注意不要使用蒸馏水或纯水，因水中矿物质已被过滤，将影响机器雾化效果，不易产生雾气。
- 逆渗透（RO）水也只含微量矿物质，会影响机器雾化效果，不易产生雾气。
- 不建议使用硬水，因硬水的碳酸钙会沉淀堆积，每次使用完毕后都必须清理雾化器。此外，硬水的水分子太重，也会影响雾化效果。

精油使用注意事项

- 建议使用SERENE HOUSE精油，切勿使用含有香水、香精或含杂质的精油，以免伤害雾化器装置。
- 精油属于浓缩的高纯度油，有可能溶解塑料或家具涂装，若不慎沾附于产品外侧或家具上，请立即擦拭，避免产品外观或家具褪色，使用时请特别小心。
- 精油若不慎滴到水槽外側或地板等周围物体上，也请立即用布擦拭干净。
- 幼童与宠物对香味非常敏感，在密闭空间使用时请特别小心，及请避免误食。
- 使用期间如感觉不舒服或身体不适时，请立即停止使用，并打开窗户使空气流通。如您有任何身体上的特殊状况，例如怀孕、肺衰竭、癌症或癩病等症状，使用精油前建议先咨询您的医师。

注意事项

为了预防使用时发生意外，请务必遵守以下事项：

- 本使用说明书的注意事项，是为了让使用者能正确的使用本产品，防止对使用者或他人造成危害及财产损失。
- 警告事项皆为预防意外发生的重要内容，请务必遵守。

警告

- 万一出现冒烟、异味、杂音等异常现象时，仍继续使用的话，可能导致火灾、触电等，请立即将电源移除，停止使用。

WARNING

- Stop using the product immediately and unplug once smoke, smell, noise, or other unusual situations appear; it is very possible to cause fire hazard or electric shock, if the product operates continuously.

- Do not alter, repair or dismantle this product on your own, it may cause fire hazard, electric shock, malfunction or injury.

- Please follow local regulations when you are discarding consumables.

- !** Please use a DC 24V / 500 mA adapter, otherwise the device may malfunction.
- The AC adapter will heat up when the product is operating and it is normal.
- Only the included AC adapter may be used with the product, using other AC adapter may result in fire.
- Do not connect the power during installation, as electric shock and injury may occur.
- The product should always be unplugged and the water tank should always be empty when moving the product or when the product is not in operation.
- When unplugging the AC adapter from the outlet, do not pull on the wire. Hold the AC adapter firmly and then unplug it, or else damage or injury may occur.

- !** If power cord or plug is damaged, or the product is dropped, hit, damaged, or broken, stop using it, this is possible to cause electric shocks or short circuit.
- Do not operate this product with wet hands, or drip or spill water or other liquids onto the product. These may cause electric shock or injuries.
- Do not deliberately place your eyes, nose or mouth close to the fragrance mist emitted as this may cause physical discomfort.
- Do not put fingers or hands into the product.
- In order to avoid any danger or accidents, parents guard is necessary when children use this product.
- Please follow the instructions to use this product; it is possible to result in poisoning or fire hazard, if other substances are used. Do not immerse this product in water, this product is for household use only.
- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible.
- Do not let children use this product alone, keep it out of reach of children, or it may cause electric shocks or injuries.
- To avoid fire hazard, electric shocks, injuries or malfunction, please do not keep this product in the following places:
 - Under direct sunlight or high temperature environments, and keep away from fire sources.
 - Places with high pressure or flammable materials.
- Do not place the product on soft surfaces such as carpet, as this may block the ventilation inlet on the bottom of the unit, causing the device to not function correctly.

- !** 請勿擅自對本產品進行改造、修理或拆解，否則有可能造成火災、觸電、故障或受傷。

- !** 耗材廢棄時，請遵照各國法規。

- !** 請使用DC24V / 500mA規格之變壓器，否則將導致機器故障。
 - 當機器運作時，變壓器會發熱，乃屬正常現象。
 - 請使用本產品所附變壓器，如使用它牌變壓器，可能會引發機器故障或火災。
 - 請勿於安裝機器時連接電源，否則有可能造成觸電或受傷。
- 本產品於長期不使用或移動時，請務必關閉電源並拔下所有插頭，並請倒掉容器內的水，否則可能造成產品故障。
- 拔下變壓器時，請勿拉扯電源線，必須緊握變壓器或插頭後再進行拔除，否則有可能造成變壓器破損或受傷。

- !** 當電源線或插頭破損時，或是產品不小心掉落或受到撞擊而受損或破裂時，不得繼續使用本產品，否則有可能造成觸電、短路等問題。
- 請勿用濕的手操作本產品，或讓水等其他液體沾附、潑灑到上面，否則有可能造成觸電受傷。
- 請勿故意將眼口鼻靠近出霧口所排出的香氣霧氣，否則有可能造成身體不適。
- 請勿在本產品運作時將手或手指放置於本產品之內。
- 為避免危險，幼童須在成年人監督下使用產品，預防意外發生。
- 錯誤使用本產品，將可能導致火災的意外，請依指示使用本產品，若使用其他介質將可能引發中毒或火災的危險；請勿將本產品浸入水中，本產品僅供空間香氛使用。
- 除非有專業人士的督導和指示，本產品不適合由身體、感官或精神能力欠佳，或缺乏經驗及知識的人士使用（包括兒童）。
 - 建議放在幼童與寵物觸及不到的地方，避免意外發生。
 - 請勿將本產品放置在以下地方，否則有可能引起火災、觸電、受傷、故障：
 - 陽光直射或高溫的環境，並遠離火源。
 - 高壓物及易燃物周圍。
 - 請勿置放於地毯等柔軟的地方，否則會堵塞底部的進氣口，造成機器無法正常運作。
 - 請將電源線過度彎折、加熱或上方放置重物，否則有可能引起火災或故障。
- 連接延長線時，請注意所使用的電器規格，電源線應放置於明顯的地方，避免拉扯或絆倒。
- 若電源線損壞時，請由製造廠或其他服務處或具有相關資格的人員加以更換以避免危險。

- !** 請勿擅自对本产品进行改造、修理或拆解，否则有可能造成火灾、触电、故障或受伤。

- !** 耗材废弃时，请遵照各国法规。

- !** 请使用DC24V / 500mA规格之适配器，否则将导致机器故障。
 - 当机器运作时，适配器会发热，乃属正常现象。
 - 请使用本产品所附适配器，如使用它牌适配器，可能会引发机器故障或火灾。
 - 请勿于安装机器时连接电源，否则可能造成触电或受伤。
- 本产品于长期不使用或移动时，请务必关闭电源并拔下所有插头，并请倒掉容器内的水，否则可能造成产品故障。
- 按下适配器时，请勿拉扯电源线，必须紧握适配器或插头后再进行拔除，否则有可能造成适配器破损或受伤。

- !** 当电源线或插头破损时，或是产品不小心掉落或受到撞击而受损或破裂时，不得继续使用本产品，否则有可能造成触电、短路等问题。
- 请勿用湿的手操作本产品，或让水等其他液体沾附、溅洒到上面，否则有可能造成触电受伤。
- 请勿故意将眼口鼻靠近出雾口所排出的香气雾气，否则有可能造成身体不适。
- 请勿在本产品运作时将手或手指放置于本产品之内。
- 为避免危险，幼童须在成年人监督下使用产品，预防意外发生。
- 错误使用本产品，将可能導致火災的意外，請依指示使用本产品，若使用其他介质将可能引发中毒或火災的危險；請勿將本产品浸入水中，本产品仅供空间香氛使用。
- 除非有专业人士的督导和指示，本产品不适合由身体、感官或精神能力欠佳，或缺乏经验及知识的人士使用（包括儿童）。
 - 建议放在幼童与宠物触及不到的地方，避免意外发生。
 - 请勿将本产品放置在以下地方，否则有可能引起火灾、触电、受伤、故障：
 - 阳光直射或高温的环境，并远离火源。
 - 高压物及易燃物周围。
 - 请勿置放于地毯等柔软的地方，否则会堵塞底部的进气口，造成机器无法正常运作。
 - 请勿将电源线过度弯折、加热或上方放置重物，否则有可能引起火灾或故障。
- 连接延长线时，请注意所使用的电器规格，电源线应放置于明显的地方，避免拉扯或绊倒。
- 若电源线损坏时，请由制造厂或其他服务处或具有相关资格的人员加以更换以避免危险。

- Do not over bend, heat, or place heavy objects on the power cord, or it may cause fire hazard or malfunction.
- If an extension cord is used, please pay attention to the introductions to electric appliances using. The specifications should be the same. The cord should be placed at evident places to avoid children pulling or stumbling.
- In order to prevent accidents happening, if the power cord is damaged, please replace it via the manufacturer, other service departments, or staffs who own related qualifications.

Troubleshooting

If you experience unsatisfactory operations, please follow our troubleshooting guidelines listed below:

- Machine does not operate**
 - Check the adapter
 - Make sure the adpater is fully and correctly plugged into the electrical outlet.
 - Power cord not connected to the main unit.
 - Be sure plug is correctly inserted into the power jack on the main unit .
 - The power is correctly connected but the device still does not operate
 - Check whether the water tank contains any water and then recheck that the ON/OFF switch is on.
 - Check that the level in the tank does not exceed the maximum water level line (MAX); if this is the case, empty out the excess water.
 - Check remote control.
 - Replace a new battery for the remote control.
 - Remote control is used too far away from the product.
 - Be sure the remote control is used within the receiving range(4 meters and 10° angle of distance from the sensor).
- The product does not atomize or does not atomize effectively**

- See water types/ recommendations above.
- Dirty atomizer
 - Perform maintenance according to the 'Cleaning & Maintenance' section of this manual.
- Placement of the product
 - Place on a firm, level, and stable surface.
 - Check the water volume
 - Make sure the water does not exceed its designated water mark level.
 - The cover does not attach securely to the main unit
 - Reattach the cover according to the procedure in the 'Operating Instructions' section of this manual.

Product Specification

Fragrance results may vary depending on ventilation, temperature, humidity, and the size of surrounding space.
Atomization mode: Ultrasonic, Intermittent atomization time: ≥ 18 hr, Continuous atomization time: ≥ 9 hr, Suggested room size: 25~45 m² (269.1 ~ 484.39 sq ft), Ultrasonic frequency(MHz): 2.45 ± 10 %.
Water tank capacity: 230 ml, Colors of light: warm white, green, blue, red, yellow, purple, white.
Power input: DC 24V , 10 W.
Operation mode: continuous / intermittent mode.
Accessories included: Adapter / Manual / Warranty card / waterproof cap / vent cover / remote control / cleaning brush.
Design team: SERENE HOUSE. Made in China

Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please visit our website www.serenehouse.com, and click link *"Support"*, or contact our customer service. **Service Hotline: +886 2 7721 8848 / +86 400 885 3268**

障礙排除

疑似故障時，請在委託維修前確認以下事項：

機器無法運作
<ul style="list-style-type: none">變壓器未確實插在插座上 <ul style="list-style-type: none">請確認變壓器是否正確的安插到插座上。 變壓器的電源線未正確的接上主體的電源孔。 請確認變壓器的電源線是否正確的接上主體的電源孔。 電源已正確接上，但仍然不會運作 <ul style="list-style-type: none">請先確認水槽是否有水，然後再確認電源開關是否開啟，或確認是否超過最高水位線（MAX），如超出，請將超出水量倒出水槽外。
無法霧化或霧化效果不佳
<ul style="list-style-type: none">水溫太低 <ul style="list-style-type: none">請使用溫度在25°C到40°C的自來水或礦泉水。 使用硬水或蒸餾水 <ul style="list-style-type: none">請使用自來水或礦泉水（某些地區的水質容易造成水垢，請將水過濾後再使用）。 霧化器髒污 <ul style="list-style-type: none">請依照本說明書的「清潔保養」方法進行保養。 機器放置在地毯等柔軟物體上，或者使用場所的風量過大 <ul style="list-style-type: none">請在水平、平穩及風量小的場所使用。 水槽內水位超過最高水位線（MAX） <ul style="list-style-type: none">請將多餘的清水倒掉。 玻璃蓋未確實與主體蓋緊 <ul style="list-style-type: none">請依照本說明書的「使用說明」步驟重新蓋緊玻璃蓋。
產品規格

擴香效果及霧化時間會因空間通風度、濕溫度及空間大小而有所變化，霧化模式：超音波震盪
間歇使用時間：≥ 18小時 連續使用時間：≥ 9小時 建議使用空間：25～45 m² 頻率（MHz）：2.45±10%
水槽容量：230 ml LED燈光：暖白、綠、藍、紅、黃、紫、白 電源輸入：DC24V, 10W
運作模式：連續霧化 / 間歇霧化 配件：變壓器 / 說明書 / 保證卡 / 防水套 / 出風蓋 / 遙控器 / 清潔刷 設計：SERENE HOUSE 中國製造

	
<p>如出現其它故障，請至 SERENE HOUSE 官方網站 www.serenehouse.com/tw 的支援服務專區查閱使用說明，或請與專賣店聯繫，請勿動手拆解或維修本產品，服務專線：+886 2 7721 8848</p>	

障礙排除

疑似故障時，請在委托维修前确认以下事项：

机器无法运作
<ul style="list-style-type: none">适配器未确实插在插座上 <ul style="list-style-type: none">请确认适配器是否正确的安插到插座上。 适配器的电源线未正确的接上主体的电源孔。 请确认适配器的电源线是否正确的接上主体的电源孔。 电源已正确接上，但仍然不会运作 <ul style="list-style-type: none">请先确认水槽是否有水，然后再确认电源开关是否开启，或确认是否超过最高水位线（MAX），如超出，请将超出水量倒出水槽外。
无法雾化或雾化效果不佳
<ul style="list-style-type: none">水温太低 <ul style="list-style-type: none">请使用温度在 25°C到 40°C的自来水或矿泉水。 使用硬水或蒸馏水 <ul style="list-style-type: none">请使用自来水或矿泉水（某些地区的水质容易造成水垢，请将水过滤后再使用）。 雾化器脏污 <ul style="list-style-type: none">请依照本说明书的“清洁保养”方法进行保养。 机器放置在地毯等柔软物体上，或者使用场所的风量过大 <ul style="list-style-type: none">请在水平、平稳及风量小的场所使用。 水槽内水位超过最高水位线（MAX） <ul style="list-style-type: none">请将多余的清水倒掉。 玻璃盖未确实放上主体 <ul style="list-style-type: none">请依照本说明书的“使用说明”步骤重新放上玻璃盖。
产品规格

扩香效果及雾化时间会因空间通风度、湿湿度及空间大小而有所变化，雾化模式：超音波震盪
间歇使用时间：≥ 18小时 连续使用时间：≥ 9小时 建议使用空间：25～45 m² 频率（MHz）：2.45±10%
水槽容量：≥ 300 ml LED灯光：暖白、绿、蓝、红、黄、紫、白 电源输入：DC24V, 10W
运作模式：连续雾化 / 间歇雾化 配件：适配器 / 说明书 / 保证卡 / 防水套 / 出风盖 / 遥控器 / 清洁刷
设计：SERENE HOUSE 中国制造

	
<p>如出现其它故障，请登录宁夏官方网网站 www.serenehouse.com.cn 的支持服务专区查阅使用说明，或请与专卖店联系，请勿动手拆解或维修本产品。服务专线：+86 400 885 3268</p>	

Warranty card

This product is warranted against defective materials and workmanship. Warranty period is one (1) year from the original purchase. Any defective part will be replaced at no charge if it has not been tampered with and appliance has been use according to our printed instructions.

This product warranty does not cover damages caused by misuse or abuse, accidents, the attachment of any unauthorized accessory, alteration to the product or any other conditions whatsoever that are beyond the control of SERENE HOUSE. To validate your warranty, please complete all the information in the warranty card below and send it along with your purchase receipt copy to a local SERENE HOUSE distributor via fax or email.

To register your warranty, complete all of the information in the warranty card below and send it along with a copy of your purchase receipt via mail or email to SERENE HOUSE, address: 7F, No. 15, Sec. 2, Tiding Blvd., Taipei, 114737, Taiwan; email: service@serene-house.com

Product Name	Model Number
Store of Purchase	IN-STORE <input type="checkbox"/> ON-LINE <input type="checkbox"/>
Customer Information	
Last Name	First Name
Street Address	City
State	Zip code
Country	Telephone
E-Mail	

If you experience unsatisfactory operations, first follow Troubleshooting and Cleaning & Maintenance instructions. If the unit still does not operate satisfactorily, please contact a SERENE HOUSE distributor or you may also contact us directly. Please provide the product name and model number of your product in your correspondence. SERENE HOUSE INTERNATIONAL ENT. LTD, 7F, No. 15, Sec. 2, Tiding Blvd., Taipei, 114737, Taiwan service@serene-house.com

If other malfunctions occur, please visit our website www.serenehouse.com and hit "Support", or contact our speciality stores, do not dismantle or maintain by yourself.

產品保證書

親愛的顧客您好：

為確保您的權益，請妥善保管本產品保證書（遺失恕不補發），如需服務時請出示本保證書，依照下列刊載之內容，提供免費維修。

- 顧客依照使用說明書、機器上所貼標幟等的注意事項，於正常使用情況下，在保固期間內發生故障時，請帶著商品與本保證書，即可委託原購買門市代為修理，此屬免費修理。
- 若出現下列情況，雖在保固期限內仍須採取額外報價付費修理：
 - 錯誤使用方式或不當的修理與改造所造成的故障或損傷。
 - 火災、損害、煤氣或天然氣爆炸、地震、風災、水災、打雷、電壓異常及其他天災或不可抗外力因素所造成的故障及損壞。
 - 保證書上未註明顧客姓名、購買日期及購買門市，或是保證書內容經人為塗改時。
 - 使用後的傷痕、變色、污損及保管不當所造成的損壞。
 - 損耗性零件及配件的更換（如震盪片、清潔刷、電池、遙控器等）。

顧客資料		
姓 名	先生 / 女士	電 話
地 址		
E-mail		
商品資訊	專賣店店章蓋章處（請務必蓋章）	
商品名稱		
型 號		
生產序號		
購買門市		
購買日期	年 月 日	
保固期間	自購買日起12個月（不含耗材）	靜塵企業股份有限公司 <p>台北市內湖區堤頂大道二段15號7樓 service_tw@serene-house.com +886 2 7721 8848</p> <p>台灣官方購物網 掃碼購物，更加便利</p>


- 欄目填寫不齊、不實或空白時，本產品保證書無效，請填寫姓名、電話與地址；如未填寫購買日期與加蓋店章，請立即向購買本商品的門市提出填寫要求，本保證書只附贈一次，請務必小心保管，遺失恕不補發。
- SERENE HOUSE 官方購物網站-請至 www.serenehouse.com/tw/shop/ 購買。

产品保修卡

亲爱的顾客您好:

为确保您的权益，请妥善保管本产品保修卡（遗失恕不补发），如需服务时请出示本保修卡，依照下列刊载之内容，提供免费修理。

- 顾客依照使用说明书、机器上所贴标签等的注意事项，于正常使用情况下，在保修期间内发生故障时，请带着商品与本保修卡，即可委托原购买门市代为修理，此属免费修理。
- 若出现下述情况，虽在保修期限内仍须采取额外报价付费修理：
 - 错误使用方式或不当的修理与改造所造成的故障或损伤。
 - 火灾、损害、煤气或天然气爆炸、地震、风灾、水灾、打雷、电压异常及其他天灾或不可抗外力因素所造成的故障及损坏。
 - 保修卡上未注明顾客姓名、购买日期及购买门市，或是保修卡内容经人为涂改时。
 - 使用后的伤痕、变色、污损及保管不当所造成的损坏。
 - 损耗性零件及配件的更换（如震荡片、清洁刷、电池、遥控器 etc.）。

顧客資料		
姓 名	先生 / 女士	电 话
地 址		
E-mail		
商品資訊	专卖店店章蓋章处（请务必盖章）	
商品名称		
型 号		
生产序号		
销售商		
购买日期	年 月 日	
保修期间	自购买日起12个月（不含耗材）	东莞静声商贸有限公司 <p>广东省东莞市虎门镇智北路6号2栋 service@serenehouse.com.cn +86 400 885 3268</p>

- 规定填写栏为空白时，本保修卡无效，请填写姓名、电话与地址；如未填写购买日期与加盖店章，请立即向购买本商品的门市提出填写要求，本保修卡只附赠一次，请务必小心保管，遗失恕不补发。