



## Aroma Diffuser

Instruction Manual

### 香氛霧化機

操作使用說明書

### 霧化香薰機

操作使用说明书

## Product & Accessories


- Please check to ensure the following items are present and inspect for damage before use.
- |   |                |   |  |
|---|----------------|---|--|
| ① Mist Nozzle                                   | ② Cover        | ③ Control panel   | ④-A Power jack - 90mm diffusers (small models) |
| ④-B Power jack - 125mm diffusers (large models) | ⑤ Main unit    | ⑥ Power (ON / OFF)  |  |
| ⑦ Timer indicator                               | ⑧ Light button | ⑨ Vent  | ⑩ Lid  |
| ⑪ Atomizer                                      | ⑫ Water tank   | ⑬ 90mm diffusers (small models) - MAX (90ml) / 125mm diffusers (large models) - MAX (130ml) | ⑭ Ventilation inlet                            |
| ⑮ AC adapter                                    |                |   |  |

## 產品與配件介紹

- 使用前，請確認以下物品是否齊全，有無破損情況。
- |                     |   |                   |                    |
|---------------------|---|-------------------|--------------------|
| ① 噴霧口               | ② 上蓋  | ③ 控制面板            | ④-A 電源孔-90mm 香芬霧化機 |
| ④-B 電源孔-125mm 香芬霧化機 | ⑤ 主體  | ⑥ 電源開關 (ON / OFF) | ⑦ 時間模式指示燈          |
| ⑧ 時光模式開關            | ⑨ 出風口   | ⑩ 水槽上蓋            | ⑪ 霧化器              |
| ⑫ 水槽                | ⑬ 90mm香芬霧化機水位線-(90ml) / 125mm香芬霧化機水位線-(130ml) | ⑭ 進氣口             | ⑮ 變壓器              |

## 产品与配件介绍

- 使用前，请确认以下物品是否齐全，有无破损情况。
- |                     |   |                   |                    |
|---------------------|---|-------------------|--------------------|
| ① 喷雾口               | ② 上盖  | ③ 控制面板            | ④-A 电源孔-90mm 雾化香薰机 |
| ④-B 电源孔-125mm 雾化香薰机 | ⑤ 主体  | ⑥ 电源开关 (ON / OFF) | ⑦ 时间模式指示灯          |
| ⑧ 光模式开关             | ⑨ 出风口   | ⑩ 水槽上盖            | ⑪ 雾化器              |
| ⑫ 水槽                | ⑬ 90mm雾化香薰机水位线-(90ml) / 125mm雾化香薰机水位线-(130ml) | ⑭ 进气口             | ⑮ 适配器              |

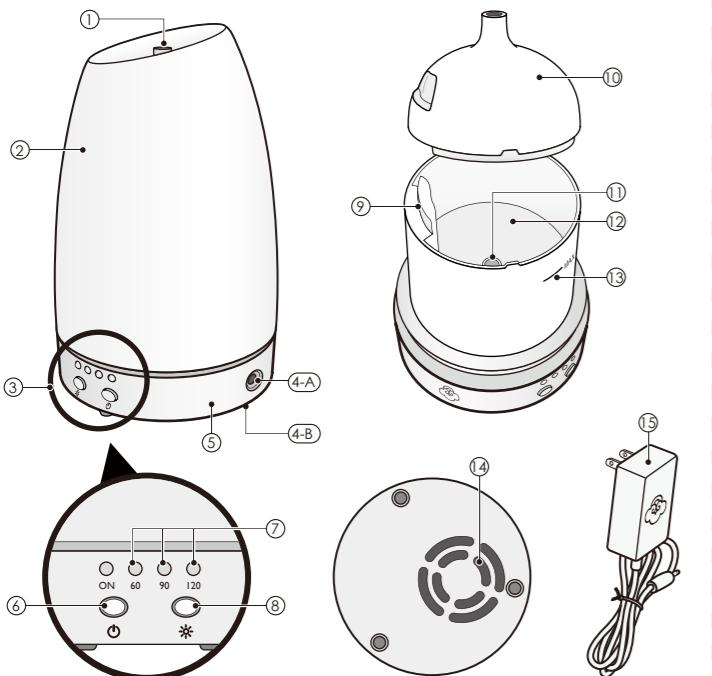

## Operating Instructions

- Always place your aroma diffuser on a firm, flat and level surface.
- Condensation may occur around the aroma diffuser when operating in high humidity environment.

### 使用說明

- 請在穩固、平坦、水平的地方使用本產品。
- 若室內環境濕度較高，在使用香氛霧化機時，易在機器周圍產生水氣。

### 使用说明

- 请在稳固、平坦、水平的地方使用本产品。
- 若室内环境湿度较高，在使用雾化香薰机时，易在机器周围产生水气。

1



Lift the cover from the main unit. Remove the lid from water tank.

Plug the head of the AC adapter into the power jack on the side of the main unit.

2



請將玻璃上蓋依圖示往上取下，再將水槽上蓋打開。

將變壓器接頭插入主體上的電源孔。

3



請將玻璃上蓋依圖示往上取下，再將水槽上蓋打開。

將适配器接头插入主体上的电源孔。

Fill water tank up to or below maximum (MAX) water mark level.


Never add water into the vent hole.

### Water Recommendations: Note

**Water Recommendations for SERENE HOUSE aroma diffuser:**  
Soft water is best for your SERENE HOUSE diffuser. You may also use bottled or mineral water. It is important to not use steam distilled water, as this water has the minerals removed from the water that affect the operation of the diffuser.

Add 5-10 drops of SERENE HOUSE 100% Essential Oil into the water tank. Cover the tank with lid.

**Never allow water or oil to enter the vent. Do not move or tip the device when it is in operation and there is water or oil in the tank.**

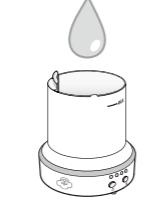


將水緩慢注入水槽。為防止機器受損，請勿超過水位線，並避免讓水流出入風口。

- 請使用溫度在 25°C 到 40°C 的水。如使用低於 5°C 的水，香薰機所需啟動時間較久。（此為正常情況）。
- 加水步驟完成後，請將水槽外多餘的水分擦拭乾淨。




將 5~10 滴（依個人喜好調整）的 SERENE HOUSE 100% 天然香薰精油滴入水槽內，再將水槽上蓋依定位口方向位置裝回。

請務必掀蓋後再加入水和精油，切勿從任何風口加入。

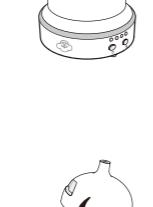


請將水槽上蓋和玻璃上蓋依圖示方向裝回並且蓋緊。

請注意水槽上蓋安裝時有方向性，如未依照圖示則無法正確安裝。

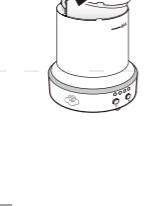

將水緩慢注入水槽，為防止机器受损，请勿超过水位线，并避免让水流出入风口。

- 请使用温度在 25°C 到 40°C 的水。如使用低于 5°C 的水，香薰机所需启动时间较久。（此为正常情况）。
- 加水步骤完成后，请将水槽外多余的水分擦拭干净。

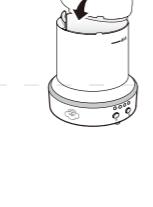


請將水槽上蓋和玻璃上蓋依圖示方向裝回並且蓋緊。


請注意水槽上蓋安裝時有方向性，如未依照圖示則無法正確安裝。



Press the power button to turn on the device and activate continuous diffuser and light operation.

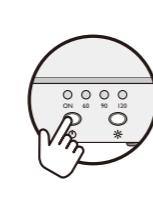

Place the cover back on the main unit, per diagram. If the lid is not correctly aligned, as a safety feature, the unit will not operate.

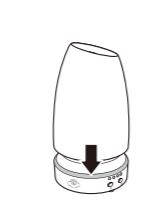


先將變壓器插入電源插座後，再按下電源開關，電源指示燈與情境燈亮起，機器開始運作。

- 如欲關閉機器，請長按電源開關即可，電源指示燈隨之熄滅。
- 基於安全因素，當水量低於安全水位時，香氛霧化機將自動停止斷電。



再次使用時，如水槽內仍有殘余水分，請將水槽內的水倒掉後重複 1 ~ 6 步驟（請務必進行定期保養）。

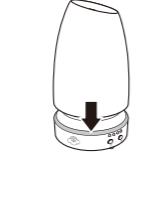

先將適配器插入電源插座後，再按下電源開關，電源指示燈與情境燈亮起，機器開始運作。

- 如欲關閉機器，請長按電源開關即可，電源指示燈隨之熄滅。
- 基於安全因素，當水量低於安全水位時，香氛霧化機將自動停止斷電。



再次使用時，如水槽內仍有殘余水分，請將水槽內的水倒掉後重複 1 ~ 6 步驟（請務必進行定期保養）。

- 正确的操作与保养方式，请按照本说明书「清洁保养」步骤所规定方法实施。

## Light Instructions


- Device will automatically cycle through 7 color LED pattern (warm white, green, blue, red, yellow, purple, and light white) when it is turned on.
- To select a single color, press the light button until you reach your desired color.
- To switch off the light, keep pressing the light button. At the end of the 7 color cycle, the light will turn off.

### 燈光模式設定

- 按下電源開關，電源指示燈與情境燈亮起。
- 內建七彩情境燈效果：暖白光、綠光、藍光、紅光、黃光、紫光、白光。
- 七彩情境燈要切換為單色顯示燈，請按壓燈光設定鈕即可。
- 使用中如欲关闭情境燈，請長按燈光模式開關，或重複按壓燈光模式開關至七彩情境燈輪替顯示完，情境燈即關閉。

### 灯光模式设定

- 按下电源开关，电源指示灯与情境灯亮起。
- 内建七彩情境灯效果：暖白光、绿光、蓝光、红光、黄光、紫光、白光。
- 七彩情境灯要切换为单色显示灯，请按压灯光设置钮即可。
- 使用中如欲关闭情境灯，请长按灯光模式开关，或重复按压灯光模式开关至七彩情境灯轮替显示完，情境灯即关闭。

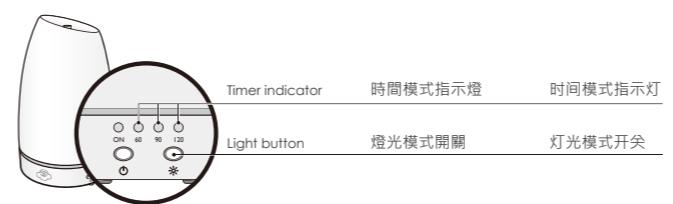

## Timer Instructions

- Press the power button once to turn on diffuser and begin continuous operation. Continuous mode will be indicated by a solid power button.
- Press the power button twice to activate intermittent mode (30 seconds on, 30 seconds off). Intermittent mode will be indicated by a pulsing power button.
- Press the power button again for 60, 90, or 120 minutes continuous operation. The power light will move to each setting.
- For safety purposes, this aroma diffuser will stop operating automatically when it detects the water is below its programmed level.

### 時間模式設定

- 按下電源開關，啟動機器連續運作模式（時間模式指示燈未亮）。
- 按第一下電源開關，60 分鐘燈亮起，機器自此運轉 60 分鐘後即自動停止運作。
- 按第二下電源開關，90 分鐘燈亮起，機器自此運轉 90 分鐘後即自動停止運作。
- 按第三下電源開關，120 分鐘燈亮起，機器自此運轉 120 分鐘後即自動停止運作。
- 按第四下電源開關，機器隨即關閉。

• 機器於時間模式下使用時，如遇水量不足，機器會自動斷電。

- 按下电源开关，启动机器连续运作模式（时间模式指示灯未亮）。
- 按第一下电源开关，60分钟灯亮起，机器自此运转60分钟后即自动停止运作。
- 按第二下电源开关，90分钟灯亮起，机器自此运转90分钟后即自动停止运作。
- 按第三下电源开关，120分钟灯亮起，机器自此运转120分钟后即自动停止运作。
- 按第四下电源开关，机器随即关闭。

• 机器于时间模式下使用时，如遇水量不足，机器会自动断电。

### Caution

- Never connect the power without placing the lid and cover on the unit.
- Do not remove the lid or block the ventilation inlet under the main unit during usage.
- When the device is in operation and there is water in water tank, do not touch the atomizer as personal injury or device malfunction may occur.
- After each use, make sure to pour out any remaining water in the tank.
- For best performance, we recommend SERENE HOUSE 100% pure natural essential oils with this aroma diffuser. Use of other essential oils may cause damage to the device.
- Make sure to wipe clean with a cloth if oil drips on the main unit or floor.

### 注意

- 請勿在未裝玻璃上蓋與水槽上蓋的情況下將電源接通。
- 運轉過程中，請勿取下上蓋，或者堵塞主體下方風扇進氣口。
- 水槽內殘留的水如果超過24小時，請務必倒掉並進行清潔保養步驟。
- 精油若不慎滴到水槽外側或地板等周圍物體上，請立即用布擦拭乾淨。

### 備註：水質建議

建議使用軟水或礦泉水來搭SERENE HOUSE 香氛霧化機。請注意不要使用蒸餾水或純水，因為水中的礦物質已經被過濾，進而影響機器霧化效果，不易產生霧氣。

逆滲透(RO)水也只含有微量的礦物質，會造成機器霧化效果不佳，不易產生霧氣。

不建議使用硬水。因為硬水中的碳酸鈣會沉澱堆積，每次使用完後都必須清理震蕩器。此外，硬水分子太重，無法有效的產生霧化效果。

### 注意

- 请勿在未装玻璃上盖与水槽上盖的情况下将电源接通。
- 在运过程中，请勿取下上盖，或者堵塞主体下方风扇进气口。
- 水槽内残留的水如果超过24小时，请务必倒掉并进行清洁保养步骤。
- 精油若不慎滴到水槽外侧或地板等周围物体上，请立即用布擦拭干净。

### 备注：水质建议

建议使用软水或矿泉水来搭SERENE HOUSE 香氛雾化机。请注意不要使用蒸馏水或纯水，因为水中的矿物质已经被过滤，进而影响机器雾化效果，不易产生雾气。

逆渗透(RO)水也只含有微量的矿物质，会造成机器雾化效果不佳，不易产生雾气。

不建议使用硬水。因为硬水中的碳酸钙会沉淀堆积，每次使用完后都必须清理震荡器。此外，硬水分子太重，无法有效的产生雾化效果。

## Cleaning & Maintenance

- Always disconnect the AC adapter from the electrical outlet before cleaning.
- For best atomizing performance, be sure to clean the aroma diffuser after each use.


### 清潔保養

- 在每次清潔保養前，請務必先將電源拔除。
- 建議每次使用畢即進行清潔保養，以確保機器正常運作。

### 清洁保养

- 在每次清洁保养前，请务必先将电源拔除。
- 建议每次使用完毕即进行清洁保养，以确保机器正常运作。

### 1

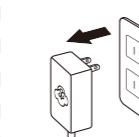

Remove the AC adapter from the electrical outlet and then remove the plug from the main unit.

• To avoid liquid spilling from the water tank, always keep the main unit in an upright position whenever removing AC adapter.

請先拔除插座上的變壓器，再拔除主體上的變壓器接頭。  
• 為避免水槽內液體流出，移除變壓器插頭時請保持機體垂直。

### 2



Remove the lid, empty the water from the tank, add a small amount of warm water (do not exceed 40°C/104°F), and a few drops of neutral cleanser. Use a cotton swab to clean the atomizer and internal surface of the water tank. Gently rinse all the soap out of the water tank after washing.

• Be careful to not allow water to enter the vent.  
• Never use acidic cleansers as this may cause malfunction.  
• If water accidentally flows into the ventilation inlet, vent or

## Safety Precautions

To ensure safety, please comply with the following instructions:  
• The product listed in this manual are to ensure safe and proper use of this product by the user, and to avoid any danger or loss that might occur to the user or others.  
• "WARNING" contains important safety instructions. Be sure to follow these instructions.

### ! WARNING

- Stop using the product immediately and unplug the AC adapter if unusual smoke, smell, sounds or other anomalies occur.
- Do not modify, fix, or dismantle this product, as fire, electric shock, or damage may occur.
- When the product is at the end of its life, we recommend disposal at a collection point for the recycling of electronic equipment, rather than with household waste. The symbols on the product, instruction manual, and packaging allow for proper sorting and disposal.
- KEEP OUT OF REACH OF CHILDREN AND PETS FOR INDOOR USE ONLY**
  - Do not connect the AC adapter to the main unit during installation, as electric shock and injury may occur.
  - The product should always be unplugged and the water tank should always be empty when moving the product or when the product is not in operation.
  - When unplugging the AC adapter from the outlet, do not pull on the wire. Hold the AC adapter firmly and then unplug it, or else damage or injury may occur.
  - Avoid dripping essential oil onto the exterior of the product or onto furniture. If essential oil dripping accidentally occurs, wipe off immediately to avoid discoloration of the exterior of the product or the furniture.
- The product must be disconnected from the electrical outlet before handling and maintenance.
- Do not handle the main unit or AC adapter with wet hands, or allow water or other liquids stick to or spray onto them, as this may result in an electric shock.
- Do not use the product when electric cord or plug is damaged or the product has been accidentally hit, dropped, broken, or damaged in any way.
- Do not deliberately place your eyes, nose or mouth close to the fragrance mist emitted as this may cause physical discomfort.
- This product is not a toy. Do not let children use this product. Keep out of reach of children as electric shock and injury may occur. Children should be properly supervised to ensure that they will not play with this product at all times.
- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
- To avoid fire, electric shock, personal injury or product damage, do not place the product in the areas listed below:
  - In direct sunlight or next to a heating apparatus.
  - In dusty places.
  - On tilted, unstable or uneven surfaces.
  - Places full of smoke or next to gas stoves.
  - Places with an ambient temperature greater than 40°C/104°F; keep the product away from sources of ignition.
  - On top of or next to electronics (TVs, stereos, refrigerators, etc.).
  - Do not place the product on soft surfaces such as carpet, as this may block the ventilation inlet on the bottom of the unit, causing the device to not function correctly.
  - Do not remove the lid or put your finger or other objects into the water tank while the product is in operation as water leakage, malfunction or personal injury may occur.

## Troubleshooting

If you experience unsatisfactory operations, please follow our troubleshooting guidelines listed below.

### Machine does not operate

- Check the adapter**
  - Make sure the adapter is fully and correctly plugged into the electrical outlet.
- Power cord not connected to the main unit**
  - Be sure plug is correctly inserted into the power jack on the main unit.
- The power is correctly connected but the device still does not operate**
  - Check whether the water tank contains any water and then recheck that the ON/OFF switch is on. Check that the water level in the tank does not exceed the maximum water level line (MAX); if this is the case, empty out the excess water.

### The product does not atomize or does not atomize effectively

- Dirty atomizer**
  - Perform maintenance according to the 'Cleaning & Maintenance' section of this manual.
- Placement of the product**
  - Place on a firm, level, and stable surface.
- Check the water volume**
  - Make sure the water does not exceed its designated water mark level.
- The lid does not attach securely to the main unit**
  - Reattach the lid according to the procedure in the 'Operating Instructions' section of this manual.
  - See water types/ recommendations above.

Do not attempt to dismantle or repair the product by yourself. If the unit still does not operate satisfactorily, please visit our website [www.serenehouse.com](http://www.serenehouse.com), and click "Support", or contact our customer service.

## Specifications

Fragrance results may vary depending on ventilation, temperature, humidity, and the size of surrounding space.

Atomization mode:	Ultrasound
Continuous / intermittent atomization time:	90mm diffusers (small models) 4hr 125mm diffusers (large models) 7hr
Suggested room size:	90mm diffusers (small models) - 10~15 m <sup>2</sup> (107.6 ~ 161.4 sq ft) 125mm diffusers (large models) - 15~35 m <sup>2</sup> (161.4 ~ 376.7 sq ft)
Ultrasonic frequency(MHz):	2.45 ± 10 %
Water tank capacity:	90mm diffusers (small models) - 90ml 125mm diffusers (large models) - 130ml
Colors of light:	warm white, green, blue, red, yellow, purple, white
Power input:	DC 24V, .10W
Operation mode:	continuous / intermittent mode
Accessories included:	Adapter / Manual / Warranty card
Design team:	SERENE HOUSE
Made in China	
Patented Product	

This device complies with Part 18 of the FCC Rules.



## 安全注意事項

為了保障使用安全，請務必遵守以下事項：

- 本使用說明書的注意事項，是為了讓使用者能安全正確的使用本產品，防止對使用者或他人造成危害及財產損失。
- 警告事項均為有關安全方面的重要內容，請務必遵守。

### ! 警告

- 如出現冒煙、異味、雜音等異常現象時，如繼續使用可能會導致火災、觸電等，請立即將變壓器由電源插座上取下，停止使用。
- 請勿擅自對本產品進行改造、修理或拆解，否則有可能造成火災、觸電、故障或受傷。
- 主體消耗配件廢棄時，請依照各國指示廢棄。

- 請使用DC24V / 500mA規格之變壓器，否則將導致機器故障。  
當機器運作時，變壓器會發熱，乃屬正常現象。  
請使用本產品所附的變壓器，如使用它牌變壓器，有可能會引發機器故障或火災。  
於安裝時請勿接觸變壓器，否則有可能造成人員觸電或受傷。  
本產品為長期不使用或移動時，請務必關閉電源並將變壓器拔除。請倒掉容器內的水，否則有可能造成產品故障。  
拔下變壓器時，請勿扯住電線，必須牢牢地緊握變壓器後再進行拔除，否則有可能造成變壓器破損或人員受傷。  
請慎防精油沾附於產品外側或傢俱上，若不慎發生，請立即擦拭，以避免產品外觀或傢俱褪色。

- 清潔保養前，請務必先將產品的電源切斷。  
請勿用沾濕的手操作機器與變壓器，或讓水與其他液體等沾附、濺灑到上面，以免造成人員觸電或受傷。  
當電源線或插頭破損時，請勿使用，否則有可能導致機器短路、故障。  
當產品摔落或受到撞擊造成受損或破裂時，請勿使用，否則有可能導致機器短路、故障。  
請勿將電源線過度彎折，加熱或讓重物放置上面，否則有可能引起火災或故障。  
請勿故意將窗口鼻靠近出霧口所排出的香氛霧氣，否則有可能造成身體不適。  
請勿讓幼童獨自使用，要放在幼童觸及不到的地方，否則有可能造成受傷，兒童應當受到監督以確保其不會碰觸到機器。  
除非有負責安全的人士給予產品使用的督導和指示，本產品不適合由身體、感官或精神能力欠佳的人士（包括兒童），或缺乏經驗及知識的人士使用。

- 請勿放置在以下地方，否則有可能引起火災、觸電、人員受傷或產品故障：
  - \* 陽光直射的地方或取暖器具旁邊。
  - \* 灰塵多的地方。
  - \* 傾斜或晃動等不穩的地方。
  - \* 瓦斯爐旁或有油煙的地方等。
  - \* 環境溫度 40°C 以上的地點，並遠離火源。
  - \* 電器產品（電視機、音箱設備、電冰箱等）的上面或旁邊。
  - \* 請勿置放於地毯等柔軟的地方，否則會堵塞底部的進氣口，造成機器無法正常運作。
  - \* 產品使用過程中，請勿在電源尚未關閉前打開上蓋，或將手或異物等放到水槽內，否則有可能造成機器漏水、故障或人員受傷。

## 障礙排除

當機器疑似故障時，請在委託維修前確認以下事項：

### 機器無法運作

- 變壓器未確實插在插座上**
  - 請確認變壓器是否正確的安插到插座上。
- 變壓器的電源線未正確的接上主體的電源孔**
  - 請確認變壓器的電源線是否正確的接上主體的電源孔。
- 電源已正確接上，但仍然不會運作**
  - 請先確認水槽是否有水，然後再確認電源開關是否開啟，或確認是否超過安全水位 ( MAX )，如超出，請將超出水量倒出水槽外。

### 無法霧化或霧化效果不佳

- 水溫太低**
  - 請使用溫度在25°C到40°C的自來水或礦泉水。
- 使用了純水或蒸餾水**
  - 請使用自來水或礦泉水（某些地區的水質容易造成水垢，請將水過濾後再使用）。
- 霧化器髒污**
  - 請依照本說明書的「清潔保養」方法進行保養。
- 機器放置在地毯等柔軟物體上，或者使用場所的風量過大**
  - 請在水平、平穩及風量小的場所使用。
- 水槽內水位超過水位上限 ( MAX )**
  - 請將多餘的清水倒掉。
- 上蓋未確實與主體蓋緊**
  - 請依照本說明書的「使用說明」步驟重新蓋緊上蓋。

其它障礙排除請上 [www.serenehouse.com](http://www.serenehouse.com) 的 Support 專區或請與經銷商聯繫，請勿動手拆解或維修產品。服務專線：(02)77218848

## 產品規格

擴香效果會因空間通風度、溫濕度及空間大小而有所變化。

霧化模式	超音波震蕩
連續使用時間	90mm 香芬霧化機 ≥ 4小時 / 125mm 香芬霧化機 ≥ 7小時
建議使用空間	90mm 香芬霧化機 10~15 平方公尺 / 125mm 香芬霧化機 15~35 平方公尺
頻率	2.45±10%
水槽容量	90mm 香芬霧化機 90ml / 125mm 香芬霧化機 130ml
燈光顏色	七彩
電源輸入	DC 24V
消耗功率	10W
操作模式	連續霧化 ( 可設定 60 / 90 / 120 分鐘 )
配件	變壓器、說明書、保証卡
設計	SERENE HOUSE
中國製造	

## 安全注意事項

為了保障使用安全，請務必遵守以下事項：

- 本使用說明書的注意事項，是為了讓使用者能安全正確的使用本產品，防止對使用者或他人造成危害及財產損失。
- 警告事項均為有關安全方面的重要內容，請務必遵守。

### ! 警告

- 如出現冒煙、異味、雜音等異常現象時，如繼續使用可能會導致火災、觸電等，請立即將適配器由電源插座上取下，停止使用。
- 請勿擅自對本產品進行改造、修理或拆解，否則有可能造成火災、觸電、故障或受傷。
- 主體消耗配件廢棄時，請依照各國指示廢棄。

- 請使用DC24V / 500mA規格之適配器，否則將導致機器故障。  
當機器運作時，適配器會發熱，乃屬正常現象。  
請使用本產品所附的適配器，如使用它牌適配器，有可能會引發機器故障或火災。  
于安裝時請勿接觸適配器，否則有可能造成人員觸電或受傷。  
本產品為長期不使用或移動時，請務必關閉電源並將適配器拔除。請倒掉容器內的水，否則有可能造成產品故障。  
拔下適配器時，請勿扯住電線，必須牢牢地緊握適配器後再進行拔除，否則有可能造成適配器破損或人員受傷。  
請慎防精油沾附於產品外側或傢俱上，若不慎發生，請立即擦拭，以避免產品外觀或傢俱褪色。

- 清潔保養前，請務必先將產品的電源切斷。  
請勿用沾濕的手操作機器與適配器，或讓水與其他液體等沾附、濺灑到上面，以免造成人員觸電或受傷。  
當電源線或插頭破損時，請勿使用，否則有可能導致機器短路、故障。  
當產品摔落或受到撞擊造成受損或破裂時，請勿使用，否則有可能導致機器短路、故障。  
請勿將電源線過度彎折，加熱或讓重物放置上面，否則有可能引起火災或故障。  
請勿故意將窗口鼻靠近出霧口所排出的香氛霧氣，否則有可能造成身體不適。  
請勿讓幼童獨自使用，要放在幼童觸及不到的地方，否則有可能造成受傷，兒童應當受到監督以確保其不會碰觸到機器。  
除非有負責安全的人士給予產品使用的督導和指示，本產品不適合由身體、感官或精神能力欠佳的人士（包括兒童），或缺乏經驗及知識的人士使用。

- 請勿放置在以下地方，否則有可能引起火災、觸電、人員受傷或產品故障：
  - \* 阳光直射的地方或取暖器具旁边。
  - \* 灰尘多的地方。
  - \* 倾斜或晃动等不稳的地方。
  - \* 瓦斯炉旁或有油烟的地方等。
  - \* 环境温度 40°C 以上的地點，并远离火源。
  - \* 电器产品（电视机、音箱设备、电冰箱等）的上面或旁边。
  - \* 请勿放置于地毯等柔软的地方，否则会堵塞底部的进气口，造成机器无法正常运作。
  - \* 产品使用过程中，请勿在电源尚未关闭前打开上盖，或将手或异物等放到水槽内，否则有可能造成机器漏水、故障或人员受伤。

## 障礙排除

當機器疑似故障時，請在委託維修前確認以下事項：

### 機器無法運作

- 適配器未確實插在插座上**
  - 請確認適配器是否正確的安插到插座上。
- 適配器的電源線未正確的接上主體的電源孔**
  - 請確認適配器的電源線是否正確的接上主體的電源孔。
- 電源已正確接上，但仍然不會運作**
  - 請先確認水槽是否有水，然後再確認電源開關是否開啟。或確認是否超過安全水位 ( MAX )，如超出，請將超出水量倒出水槽外。

### 無法霧化或霧化效果不佳

- 水溫太低**
  - 請使用溫度在25°C到40°C的自來水或礦泉水。
- 使用了純水或蒸餾水**
  - 請使用自來水或礦泉水（某些地區的水質容易造成水垢，請將水過濾後再使用）。
- 霧化器髒污**
  - 請依照本說明書的「清潔保養」方法進行保養。
- 機器放置在地毯等柔軟物體上，或者使用場所的風量過大**
  - 請在水平、平穩及風量小的場所使用。
- 水槽內水位超過水位上限 ( MAX )**
  - 請將多餘的清水倒掉。
- 上蓋未確實與主體蓋緊**
  - 請依照本說明書的「使用說明」步驟重新蓋緊上蓋。

其它障礙排除請上 [www.serenehouse.com.cn](http://www.serenehouse.com.cn) 的 Support 專區或請與經銷商聯繫，請勿動手拆解或維修產品。

## 产品規格

扩香效果会因空间通风度、温湿度及空间大小而有所变化。

雾化模式	超音波震荡
连续使用时间	90mm 香芬雾化机 ≥ 4 小时 / 125mm 香芬雾化机 ≥ 7 小时
建议使用空间	90mm 香芬雾化机 10~15 平方公尺 / 125mm 香芬雾化机 15~35 平方公尺
频率	2.45±10%
水槽容量	90mm 香芬雾化机 90ml / 125mm 香芬雾化机 130ml
灯光颜色	七彩
电源输入	DC24V
消耗功率	10W
操作模式	连续雾化 ( 可设定 60 / 90 / 120 分钟 )
配件	适配器、说明书、保修卡
设计	SERENE HOUSE
中国制造	

## Limited warranty

This product is warranted against defective materials and workmanship. Warranty period is one (1) year from the original purchase. Any defective part will be replaced at no charge if it has not been tampered with and appliance has been used according to our printed instructions. This product warranty does not cover damages caused by