




**Aroma Diffuser**  
(With Intermittent Mode)

Instruction Manual

**Product & Accessories**

• Please check to ensure the following items are present and inspect for damage before use.

- |                    |                                |                        |                     |
|--------------------|--------------------------------|------------------------|---------------------|
| ① Mist Nozzle      | ② Cover                        | ③ Control panel        | ④ Timer indicator   |
| ⑤ Power (ON / OFF) | ⑥ Power light                  | ⑦ Light / Timer button | ⑧ Main unit         |
| ⑨ Power jack       | ⑩ Lid                          | ⑪ Vent                 | ⑫ Atomizer          |
| ⑬ Water tank       | ⑭ MAX-water mark level (250ml) | ⑮ USB power cord       | ⑯ Ventilation inlet |

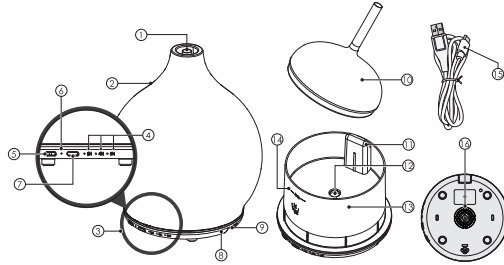

[The image is for reference only. Actual product may vary.]


**Operating Instructions**

• Always place your aroma diffuser on a firm, flat and level surface.  
• Condensation may occur around the aroma diffuser when operating in high humidity environment.

1  Lift the cover upward, then open the lid.	2  Fill water tank up to or below maximum (MAX) water mark level. Never add water into the vent hole.
3  Add 5-10 drops of SERENE HOUSE Essential Oil into the water tank.	4  Follow the indicated direction to reinstall the lid and cover securely.
5  Plug in the USB cable and press the power button. The power and ambient lights turn on, starting Continuous Mist Mode. Press again to turn off.	6  When on, hold the power button 2 sec to switch to Intermittent Mist Mode (30s ON / 30s OFF, repeating). The power light pulses. Hold again to return to Continuous Mode.

**Light Button Settings**

- After powering on, lights auto-cycle through 7 colors (Warm White / Green / Blue / Red / Yellow / Purple / White).
- Press the light button to select a single color.
- Press repeatedly to turn off after cycling all colors.

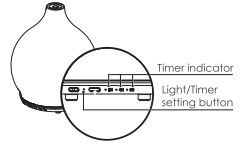

**Timer Mode Settings**

- Timer works in Continuous and Intermittent mist modes.
- While running, hold the timer button 2 sec to enable timer (indicator flashes).
- Press to choose 1H / 4H / 8H / Off. Stops flashing after 1 sec to confirm.
- Repeat to adjust settings.
- Auto power-off when water is low.


**Cleaning & Maintenance**

- Always disconnect the power cord from the electrical outlet before cleaning.
- For best atomizing performance, be sure to clean the aroma diffuser after each use.
- Remove the lid, empty the water from the tank, add a small add a small amount of warm water (do not exceed 40°C/104°F), and a few drops of neutral cleanser. Use a cotton swab to clean the atomizer and internal surface of the water tank. Gently rinse all the soap out of the water tank after washing.
- Never use acidic cleansers as this may cause malfunction.
- Be careful to not allow water to enter the vent, the ventilation inlet and the buttons.
- If water accidentally flows into the ventilation inlet, vent or control buttons, allow internal mechanism to dry thoroughly (at least 6 hours) before the next use, otherwise this may cause the device to malfunction.

**產品與配件介紹**

• 使用前，請確認以下物品是否齊全，有無破損情況。

- |        |                       |              |           |
|--------|-----------------------|--------------|-----------|
| ① 噴霧口  | ② 上蓋                  | ③ 控制面板       | ④ 時間模式指示燈 |
| ⑤ 電源開關 | ⑥ 電源指示燈               | ⑦ 燈光/定時模式設定鍵 | ⑧ 主體      |
| ⑨ 電源孔  | ⑩ 水槽上蓋                | ⑪ 出風口        | ⑫ 霧化器     |
| ⑬ 水槽   | ⑭ 最高水位線 - MAX (250ml) | ⑮ USB-C線     | ⑯ 進氣口     |

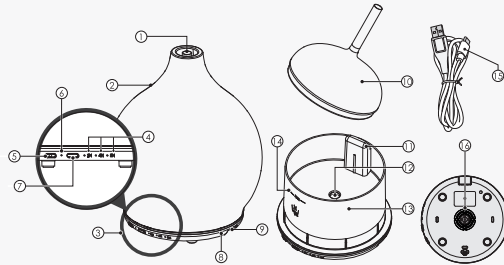

[圖片僅供參考，請以實品為主。]

**使用說明與相關注意事項**

• 請在穩固、平坦、水平的地方使用本產品。  
• 若室內環境溫度較高，在使用香氣霧化機時，易在機器周圍產生水氣。

1  請將上蓋往上取下，再將水槽上蓋打開。	2  將水緩慢注入水槽，為防止機器受損，請勿超過最高水位線，並避免讓水流入出風口，並請將水槽外多餘水分擦拭乾淨。
3  滴入 SERENE HOUSE 精油於水槽內約5-10滴（依個人喜好調整）。	4  請依指示方向依序將水槽上蓋和上蓋裝回蓋緊。
5  將變壓器接頭插入主體上的電源孔，連接電源並按下電源開關，電源指示燈與情境燈亮起，即啟動連續霧化模式。	6  機器開啟時，長按電源開關2秒可切換為間歇霧化模式（30秒開30秒關，重複循環），電源指示燈呼吸閃爍，再次長按電源開關，則在切換為連續霧化模式。

**燈光按鍵設定**

- 按下電源開關後，機器將自動循環七彩情境燈（暖白光、綠光、藍光、紅光、黃光、紫光和白光）。
- 若要切換為單色情境燈，請再按燈光模式設定鍵，直到喜愛的顏色出現即可。
- 使用中如欲關閉情境燈，請重複按燈光模式設定鍵至七彩情境燈輪替顯示完畢為止。



**時間模式設定**

- 無論是在「連續霧化模式」或「間歇霧化模式」下，皆可使用定時功能。
- 當機器運行時，長按定時模式設定鍵2秒，以啟動定時設定，時間模式指示燈將閃爍。
- 在時間模式指示燈閃爍時，可按下定時模式設定鍵，依序選擇1小時、4小時、8小時或關閉定時，時間模式指示燈會隨著所選的時間閃爍不同燈色，超過3秒不再按鍵，則定時設定完成，時間模式指示燈恆亮。
- 若欲更改定時設定，請重複上述2-3點步驟調整。
- 為確保使用安全，當水槽中水量不足時，機器將自動斷電。

**清潔保養**

- 在清潔保養之前，電器必須切斷電源，務必拔除電源線及移除主體上的電源線接頭。
- 建議每次使用完畢即進行清潔保養，以確保機器正常運作。
- 打開水槽上蓋，淨空水槽，於水槽內加入適量溫水（水溫勿超過40°C）並滴入少許中性清潔劑，使用乾淨棉棒輕拭水槽內部及霧化器表面，待清洗完畢後以乾淨的布將機器擦乾即可。
- 請勿使用酸性清潔劑，否則有可能導致機器損壞。
- 請預防進氣口、出風口或按鍵開關部位進水導致機器故障。
- 若水不慎進入機器主體，請靜置至少6小時，待機器完全乾燥後，方可使用。




**香氣霧化機**  
(連續 / 間歇功能)

操作使用說明書

**产品与配件介绍**

• 使用前，请确认以下物品是否齐全，有无损情况。

- |        |                       |              |           |
|--------|-----------------------|--------------|-----------|
| ① 喷雾口  | ② 上盖                  | ③ 控制台        | ④ 时间模式指示灯 |
| ⑤ 电源开关 | ⑥ 电源指示灯               | ⑦ 灯光/定时模式设定键 | ⑧ 主体      |
| ⑨ 电源孔  | ⑩ 水槽上盖                | ⑪ 出风口        | ⑫ 雾化器     |
| ⑬ 水槽   | ⑭ 最高水位线 - MAX (250ml) | ⑮ USB-C线     | ⑯ 进气口     |

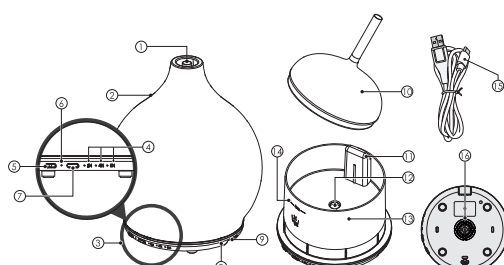

[圖片僅供參考，請以實品為主。]

**使用说明与相关注意事项**

• 请稳定、平坦、水平的地方使用本产品。  
• 若室内环境温度较高，在使用香气雾化机时，易在机器周围产生水气。

1  請將上蓋往上取下，再將水槽上蓋打開。	2  將水緩慢注入水槽，為防止機器受損，請勿超過最高水位線，並避免讓水流入出風口，並請將水槽外多餘水分擦拭乾淨。
3  滴入 SERENE HOUSE 精油於水槽內約5-10滴（依個人喜好調整）。	4  請依指示方向依序將水槽上蓋和上蓋裝回蓋緊。
5  將適配器接頭插入主體上的電源孔，連接電源並按下電源開關，電源指示燈與情境燈亮起，即啟動連續霧化模式。	6  機器開啟時，長按電源開關2秒可切換為間歇霧化模式（30秒開30秒關，重複循環），電源指示燈呼吸閃爍，再次長按電源開關，則在切換為連續霧化模式。

**灯光模式设定**

- 按下电源开关后，机器将自动循环七彩情境灯（暖白光、绿光、蓝光、红光、黄光、紫光和白光）。
- 若要切换为单色情境灯，请再按灯光模式设定键，直到喜愛的顏色出現即可。
- 使用中如欲關閉情境燈，請重複按燈光模式設定鍵至七彩情境燈輪替顯示完畢為止。



**时间模式设定**

- 无论是在「连续雾化模式」或「间歇雾化模式」下，皆可使用定功能。
- 当机器运行时，长按定模式设置键2秒，以启动定设置，时间模式指示灯将闪烁。
- 在时间模式指示灯闪烁时，可按下定模式设置键，依序选择1小时、4小时、8小时或关闭定，时间模式指示灯会随着所选的时间闪烁不同灯色，超过3秒不再按键，则定设置完成，时间模式指示灯恒亮。
- 若欲更改定设置，请重复上述2-3点步骤调整。
- 为保使用安全，当水槽中水量不足时，机器将自动断电。

**清洁保养**

- 在清洁保养之前，电器必须切断电源，务必拔除适配器及移除主体上的适配器电源线接头。
- 建议每次使用完毕即进行清洁保养，以确保机器正常运作。
- 打开水槽上盖，净空水槽，于水槽内加入适量温水（水温勿超过40°C）并滴入少许中性清洁剂，使用干净棉棒轻拭水槽内部及雾化器表面，待清洗完毕后以干净的布将机器擦干即可。
- 请勿使用酸性清洁剂，否则有可能导致机器损坏。
- 请预防进气口、出风口或按键开关部位进水导致机器故障。
- 若水不慎进入机器主体，请静置至少6小时，待机器完全干后，方可使用。



**香氣霧化機**  
(連續 / 間歇功能)

操作使用說明書

